


GUTROOF

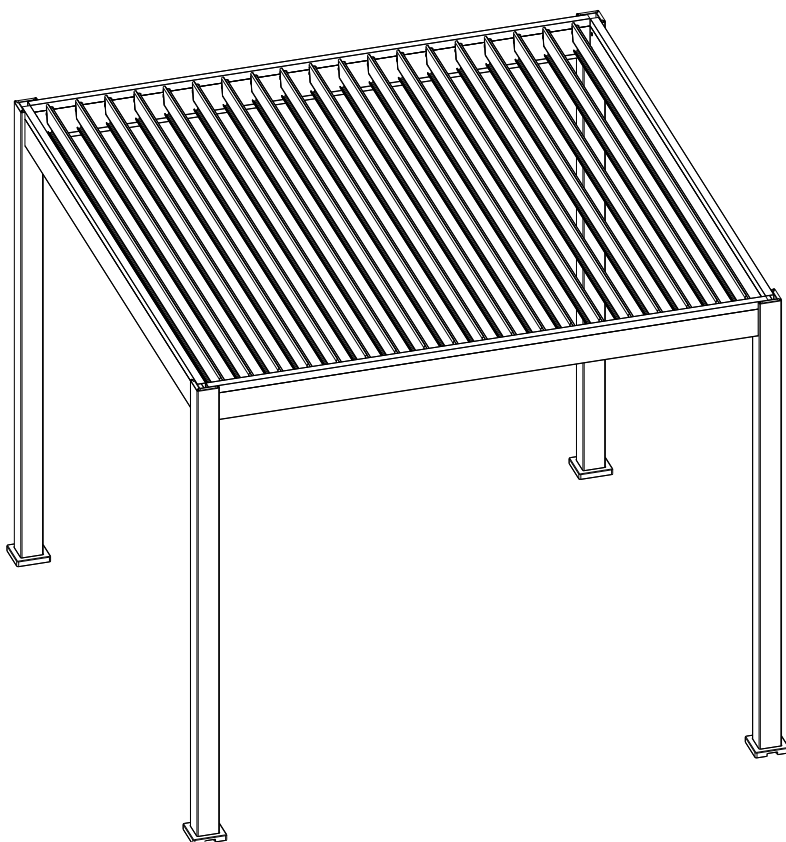


ELEGANCE AUTOMATIC+LED

3x3 PERGOLA TARASOWA

INSTRUKCJA MONTAŻU

Dziękujemy za zakup naszej pergoli.

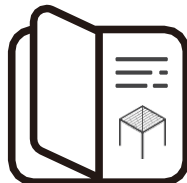

Instrukcja

Ten przewodnik zawiera instrukcje krok po kroku dotyczące montażu i pielęgnacji pergoli, zapewniając jej trwałość i niezawodne użytkowanie przez wiele lat. Należy dokładnie wykonać wszystkie kroki, ponieważ nieprawidłowa instalacja może spowodować poważne obrażenia.

WAŻNE:

Uwaga: Instrukcje dotyczące bezpieczeństwa

Ze względu na bezpieczeństwo osób należy bezwzględnie przestrzegać tych wytycznych. Należy zachować je na przyszłość

Używanie przez dzieci oraz osoby o ograniczonych zdolnościach fizycznych, sensorycznych lub umysłowych lub osoby bez doświadczenia i wiedzy możliwe jest pod warunkiem, że otrzymały one odpowiedni nadzór lub też instrukcje dotyczące bezpiecznego korzystania z pergoli i są świadome potencjalnych zagrożeń.

Dzieci nie powinny bawić się pilotem ani elementami pergoli.

Czynności związane z czyszczeniem i konserwacją powinny być przeprowadzane, kiedy dzieci są pod nadzorem.

Ta pergola została zaprojektowana do użytku na zewnątrz budynków, zapewniając ochronę przed bezpośrednim działaniem promieni słonecznych, oślepiającym światłem i wysoką temperaturą.

Każde użycie lub modyfikacja nieopisane w niniejszej instrukcji są uważane za niewłaściwe i mogą stanowić poważne zagrożenie zarówno dla użytkowników, jak i mienia.

Działania te spowodują unieważnienie gwarancji na produkt.

KONSERWACJA:

Warunki atmosferyczne takie jak wysoka wilgotność mogą znacząco wpływać na żywotność materiału. Regularne czyszczenie i kontrola stanu powłok są kluczowe dla zachowania trwałości i funkcjonalności aluminiowych konstrukcji.

PRZED INSTALACJĄ

PRZYGOTOWAĆ WSZYSTKIE NIEZBĘDNE NARZĘDZIA

Aby prawidłowo i bezpiecznie zmontować pergolę, należy upewnić się, że mają Państwo pod ręką poniższe narzędzia i akcesoria, ponieważ nie są one zawarte.

 2 drabiny stopniowe	 Rękawice ochronne	 Zestaw kluczy sześciokątnych / kluczy płaskich	 Śrubokręt krzyżakowy	 Młotek	 Taśma miernicza	 Kask	 Przecinak do pudełek	 Wiertarka udarowa	 Poziomica	 Wkrętarka akumulatorowa	 Nożyczki
--	--	---	---	---	--	---	---	--	--	--	---

SPRAWDZIĆ, CZY NIE BRAKUJE CZĘŚCI:

 
 
 
 
 

Przed rozpoczęciem instalacji należy sprawdzić, czy posiadają Państwo wszystkie części niezbędne do montażu pergoli. Proszę dokładnie sprawdzić, czy ilość części odpowiada zakupionemu modelowi.

Jeśli brakuje jakichkolwiek części, proszę skontaktować się z działem obsługi klienta przed przystąpieniem do instalacji.

PRZYGOTOWAĆ CZĘŚCI DO KAŻDEGO KROKU:

W punkcie Montaż, każdy krok określa potrzebne części i ich ilości. Zalecamy wcześniejsze zebranie niezbędnych części dla każdego kroku. Pozwoli to zaoszczędzić czas i usprawni proces montażu. Aby uniknąć uszkodzenia pomalowanych powierzchni, należy umieścić części na kartonie lub innej miękkiej powierzchni, jeśli to możliwe.

WYBRAĆ ODPOWIEDNIĄ LOKALIZACJĘ:

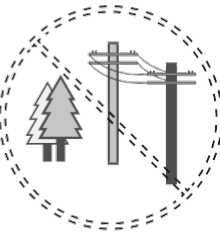 	 			
Podłoże powinno być twarde i równe.	Podłoże musi być płaskie i jednolite.	Upewnij się, że jest zapewniony odpowiedni odpływ wody.	Upewnij się, że w danym miejscu jest łatwy dostęp do zasilania.	Unikaj obszarów z wystającymi elementami.

UWAGA:

Wiele tarasów lub patio jest zbudowanych z lekkim nachyleniem, aby skierować wodę deszczową z dala od domu lub innych konstrukcji. Do prawidłowego montażu pergoli wymagana jest całkowicie równa powierzchnia. Małe kamyki lub nierówne podłoże mogą uniemożliwić bezpieczne zakotwiczenie pergoli.

Jeśli pergola zostanie zainstalowana na nierównej powierzchni, może to wpłynąć na działanie komponentów akcesoriów i spowodować utratę gwarancji na produkt. Może być również konieczne dostosowanie wysokości słupków w celu prawidłowej instalacji.

PRZYGOTOWAĆ PODŁOŻE:

Aby przygotować podłoże, proszę upewnić się, że:

Sprawdzić, czy pod ziemią nie ma rur i kabli (przed rozpoczęciem kopania należy skontaktować się z lokalnymi władzami).





Proszę sprawdzić u lokalnych władz, czy wymagane są jakiekolwiek pozwolenia na budowę.

W przypadku wyboru betonowej podstawy należy skonsultować się z renomowanym wykonawcą.

WAŻNE ZASADY BEZPIECZEŃSTWA

Aby zapewnić bezpieczeństwo wszystkich osób zaangażowanych w instalację i użytkowanie pergoli, konieczne jest przestrzeganie poniższych wytycznych dotyczących bezpieczeństwa.


	Pergola musi być umieszczona i zabezpieczona na płaskiej, równej powierzchni.		Proszę zawsze nosić odpowiednie obuwie robocze, rękawice i ochronę oczu podczas montażu.
	Podczas korzystania z elektronarzędzi lub drabiny należy zawsze przestrzegać instrukcji bezpieczeństwa producenta.		Proszę zawsze nosić odzież ochronną, aby zminimalizować ryzyko obrażeń w razie upadku.
	Proszę upewnić się, że pergola spełnia lokalne przepisy i normy budowlane.		Nie wchodzić na listwy.
	Używać wyłącznie drabin i rusztowań, które są w stanie utrzymać wymagany ciężar.		Przed każdym użyciem sprawdź pergolę pod kątem uszkodzeń. W przypadku wykrycia uszkodzenia natychmiast należy zaprzestać korzystania z urządzenia i skontaktować się z autoryzowanym personelem w celu jego naprawy.
	Przed instalacją dysku należy usunąć nadmiar kabli i odłączyć wszelkie zbędne urządzenia.		Aby uniknąć uszkodzeń, należy ustawić listwy w pozycji pionowej podczas opadów śniegu lub wietrznej pogody.
	Niebezpieczne ruchome części, które stwarzają zagrożenie, powinny być zainstalowane ponad 2,5 metra nad podłogą lub jakąkolwiek powierzchnią, która może umożliwić do nich dostęp.		Zawsze należy używać części zamiennych zatwierdzonych przez producenta.
	Aby uniknąć uszkodzenia pergoli, należy często usuwać liście lub ciała obce znajdujące się na listwach i przewodnikach.		Tylko certyfikowany personel jest upoważniony do wykonywania instalacji elektrycznych, zgodnie z odpowiednimi przepisami.
	Odłączyć wszystkie połączenia elektryczne od sieci elektrycznej przed instalacją.		Obsługiwać pergolę zdalnie tylko wtedy, gdy wyraźnie widać ruchome części.
	Tylko licencjonowany elektryk powinien instalować źródła zasilania pergoli elektrycznych.		Jeśli silnik przechodzi powtarzające się cykle otwarcia-zamknięcia, może przejść w tryb ochrony przed przegrzaniem i powrócić do normalnego stanu po ostygnięciu.
	Dzieci i zwierzęta należy trzymać z dala od miejsca montażu do czasu jego całkowitego zakończenia.		Wszystkie plastikowe torby należy utylizować w odpowiedzialny sposób i przechowywać w miejscu niedostępnym dla dzieci.
	Zachowaj bezpieczną odległość od linii energetycznych, szczególnie podczas pracy z metalowymi częściami.		Należy unikać montażu pergoli w wietrznych lub wilgotnych warunkach.
	W przypadku uszkodzenia przewodu zasilającego, jego wymiany powinien dokonać wyłącznie producent, przedstawiciel serwisu lub podobnie wykwalifikowany personel.		Pod pergolą lub w jej pobliżu nie należy przechowywać gorących przedmiotów, takich jak niedawno używane grille lub lampy lutownicze.

    	Aby zapobiec uszkodzeniu napędu żaluzji, nie należy obsługiwać mechanizmu dachowego w obecności mrozu lub lodu.		Trzymaj odzież i części ciała z dala od pergoli, aby uniknąć ich wciągnięcia przez ruchome części.
	trzymaj przedmioty z dala od żaluzji.		Zabrania się wieszania przedmiotów na pergoli, ponieważ może to spowodować poważne uszkodzenia.
	Przed wprowadzeniem jakichkolwiek zmian w konstrukcji lub konfiguracji urządzenia należy skonsultować się z producentem lub autoryzowanym przedstawicielem.		Należy trzymać dzieci z dala od stałych elementów sterujących i upewnić się, że piloty zdalnego sterowania znajdują się poza ich zasięgiem.
	Gwarancja zostanie unieważniona, a mechanizm operacyjny może ulec uszkodzeniu w przypadku zainstalowania nieoryginalnych markowych akcesoriów.		




WYMAGANE 2 OSOBY


 
Elektryczny system sterowania znajduje się we wnętrze słupka.






Pręt łączący i szczotka znajdują się we wnętrze belki.

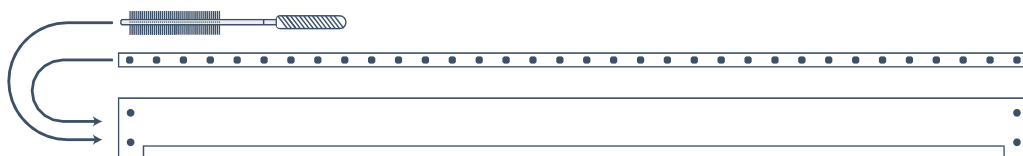



Numer śledzenia produktu znajduje się po wewnętrznej stronie kartonu (patrz poniższy schemat). W celu zapewnienia lepszej i skuteczniejszej obsługi posprzedażowej w przyszłości, po rozebraniu pudełka kartonowego należy zrobić zdjęcie numeru śledzenia i zapisać je.

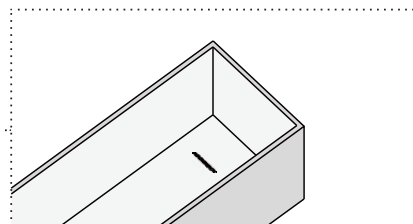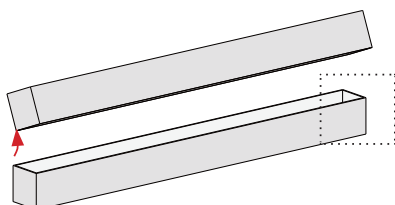


Powierzchnia

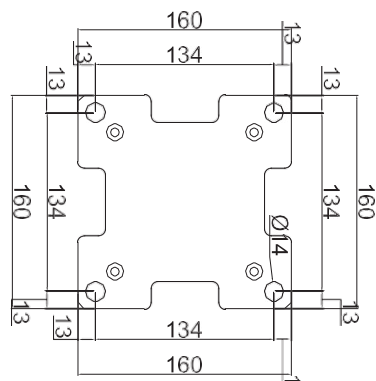
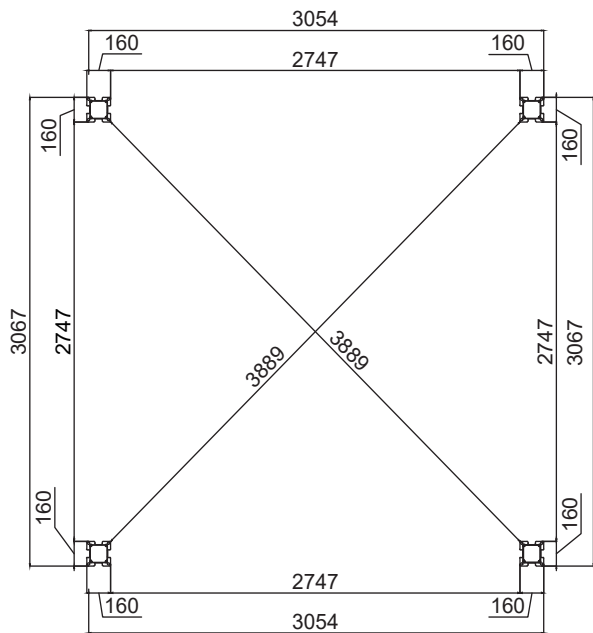
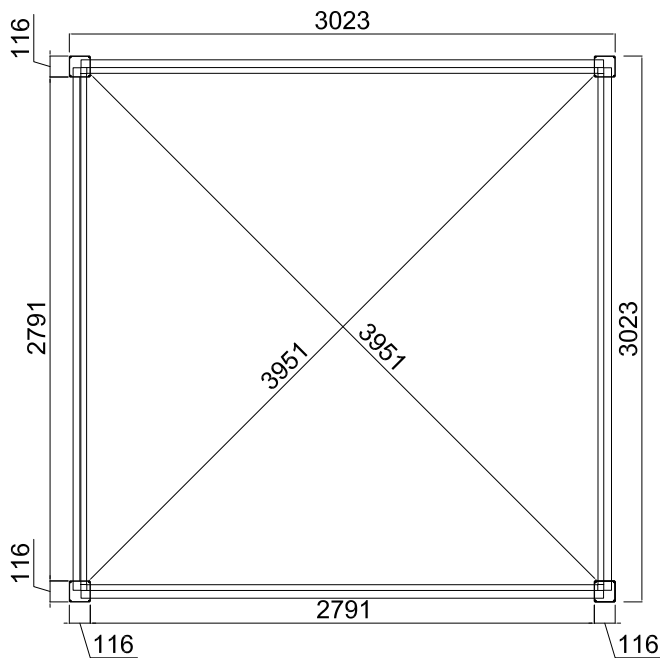


KARTON 1/4

 
 
NR.	Profil	Diagram	Rozmiar	ILOŚĆ
AO			116X116 L=2550mm	2
AO-2			116X116 L=2550mm	2


NR.	Diagram	ILOŚĆ
IO		4
JO		4

 NR.	Diagram	ILOŚĆ
TO	 10×80	16
XO-1	 6×35	16


 
 
 
NR.	Diagram	ILOŚĆ
KO		1
LO		18
LO-1		19
MO		37
QO	 6mm	24
RO		24

NR.	Diagram	ILOŚĆ
SO		38
UO	 lock nut	56
UO-3	 M14	1
WO	 4×16	76
XO	 6×40	37
VO		19

  
NR.	Diagram	ILOŚĆ
ZO-1	 4mm	1
ZO-2	 4mm	1
ZO-3	 6mm	1

 NR.	Diagram	ILOŚĆ
ZO-4	 6mm	1
ZO-5	 10mm	1
ZO-6	 PH2	1

    KARTON 1/4

NR.	Diagram	ILOŚĆ
E-A		1
E-B		1
E-CR		1
E-D		1

 KARTON 2/4

NR.	Profil	Diagram	Rozmiar	ILOŚĆ
B3			75X153 L=2894mm	1
BO-4			75X153 L=2894mm	1
CO-3			75X195 L=2894mm	1
CO-4			75X195 L=2894mm	1
DO			42X54 L=2894mm	2
FO			27X8 L=2744mm	1
NR.	Profil	Diagram	Rozmiar	ILOŚĆ
LED1			69X78 L=2790mm	4

KARTON 3/4


NR.	Profil	Diagram	Rozmiar	ILOŚĆ
GO			166X30 L=2855mm	10


KARTON 4/4

NR.	Profil	Diagram	Rozmiar	ILOŚĆ
GO			166X30 L=2855mm	9


Przed przystąpieniem do montażu pergoli żaluzjowej należy upewnić się, że wszystkie wymienione elementy zostały dostarczone i są w nienaruszonym stanie. Wszelkie braki w częściach należy zgłosić do sprzedawcy.

Nie należy wyrzucać opakowania przed potwierdzeniem, że produkt działa prawidłowo.

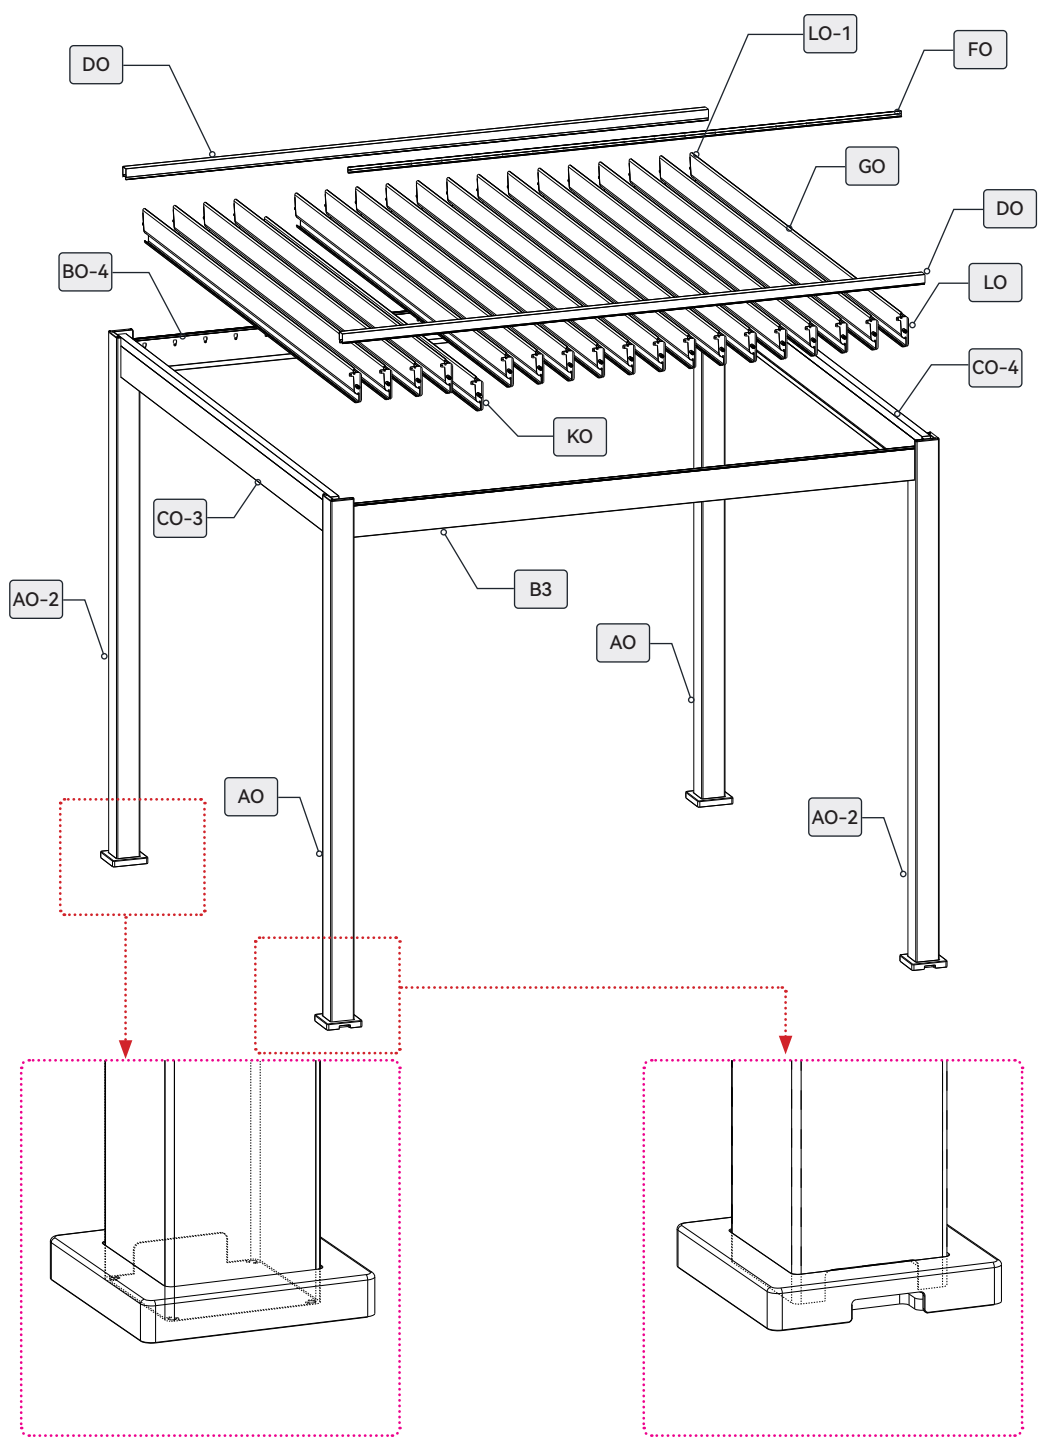




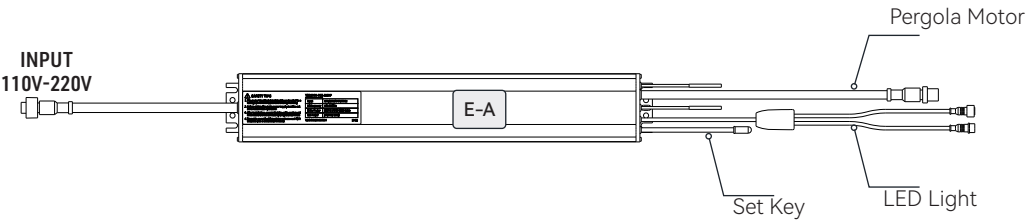


Cable Diagram

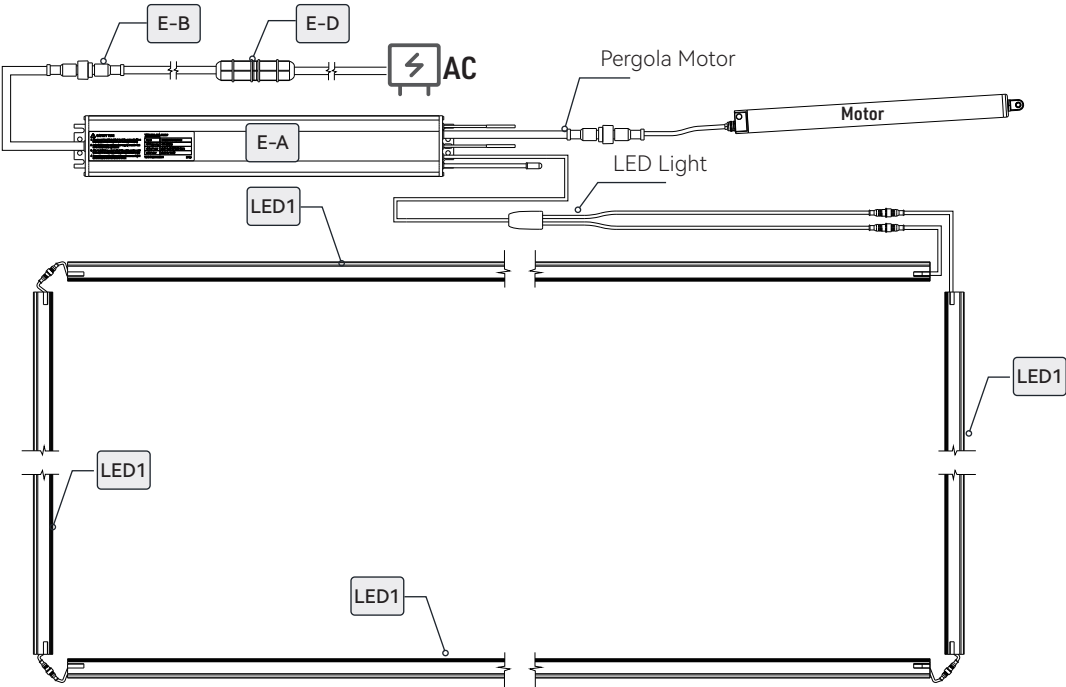

Uwaga:

Kontroler ma być zainstalowany w belce bocznej, z przewodem wejściowym poprowadzonym przez kłonicę i wychodzącym z otworu odwadniającego.

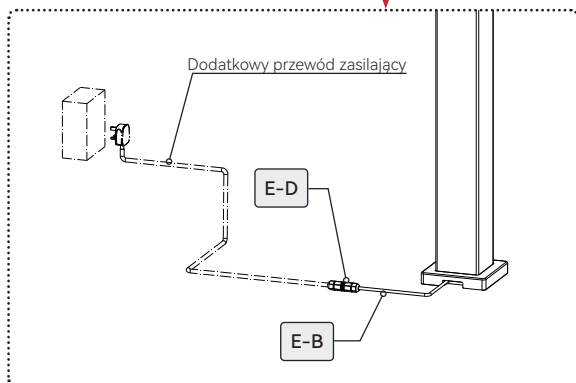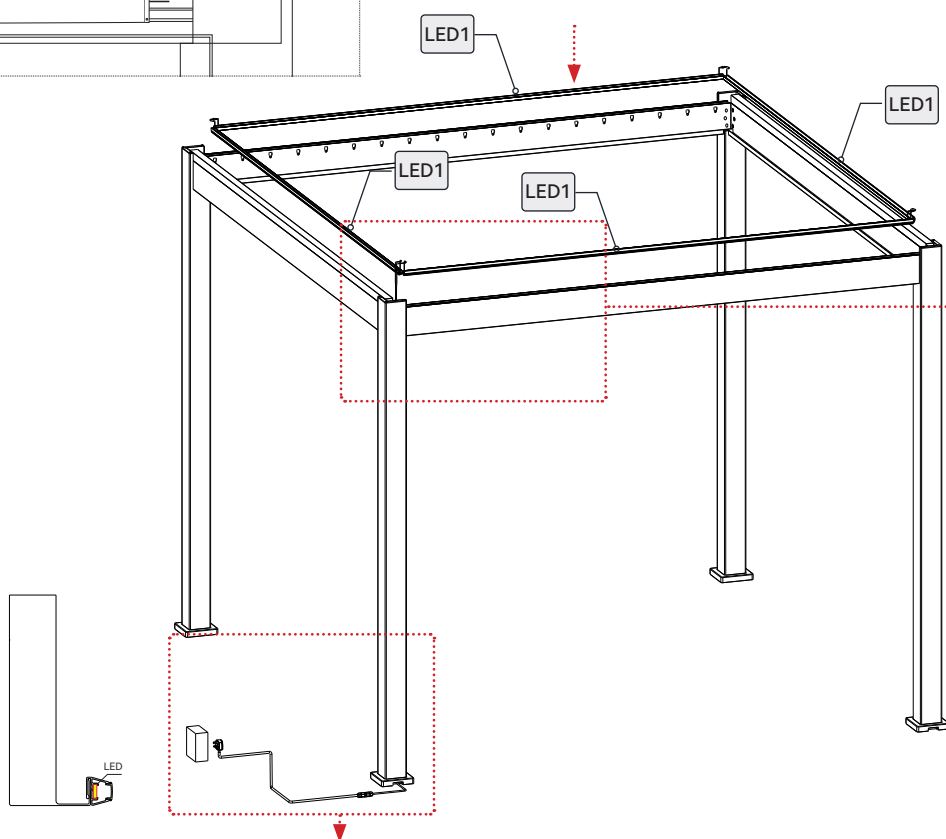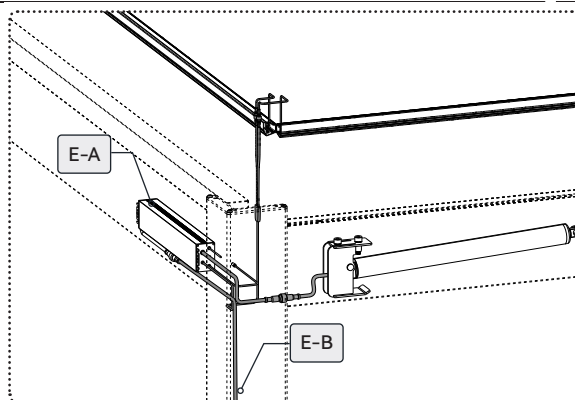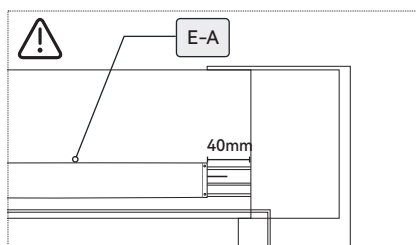

Uwaga:

Należy wybrać odpowiedni przewód zasilający w zależności od kraju i podłączyć go za pomocą wodoodpornego złącza. Kontroler ten może obsługiwać napięcia w zakresie od 110 V do 220 V.



Na wejściu zasilania znajdują się 3 kable, a mianowicie:
Brązowy: FAZOWY
Niebieski: NEUTRALNY
Żółty i zielony: UZIEMIENIE

Zamontować trzpienie pokrywy na dwóch końcach żaluzji.
Uwaga: Aby uniknąć uszkodzenia plastikowych części (MO), podczas korzystania z wiertarki pistoletowej należy zmniejszyć siłę jej skręcania.

KO		1
LO		18
LO-1		19


MO		37
XO	 6x40 4mm	37
UO	 lock nut	37

ZO-1	 4mm
ZO-2	 4mm
ZO-5	 10mm


Uwaga:

Na ilustracji użyto klucza ręcznego, który można zastąpić elektryczną końcówką P.

X18

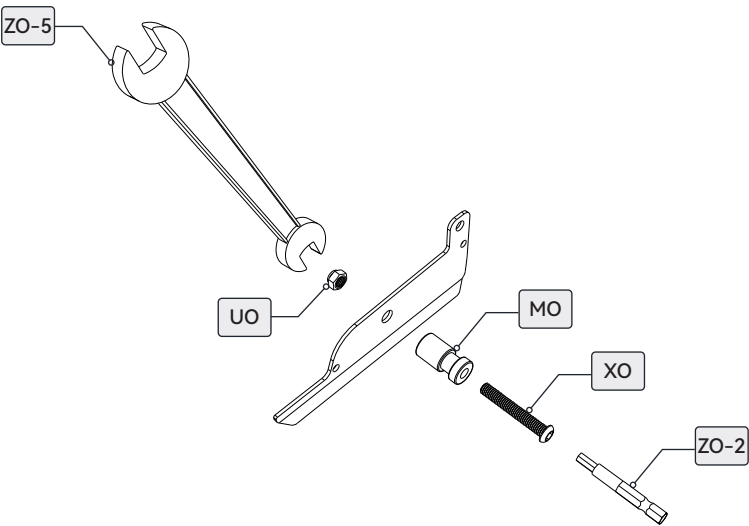

X19

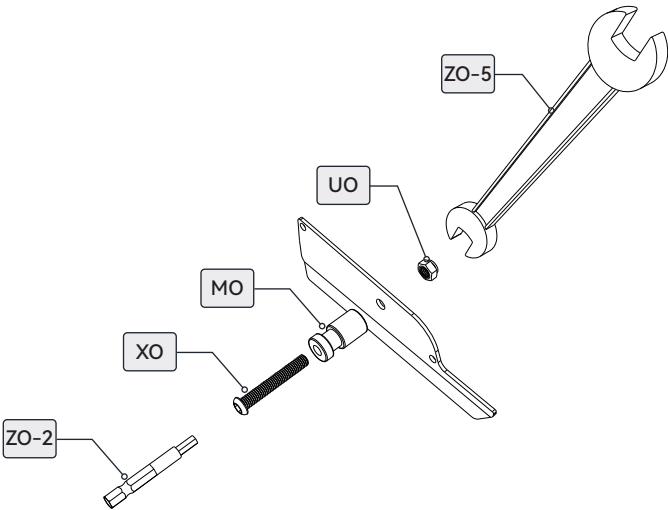

Zamontować osłonę żaluzji na dwóch końcach zainstalowanych żaluzji i żaluzji trzpienia.

GO		19	WO		4x16		76	ZO-6		PH2
----	--	----	----	--	------	--	----	------	--	-----

 
X1


Diagram X1 illustrates the assembly of the GO part. The GO part is shown with LO-1 at the left end and KO at the right end. Below are two detailed views: the left view shows the GO part being attached to a bracket with WO, ZO-6, and LO-1; the right view shows the GO part being attached to a bracket with WO, ZO-6, and KO.

X18

Diagram X18 illustrates the assembly of the GO part. The GO part is shown with LO-1 at the left end and LO at the right end. Below are two detailed views: the left view shows the GO part being attached to a bracket with WO, ZO-6, and LO-1; the right view shows the GO part being attached to a bracket with WO, ZO-6, and LO.

Najpierw należy podłączyć wejście kontrolera do przedłużacza, następnie przełożyć przedłużacz przez stojak i wyjąć go z otworu odpływowego, aby zapobiec zakłóceniom podczas późniejszej instalacji płyty bazowej.


E-A		1
E-B		1

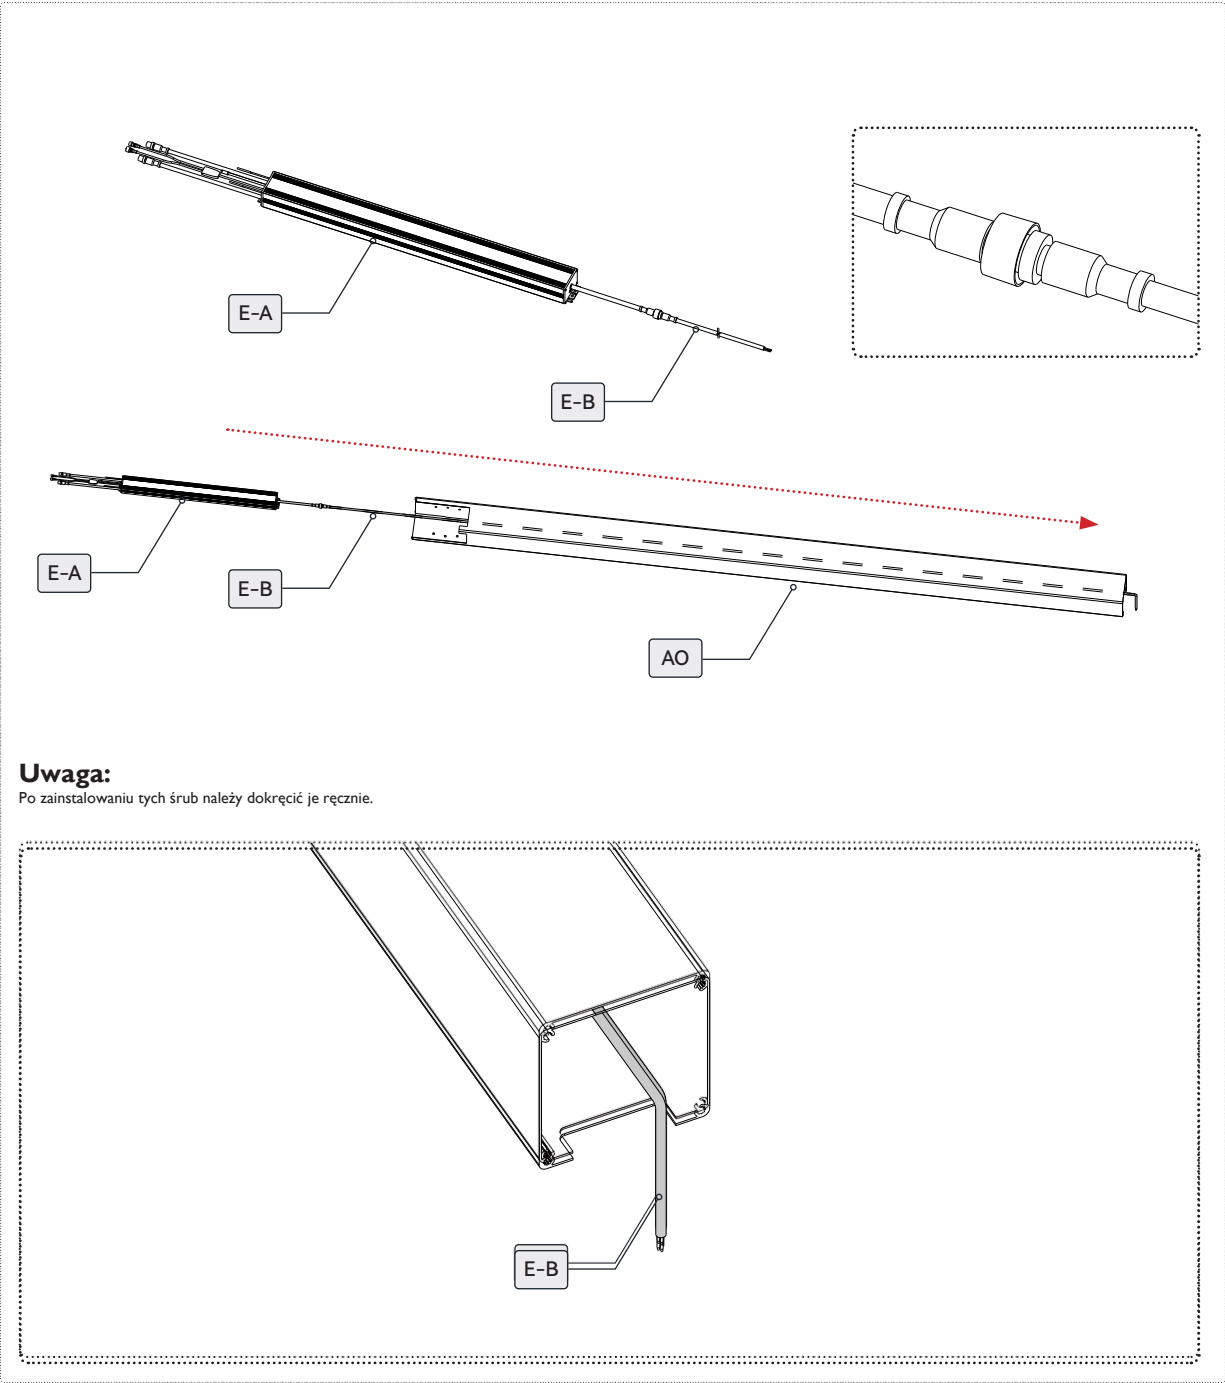

Uwaga:
Po zainstalowaniu tych śrub należy dokręcić je ręcznie.


1. W pierwszej kolejności należy zamontować osłonę słupka
2. Upewnić się, że wylot osłony i słupek znajdują się po tej samej stronie.

AO		2	IO		4	XO-1		16	ZO-1	
AO-2		2	JO		4				ZO-2	


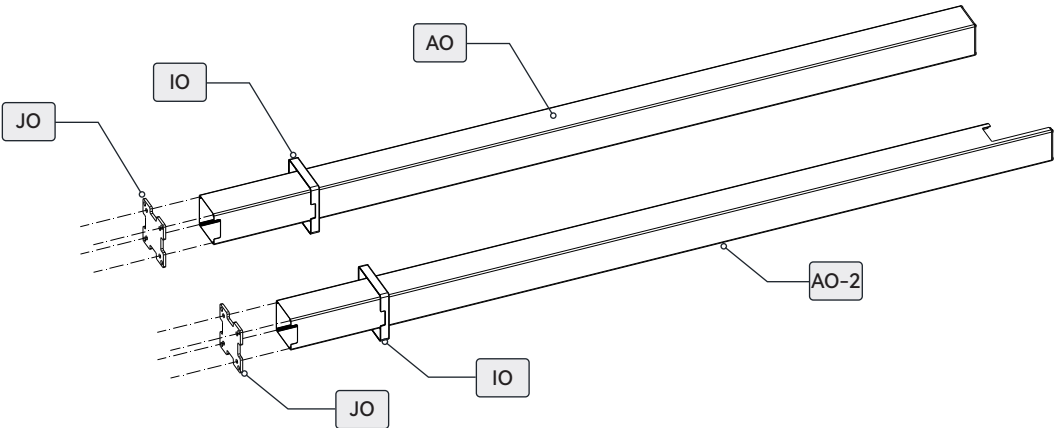


Uwaga:


Po zainstalowaniu tych śrub należy dokręcić je ręcznie.





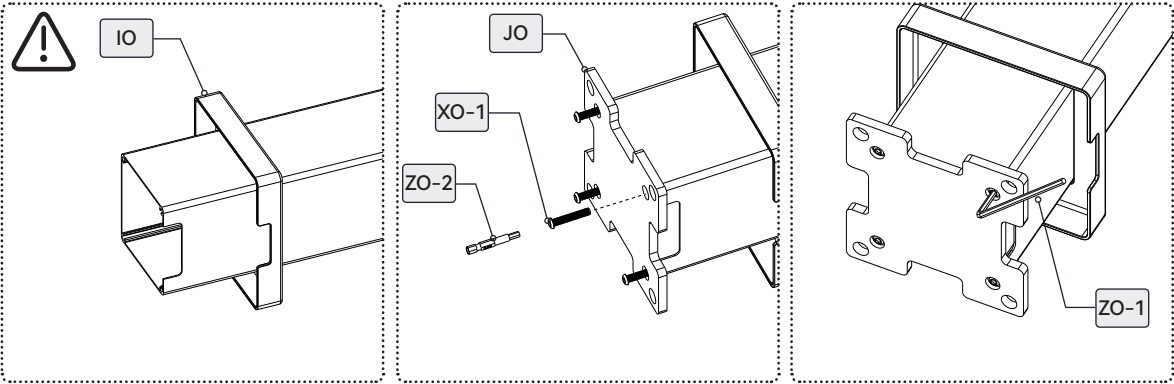


 Wyciągnąć odpowiednie kable wyjściowe kontrolera, aby ułatwić późniejszą instalację.

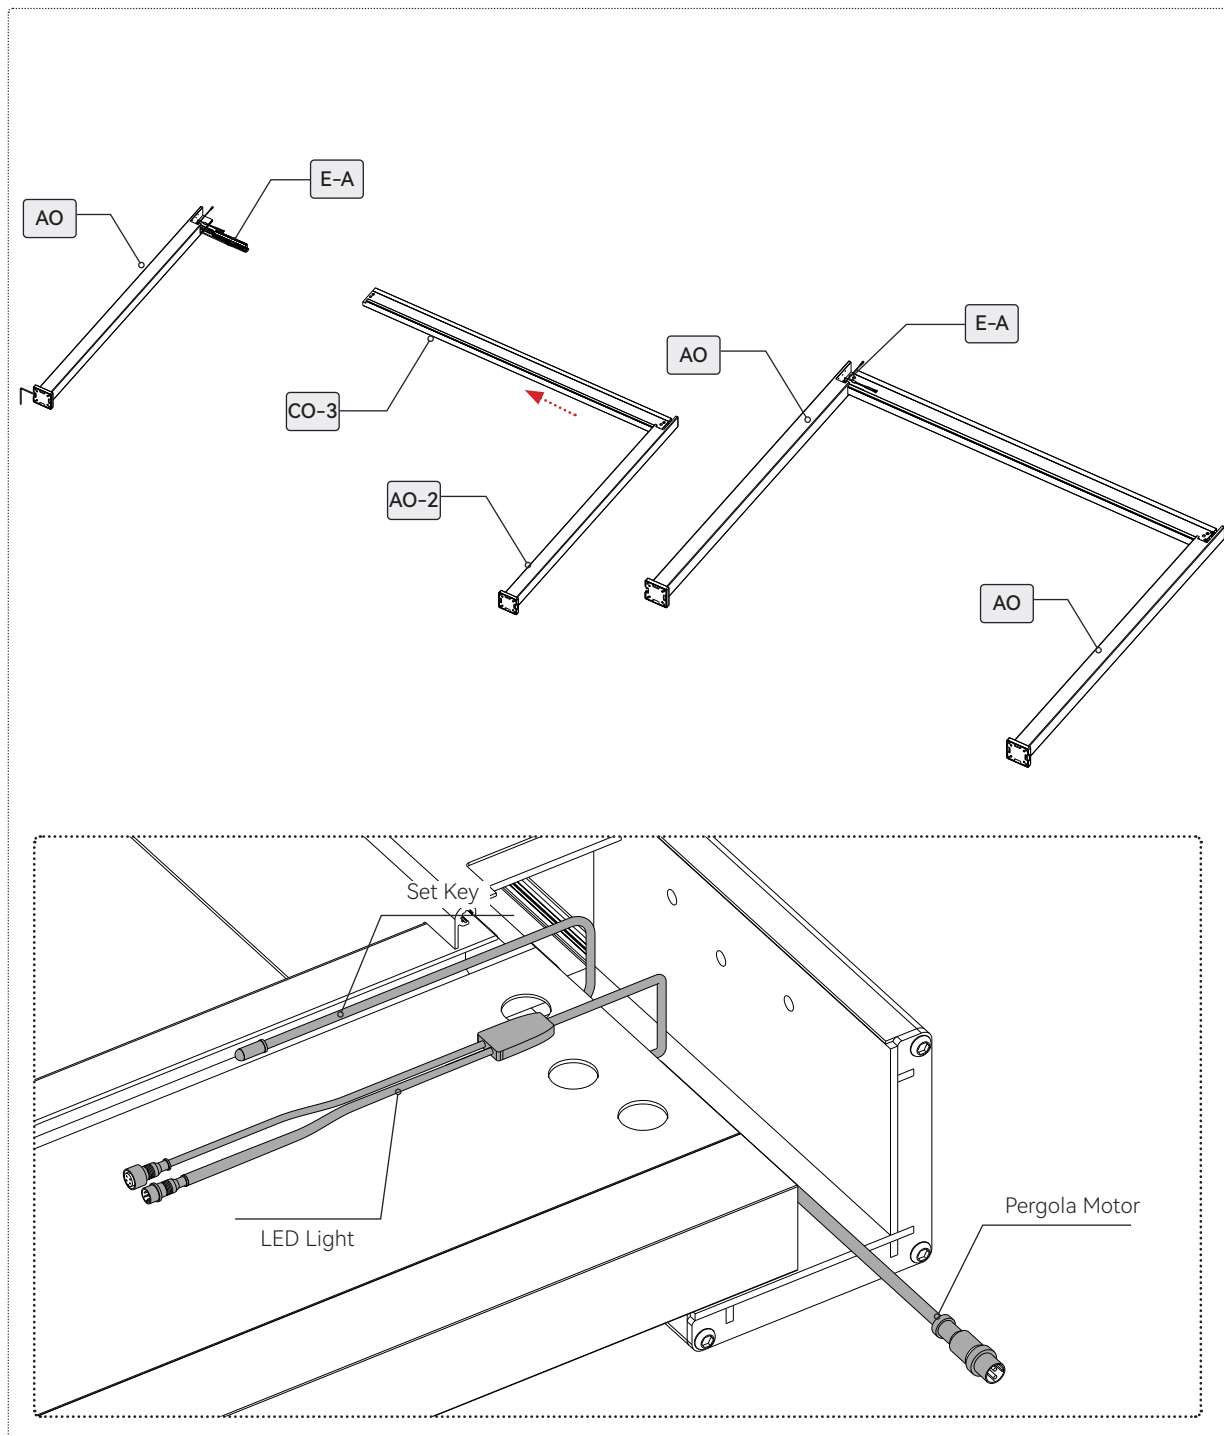





Zamontować śruby belek bocznych.

 CO-4		1	QO			12	ZO-3		6mm
							ZO-4		6mm

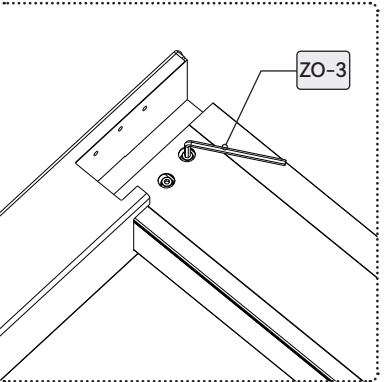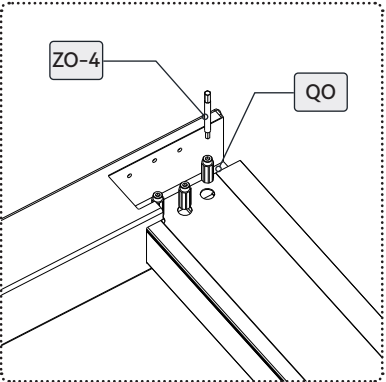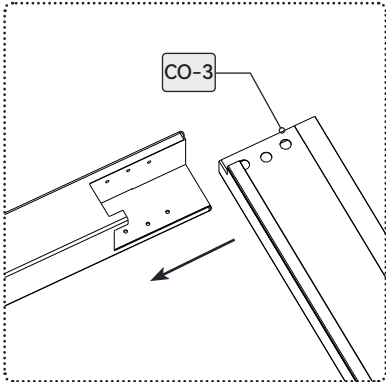
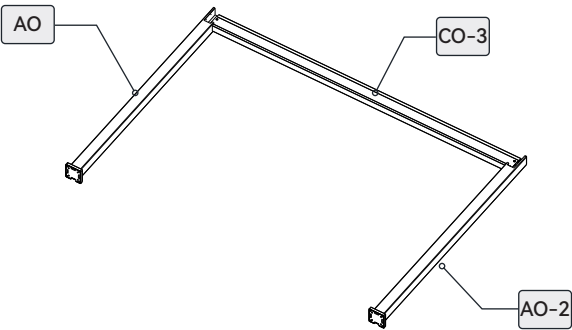
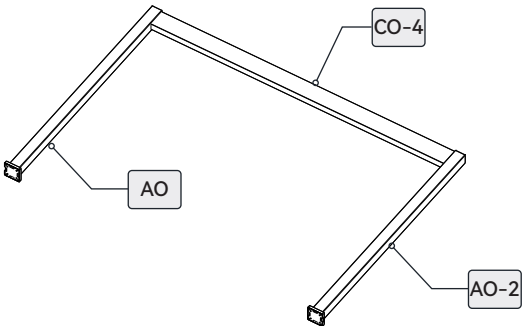


 Najpierw należy ustawić belkę pomocniczą, a następnie belkę główną, zwracając uwagę na kabel połączeniowy silnika na belce głównej. Następnie należy podłączyć kabel silnika od kontrolera do silnika.

B3		1	QO			12	ZO-3		6mm
BO-4		1					ZO-4		6mm




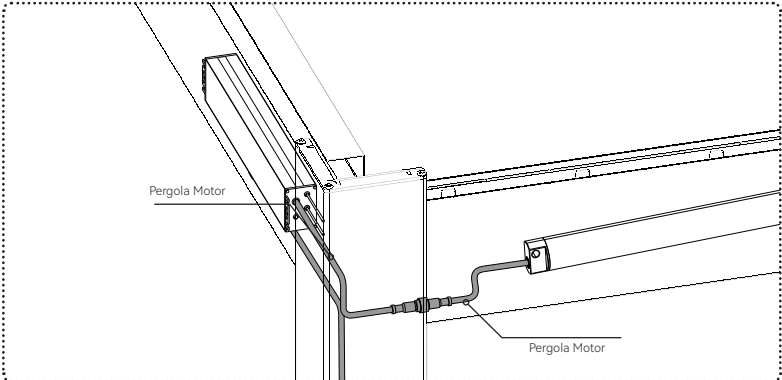
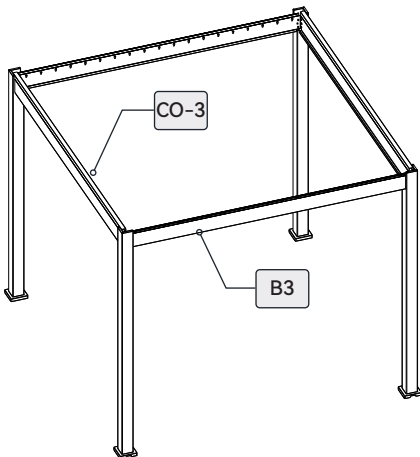
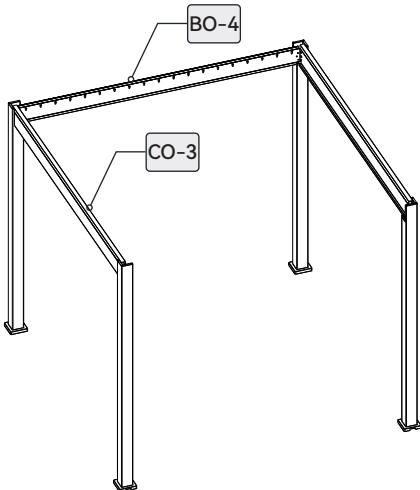


Uwaga:
Po zainstalowaniu tych śrub należy dokręcić je ręcznie.

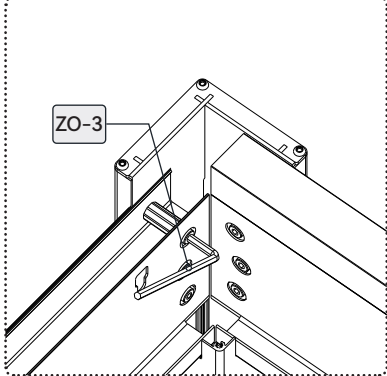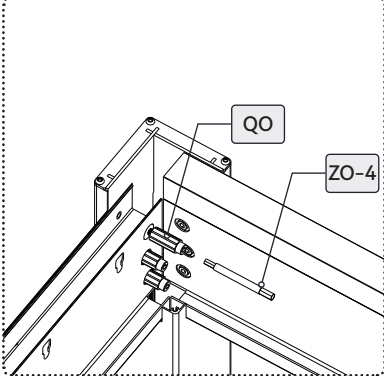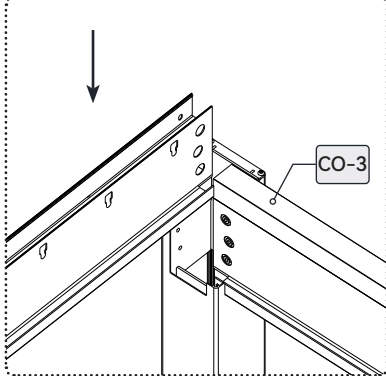



1. Sprawdź wymiary zgodnie z przedstawionymi na rysunku.
2. Użyj poziomicy, aby upewnić się, że wszystkie belki są wypoziomowane, a słupy są ustawione pod kątem 90° do podłoża.
3. Sprawdź pionowe ustawienie słupów. (Tylko dla 3 z 6 słupów)
4. Wyreguluj dolną krawędź słupów zgodnie z wymiarami na rysunku.
5. Użyj wiertarki udarowej 12 mm do wywiercenia otworów, następnie wstaw kotwy rozporowe i dokręć je kluczem M17.

TO	 10x80	16
----	---	----

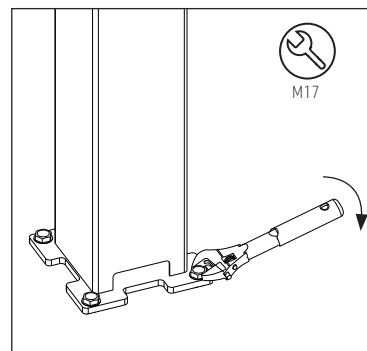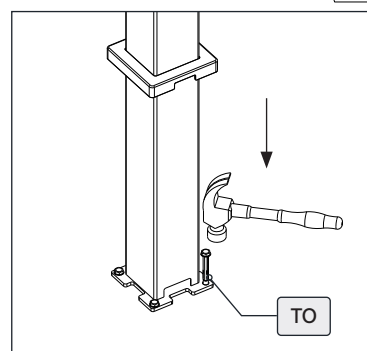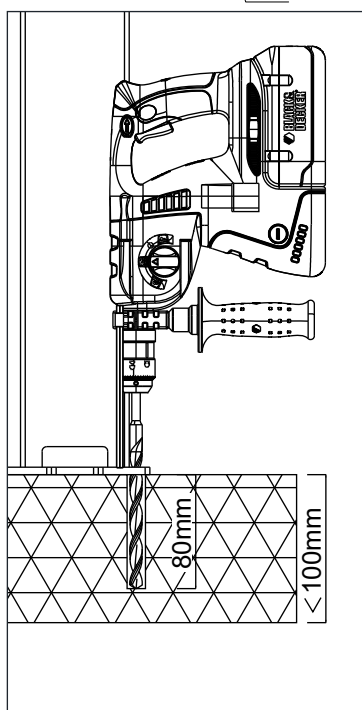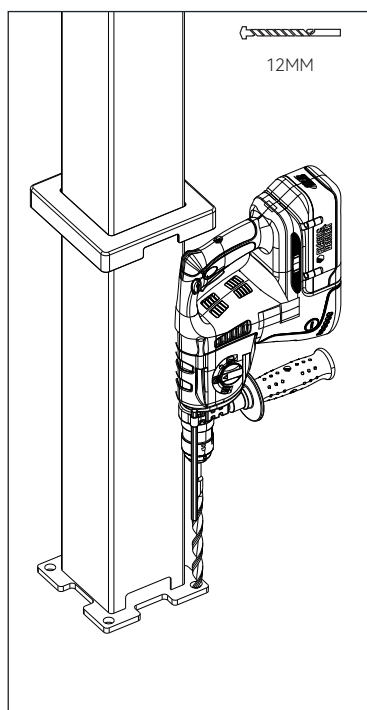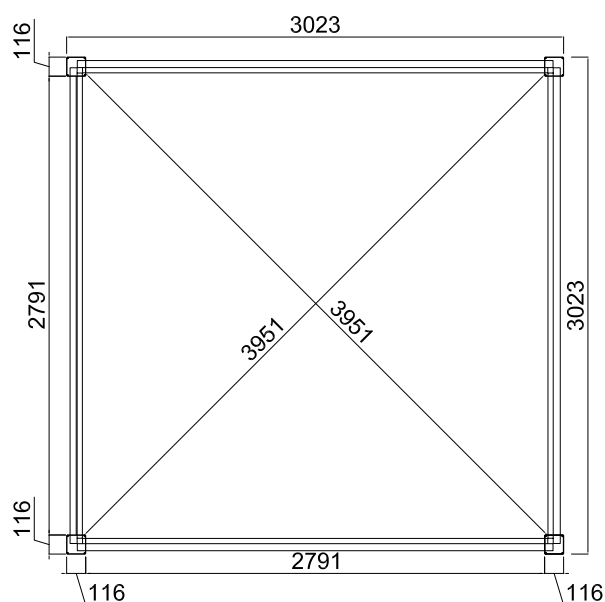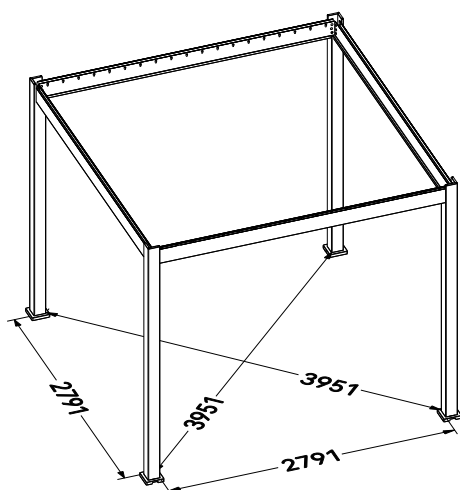



 
Umieścić zewnętrzną listwę oświetleniową, podłączyć ją do kontrolera i połączyć szeregowo.

LED1		4
------	---	---

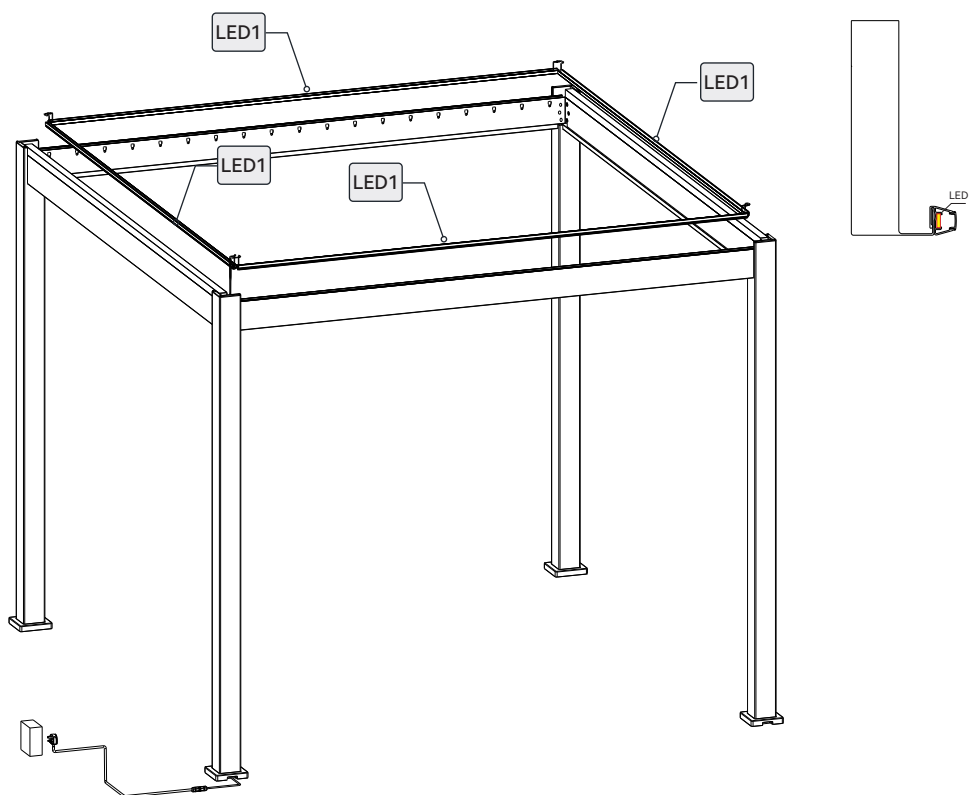



Uwaga:

Połączyć taśmy LED i podłączyć jeden segment do zacisku LED kontrolera. Po zakończeniu podłączania należy bezpiecznie poprowadzić kable do portu drenażowego.

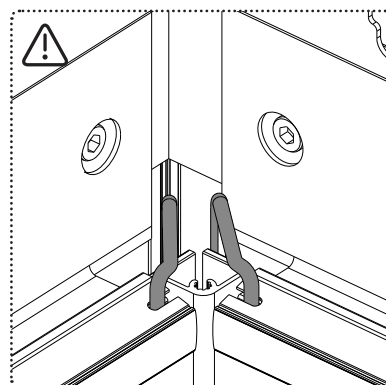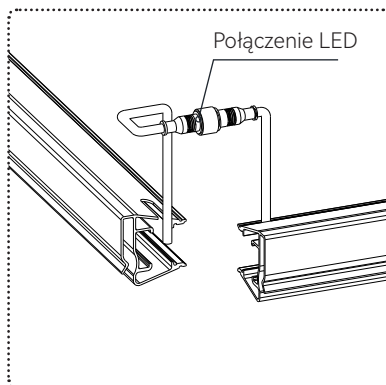
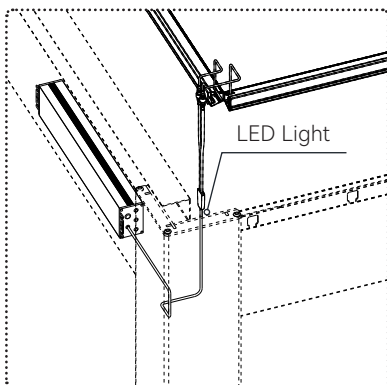



Zamontować żaluzje wału głównego i zabezpieczyć je śrubami. Upewnić się, że żaluzje są wypoziomowane.

UO-3		1
	M17	

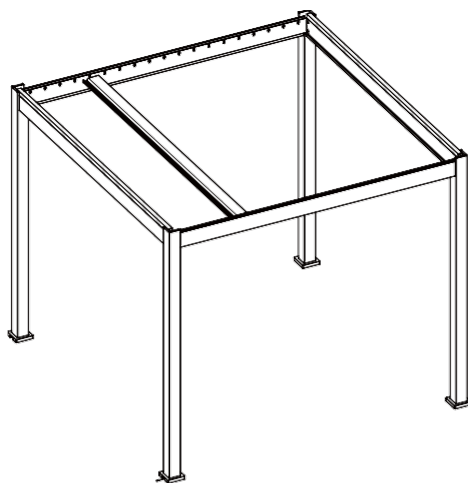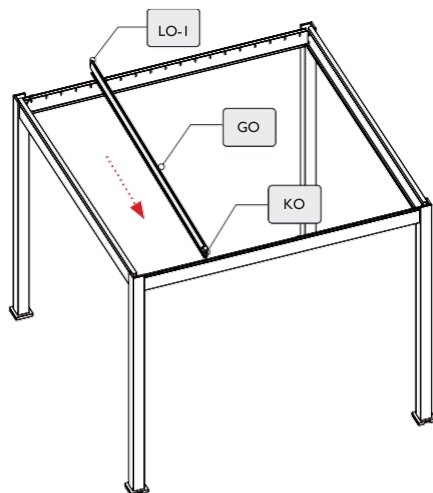**Uwaga:**

Dokręcić kluczem płaskim.

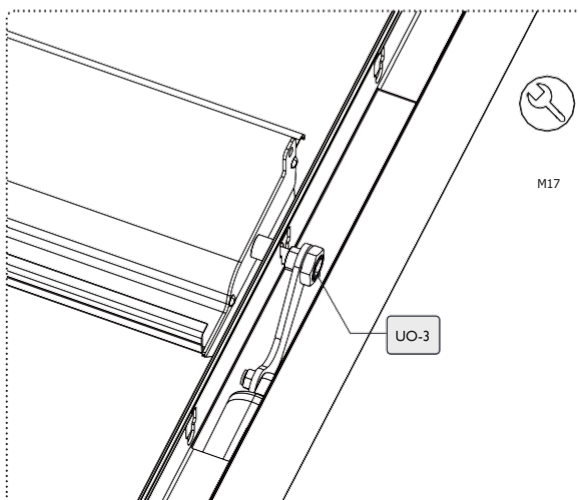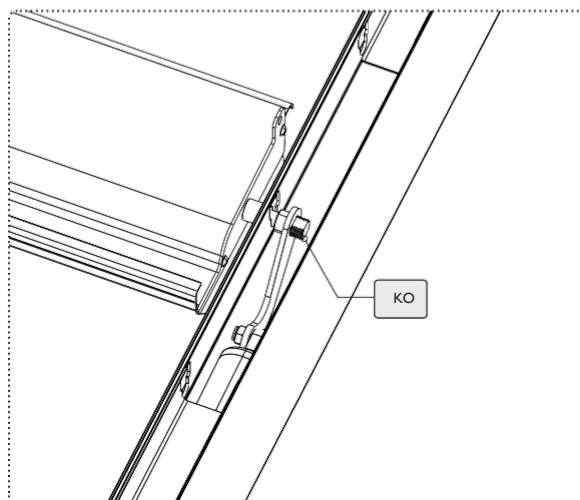

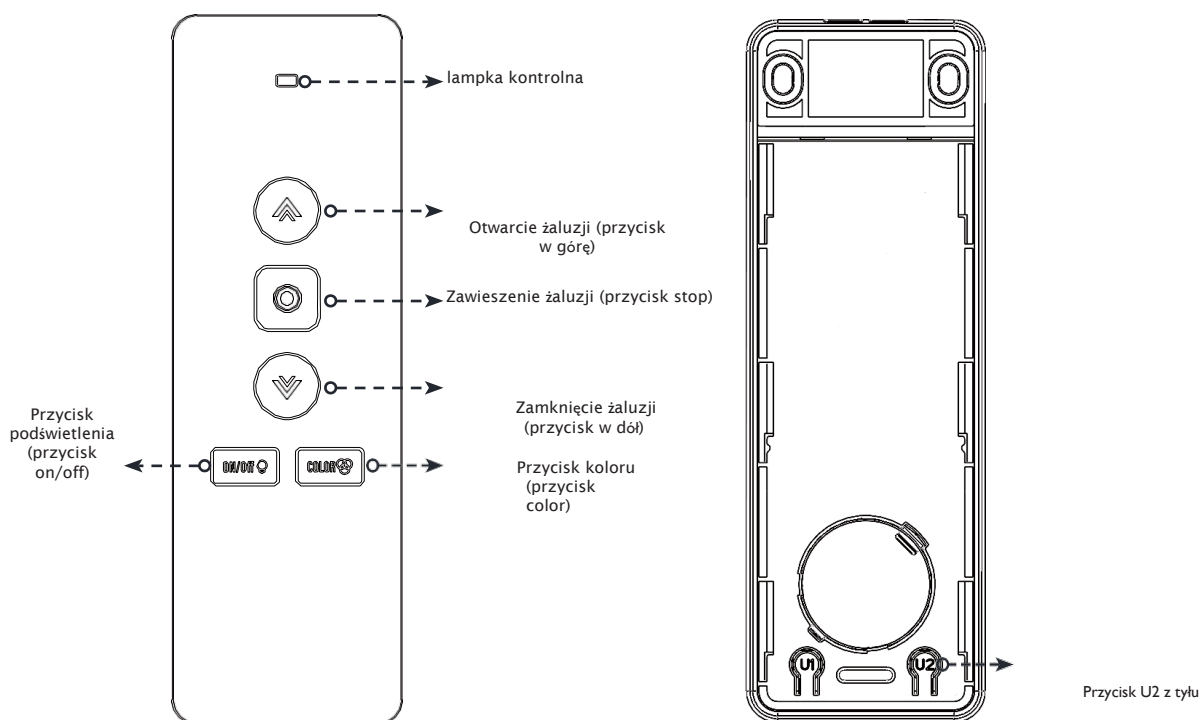

Funkcja oświetlenia RGB

Funkcja przycisku zasilania światła:

Krótkie naciśnięcie: Kontrola cyklu włączania/wyłączania światła.

Długie naciśnięcie (2 sekundy): Cykliczne ściemnianie, stopniowe ściemnianie i rozjaśnianie.

Funkcja przycisku Color:

Krótkie naciśnięcie: 8 trybów kolorów: czerwony, zielony, niebieski, żółty, cyjan, fioletowy, biały i automatyczna zmiana kolorów. Długie naciśnięcie (2 sekundy): Stopniowa zmiana kolorów i regulacja kolorów.

.....

Produkt obsługuje również funkcję TUYA. Produktem można sterować poprzez pobranie aplikacji TUYA. Z funkcji tej należy korzystać, gdy sygnał WIFI jest dostatecznie silny.



Reset sieci:




Naciśnij i przytrzymaj przez 7 sekund przycisk „SET SKY” na pilocie.

Lampa kontrolna pozostanie wyłączona przez 1 sekundę, wskazując, że sieć została pomyślnie wyczyszczona.

Uruchom pergolę i użyj pilota zdalnego sterowania, aby obrócić rolety do pozycji 90 stopni, ułatwiając w ten sposób późniejszą instalację dodatkowych rolet.


E-CR		1
------	---	---

Zainstaluj baterię (do nabycia osobno) w pilocie zdalnego sterowania (E- CR). Wskazówka. Sugerowany przez nas model baterii to CR2450.

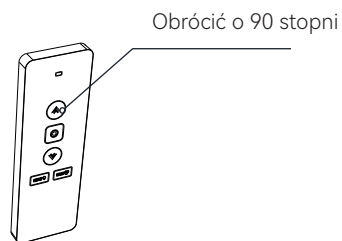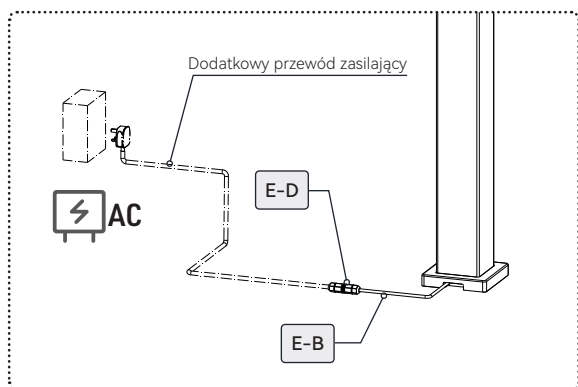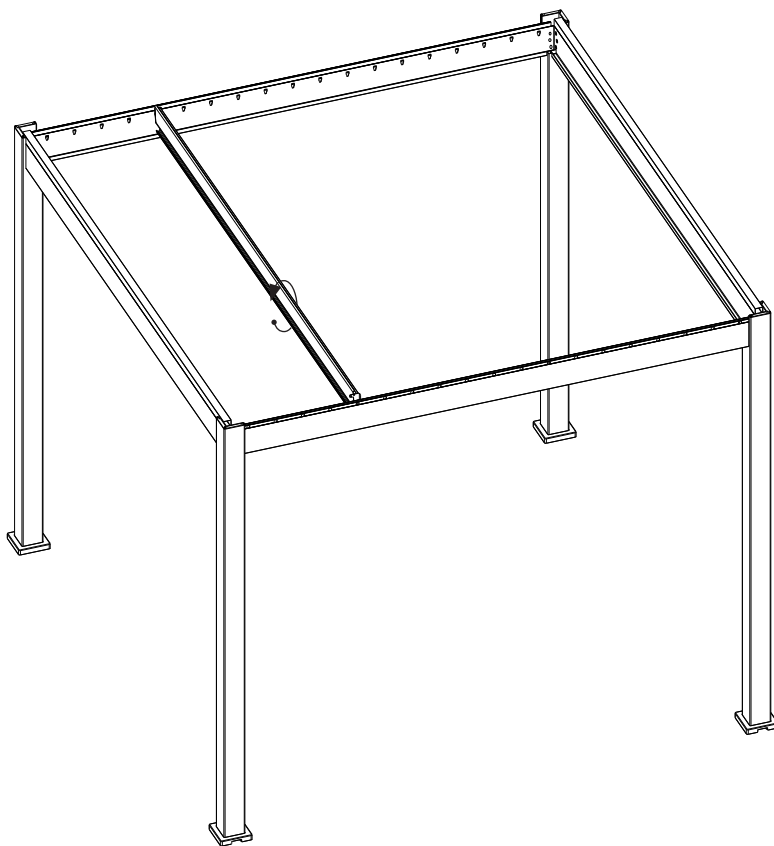



Zamontować żaluzje pergoli i dodać zaślepki po obu stronach.

SO		50
----	---	----

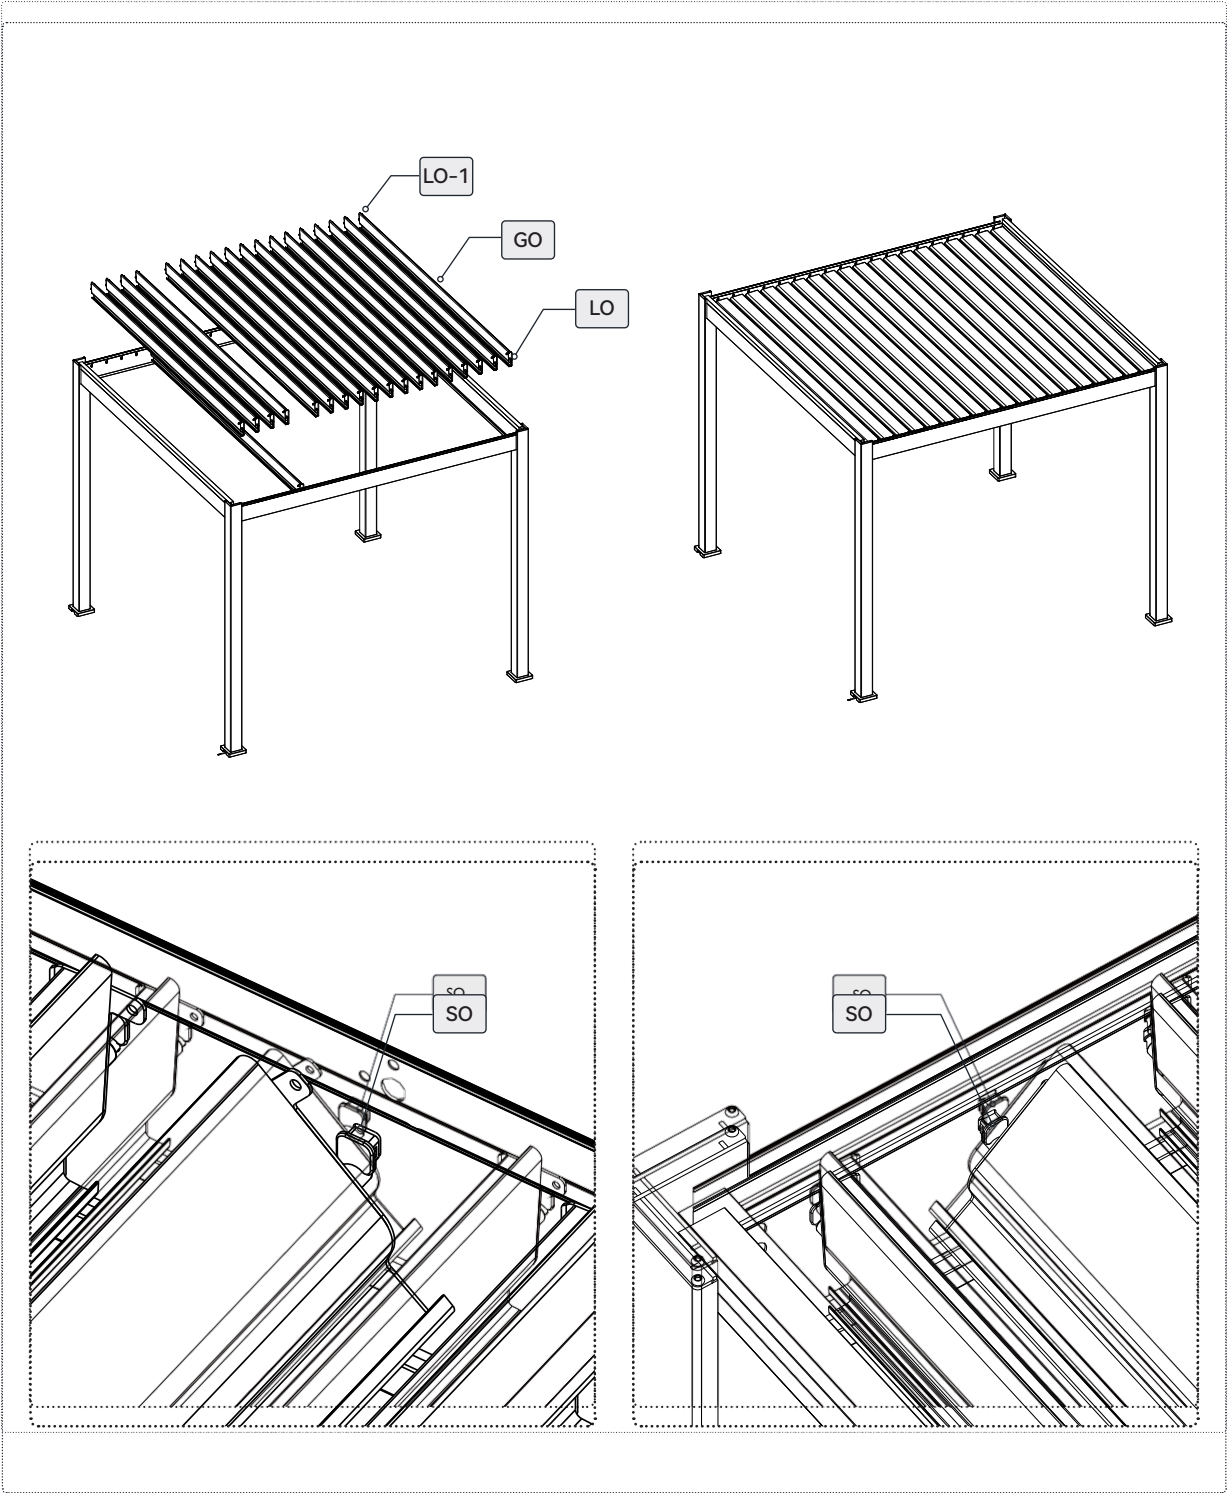




Zmontować aluminiowy kątownik łączący z płytą uszczelniającą żaluzji i zamocować za pomocą nakrętek zabezpieczających i podkładek.

FO		1
UO	 lock nut	25
VO		25
ZO-1	 4mm	
ZO-2	 4mm	
ZO-5	 10mm	

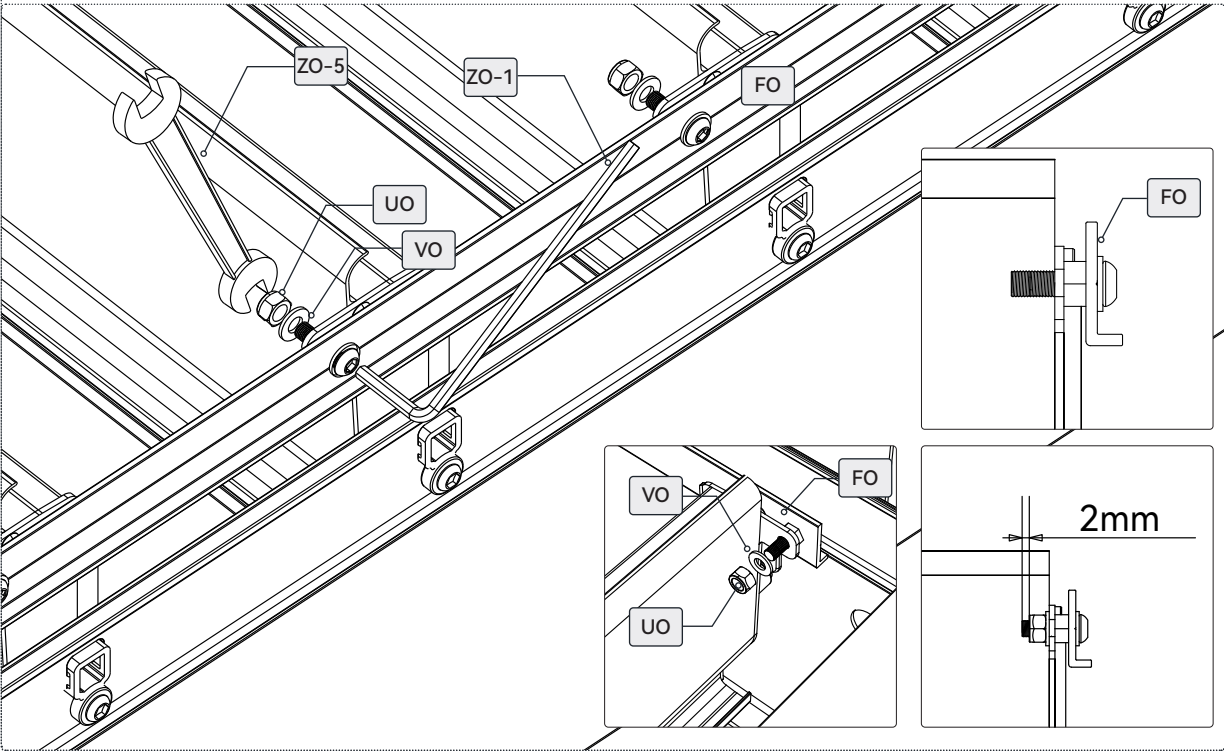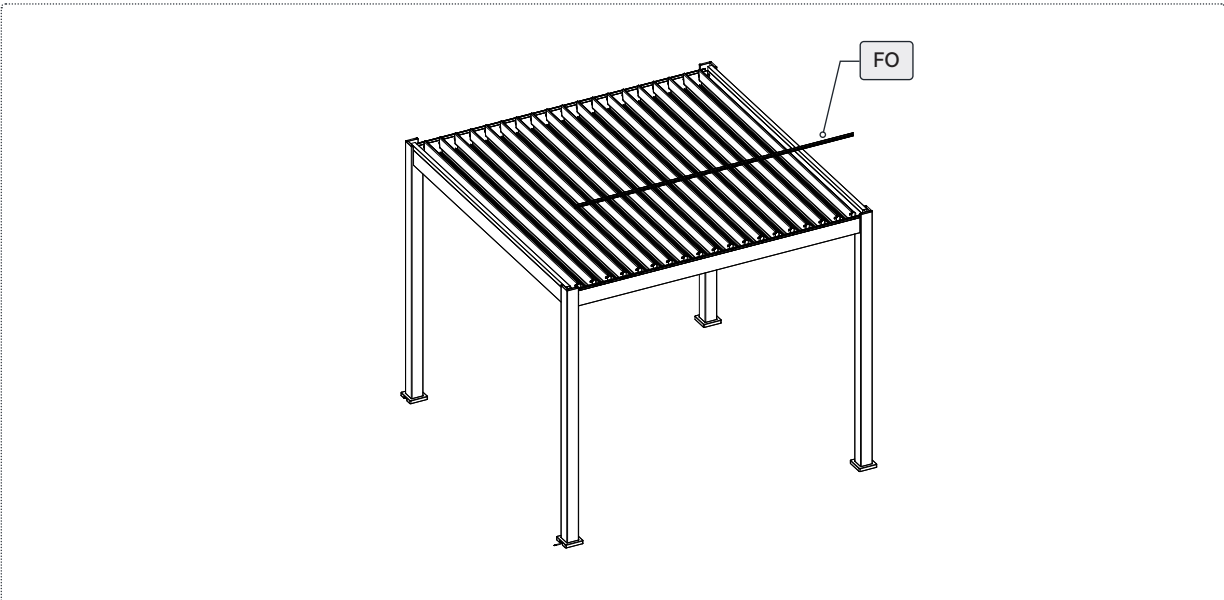


Zainstalować zaślepkę na belce i zabezpieczyć otwory montażowe plastikowymi osłonami.

DO		2	RO		24
----	---	---	----	---	----

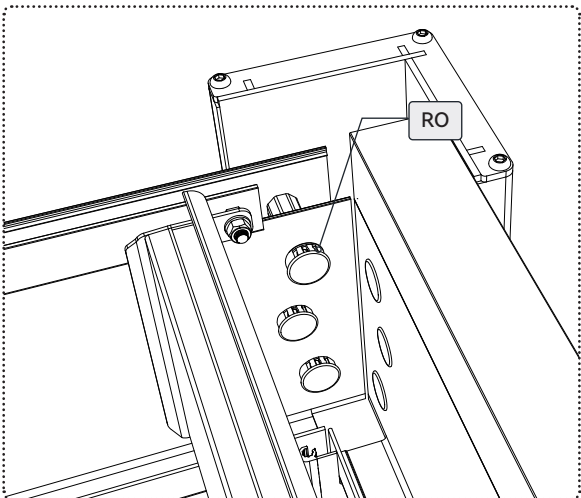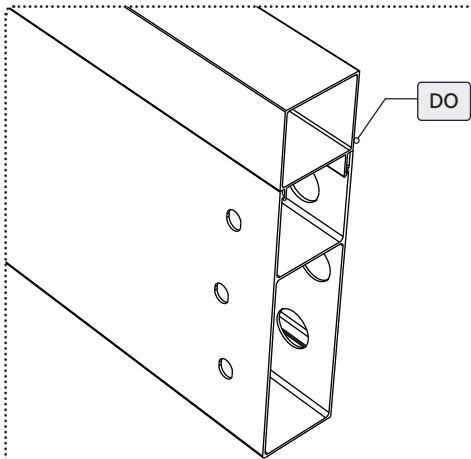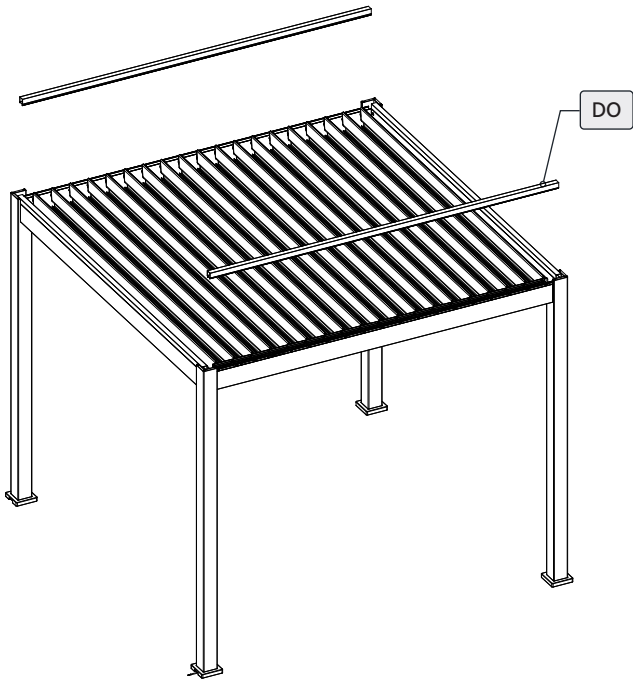

We appreciate your purchase of our Pergola.

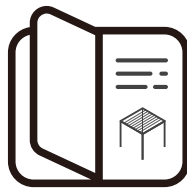

Instruction Manual

This guide will give you step-by-step instructions on how to assemble and care for your pergola, ensuring it lasts for years of enjoyment and reliable use.

Be sure to follow all steps carefully, as incorrect installation may result in serious injury.

IMPORTANT:

Warning: Safety Instructions

For the safety of individuals, it is crucial to follow these instructions. Please retain them for future reference.

Children and individuals with disabilities or limited experience may use the appliance if they are properly supervised or trained and understand the potential risks.

Children should not be allowed to play with the appliance. Cleaning and maintenance tasks should only be performed by children under supervision.

This pergola is designed for outdoor residential use, providing protection from direct sunlight, glare, and heat.

Any use or modification not outlined in this manual is considered improper and could pose significant risks to both users and property. Such actions will void the product warranty.

BEFORE THE INSTALLATION

PREPARE ALL THE NECESSARY TOOLS

To assemble your pergola properly and safely, make sure you have the following tools and accessories on hand, as these are not included.

											
2 step ladders	Protective gloves	Hexagonal spanner/wrench set	Phillips screwdriver	Hammer	Tape measure	Hard hat	Box cutter	Hammer drill	Spirit level	Cordless screwdriver	Scissors

CHECK FOR MISSING PARTS:



 
 

Before starting the installation, verify that you have all the necessary parts to assemble your e-Motion. Double-check that the quantity of parts matches the model you purchased.

If any parts are missing, please reach out to customer service before proceeding with the installation.

PREPARE THE PARTS FOR EACH STEP:

In the Installation section of the manual, each step specifies the parts and quantities needed. We recommend gathering the necessary parts ahead of time for each step. This will help save you time and make the assembly process smoother. To avoid damaging the painted surfaces, place the parts on cardboard or another soft surface if possible.

CHOOSE AN APPROPRIATE LOCATION:

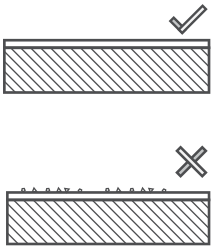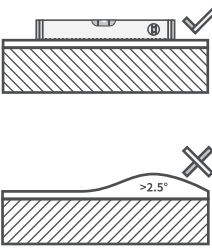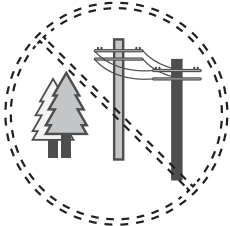				
The ground should be solid and level.	The ground must be flat and even.	Ensure there is adequate water drainage in the area.	Make sure the location has easy access to power, if needed	Avoid areas with overhanging trees or powerlines.

WARNING:

Many terraces or patios are built with a slight slope to direct rainwater away from the house or other structures. For proper pergola installation, a completely level surface is required. Small pebbles or uneven ground may prevent the pergola from being securely anchored.

If the pergola is installed on an uneven surface, it may affect the performance of accessory components and could void the product warranty. You may also need to adjust the height of the pillars for proper installation.

PREPARE THE FOUNDATION:

To get your foundation ready, make sure to:

 
 
 
 
 
 
 
 
 
 
Check for underground pipes and cables (call local relative authorities before digging).







Verify with local authorities if any building permits are necessary.

If you're opting for a concrete base, consult with a reputable contractor.

IMPORTANT SAFETY SUGGESTIONS

To ensure the safety of everyone involved in the installation and use of the pergola, it is essential to follow the safety guidelines listed below.

	The pergola must be placed and secured on a flat, level surface.		Always wear suitable work shoes, gloves, and eye protection during assembly.
	When using power tools or a ladder, always adhere to the manufacturer's safety instructions.		Always wear protective gear to minimize the risk of injury in case of a fall.
	Ensure the pergola meets local building regulations and codes.		Do not step on the louvers.
	Use only ladders and scaffolding that can support the required weight.		Visually inspect the pergola for damage prior to each use. If damage is detected, stop using it immediately and reach out to authorized personnel to fix it.
	Remove any excess cords and disconnect any non-essential equipment before installing the drive.		To avoid damage, set the louvers in the vertical position during snow or windy conditions.
	Unprotected moving parts that pose a hazard should be installed more than 2.5 meters above the floor or any surface that could allow access to them.		Always use replacement parts that are approved by the manufacturer.
	To avoid damage to the pergola, ensure that foliage or foreign objects on the louvers and in the guide rails are removed frequently.		Only certified personnel are authorized to carry out electrical installation, following the relevant regulations
	Disconnect all electrical connections from the mains prior to installation.		Operate the pergola remotely only when you can see the moving parts clearly.
	Only a licensed electrical contractor should install the power sources for electric pergolas.		If the motor undergoes repeated open-close cycles, it may enter overheat protection mode and will return to normal once it cools down.
	Keep children and pets away from the assembly area until the installation is fully completed.		Dispose of all plastic bags responsibly and keep them out of reach of children.
	Keep a safe distance from power lines, especially when handling metal parts.		Avoid assembling the pergola in windy or wet conditions.
	In the event of a damaged supply cord, only the manufacturer, a service agent, or similarly qualified personnel should replace it		Do not store hot items, such as recently used grills or blowtorches, under or near the pergola.

      	To prevent damage to the louvers' drive, do not operate the roof mechanism in the presence of frost or ice.		Keep clothing and body parts clear of the pergola to avoid them becoming caught in the moving parts.
	Keep items off the louvers.		It is not allowed to hang objects on the pergola, as it may result in serious damage.
	Before making any modifications to the design or configuration of the equipment, consult the manufacturer or an authorized representative.		Keep children away from the fixed controls and ensure remote controls are out of their reach.
	The warranty will be voided, and the operating mechanism may be damaged if non-original branded accessories are installed.		Please keep the drainage holes of the column clean by brushing them regularly with a soft brush.
	We guarantee the resistance of the pergola for winds up to 80km/h		We guarantee the resistance of the pergola for a maximum snowweight of 50kg/m2




2 PERSONNEL REQUIRED


Electric control system are in the cavity of the post.




Connecting bar & brush are in the cavity of the beam.

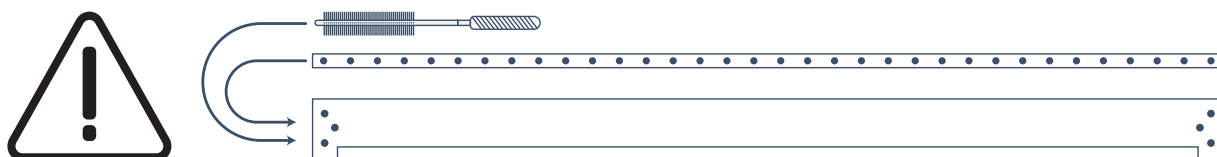



There is a Product Tracking Number in the inner side of the carton(see below diagram). For better and efficient after-sales in the future, when tear down the carton box, please take a photo of the Tracking Number and save the photo.

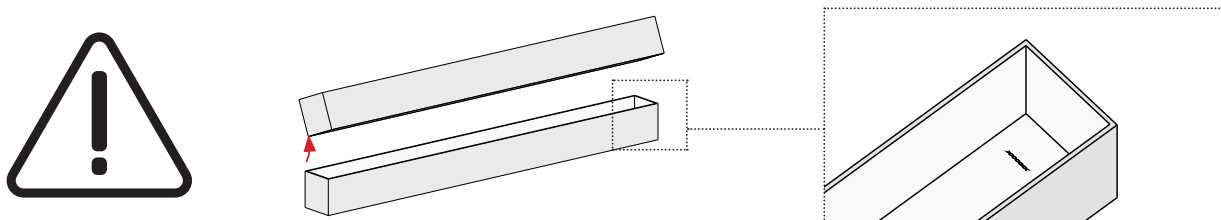

Plan Size

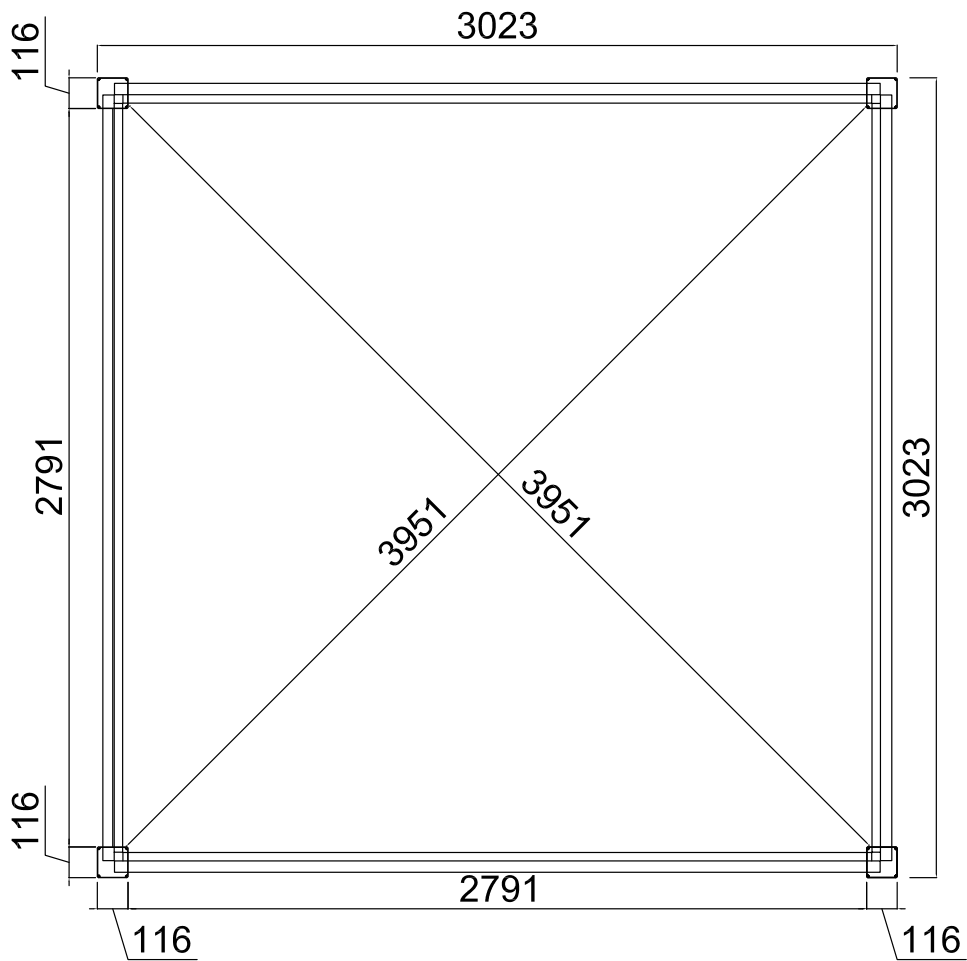



Base Plate Layout Plan

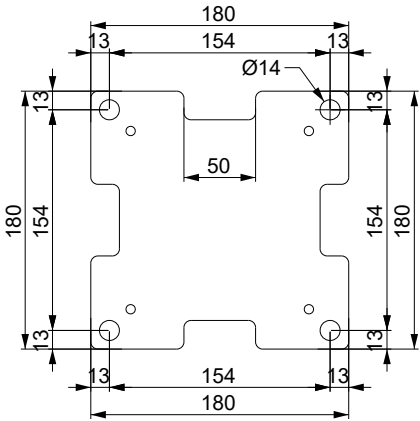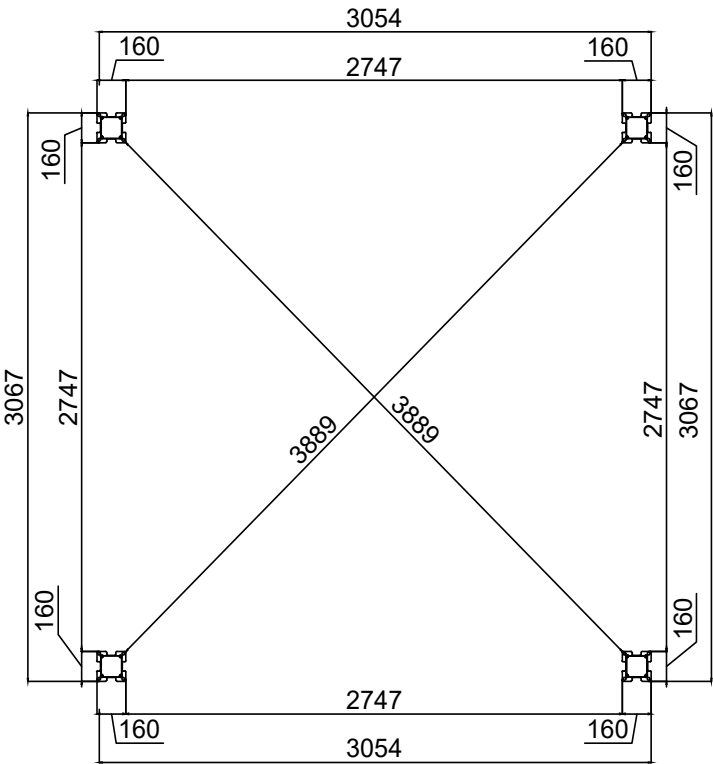


SPARE PART LIST





3X3

  CARTON 1/4


No.	Profile	Diagram	Size	QTY
AO			116X116 L=2550mm	2
AO-2			116X116 L=2550mm	2


No.	Diagram	QTY
IO		4
JO		4

 No.	Diagram	QTY
TO	 10x80	16
XO-1	 6x35 4mm	16

    No.	Diagram	QTY
KO		1
LO		18
LO-1		19
MO		37
QO	 6mm	24
RO		24

No.	Diagram	QTY
SO		38
UO	 lock nut	56
UO-3	 M14	1
WO	 4x16 PH2	76
XO	 6x40 4mm	37
VO		19



 
No.	Diagram	QTY
ZO-1	 4mm	1
ZO-2	 4mm	1
ZO-3	 6mm	1

 No.	Diagram	QTY
ZO-4	 6mm	1
ZO-5	 10mm	1
ZO-6	 PH2	1



SPARE PART LIST

3X3

   CARTON 1/4

No.	Diagram	QTY
E-A		1
E-B		1
E-CR		1
E-D		1

  CARTON 2/4

No.	Profile	Diagram	Size	QTY
B3			75X153 L=2894mm	1
BO-4			75X153 L=2894mm	1
CO-3			75X195 L=2894mm	1
CO-4			75X195 L=2894mm	1
DO			42X54 L=2894mm	2
FO			27X8 L=2744mm	1
No.	Profile	Diagram	Size	QTY
LED1			69X78 L=2790mm	4

CARTON 3/4

No.	Profile	Diagram	Size	QTY
GO			166X30 L=2855mm	10

CARTON 4/4

No.	Profile	Diagram	Size	QTY
GO			166X30 L=2855mm	9


Before proceeding with the assembly of your louvered pergola, it is necessary to check that all parts listed are supplied and not damaged.


Any missing part must be reported within 10 days of delivery.

Do not discard the packaging without ensuring that the product is functioning properly.


Attention:

Please note that the outlet on the skirt should be in the front position for the front side, while for the rear side, the outlet is a mirror image of the front face.

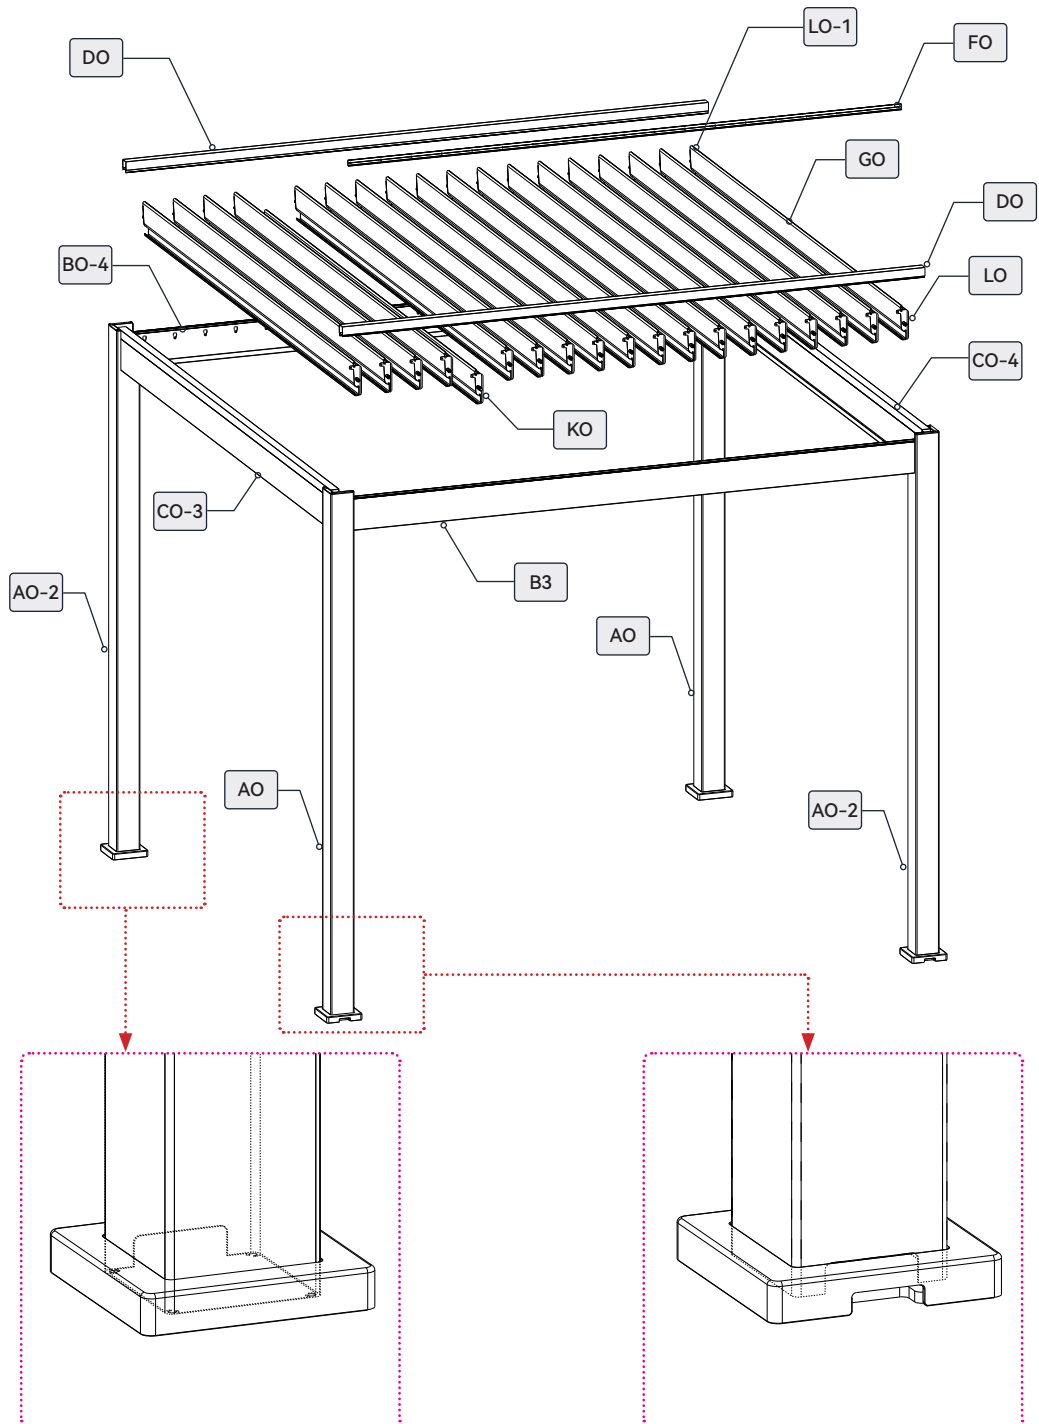




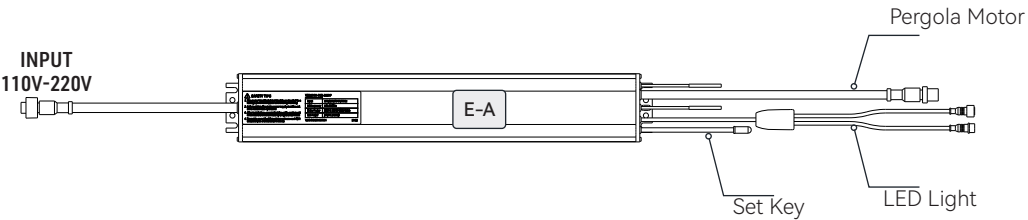


Cable Diagram

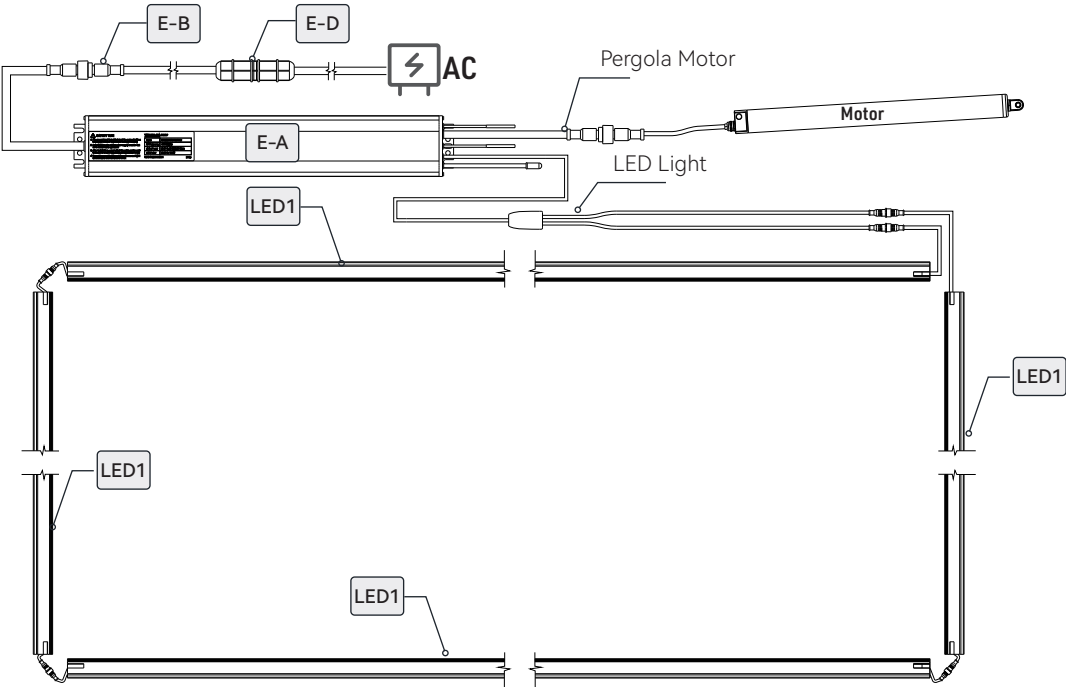

Attention:

1. The controller must be installed inside the side beam, with the input cable routed through the post and exiting through the drainage opening.
2. Insert the controller at least 20 cm deep into the recess of the side beam, ensuring a distance of 40 mm from the end of the beam.
3. The accessories (such as Sunblinds or Panels) are secured by screwing it into the beam, 18 cm from the end of the beam.

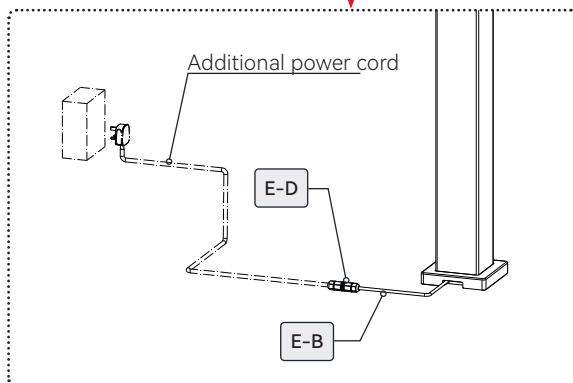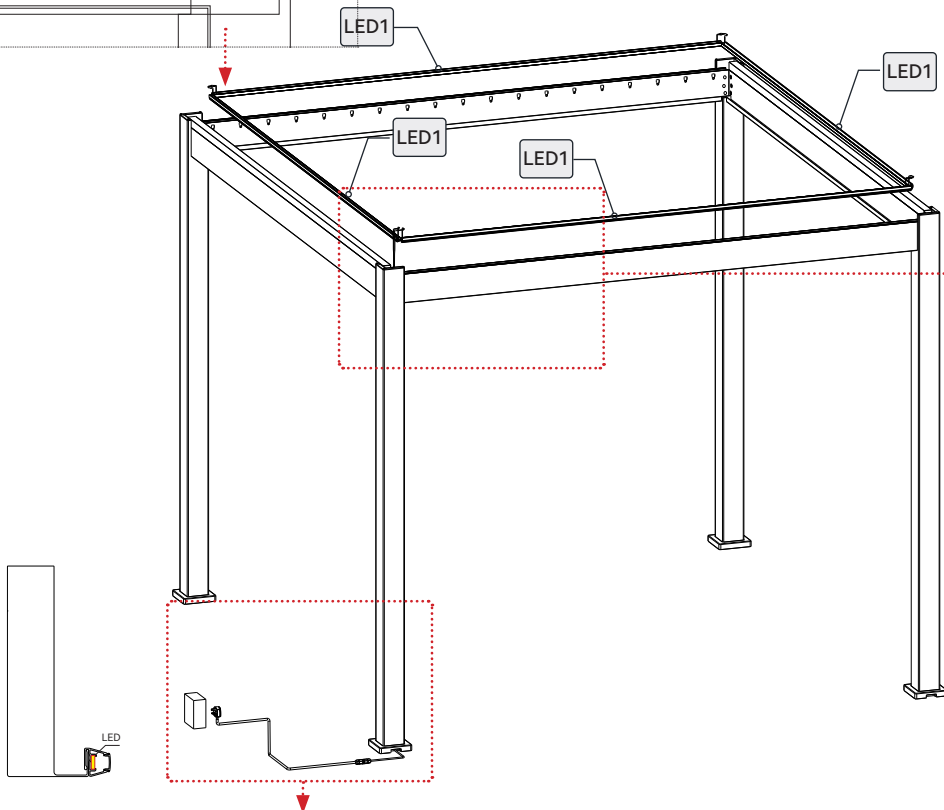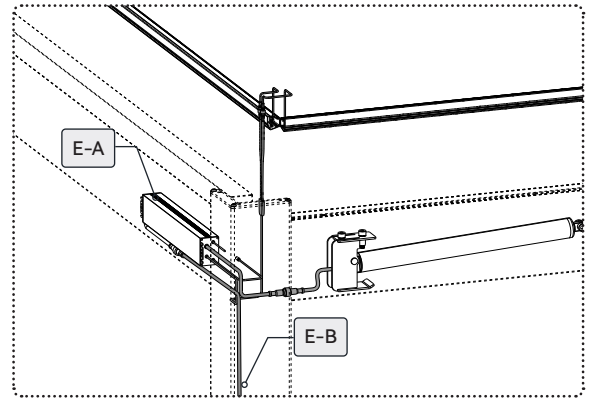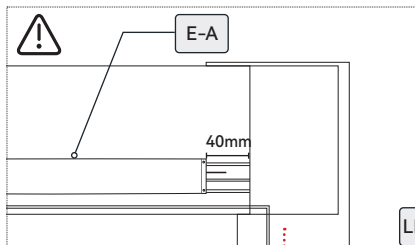

Attention:

Please select the appropriate power cord based on the country you are in, and connect it using a waterproof connector. This controller can support voltages ranging from 110V to 220V.



There are 3 cables at the input end of the power, namely:
 Brown: LIVE WIRE
 Blue: NEUTRAL WIRE
 Yellow & Green: EARTH WIRE

The illustration uses a manual wrench, which can be replaced with an electric P-tip.


KO		1	MO		37
LO		18	XO		37
LO-1		19	UO		37

ZO-1	
ZO-2	
ZO-5	


Attention:

Install the spindles for the cover on two ends of the louvers.
Note: To avoid any broken of the plastic parts(MO), when use the pistol drill, please reduce the twisting force of it .

X18

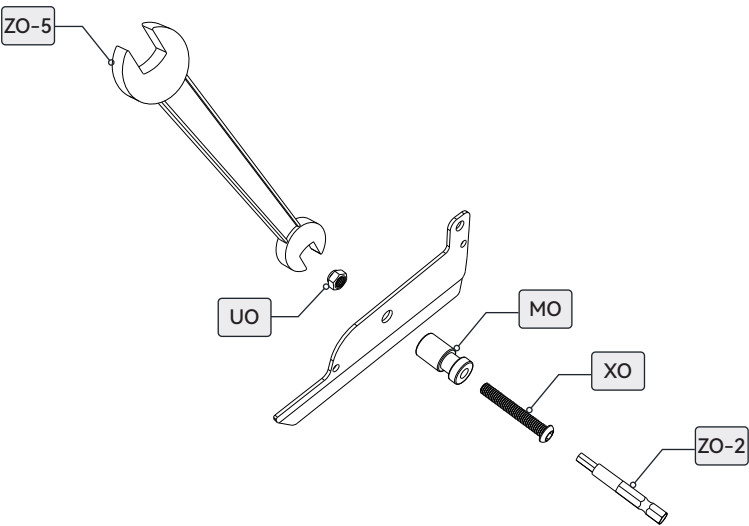



X19

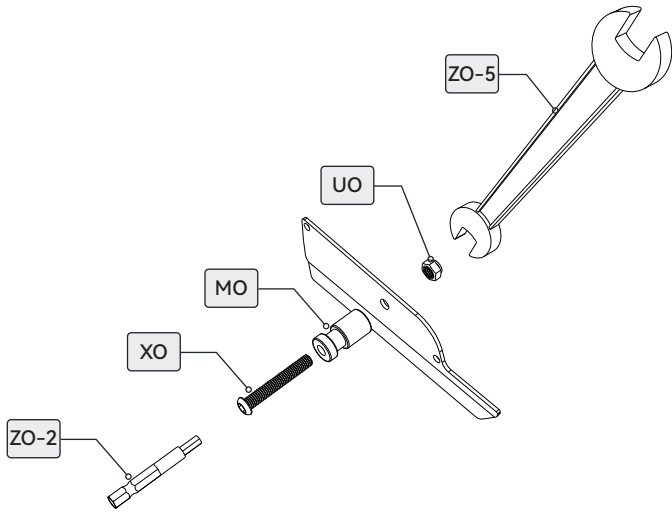




Install the louvre cover on two ends of the installed louvres and the spindle louver.

GO		19	WO		4x16		PH2	76	ZO-6		PH2
----	---	----	----	---	------	---	-----	----	------	---	-----

X1

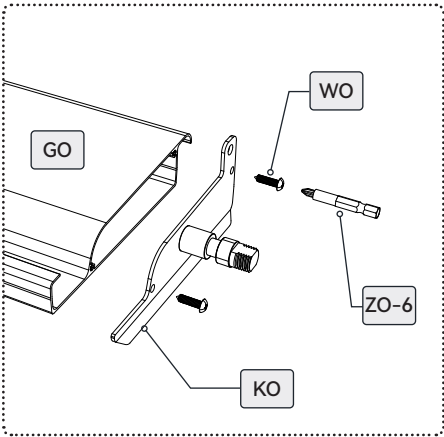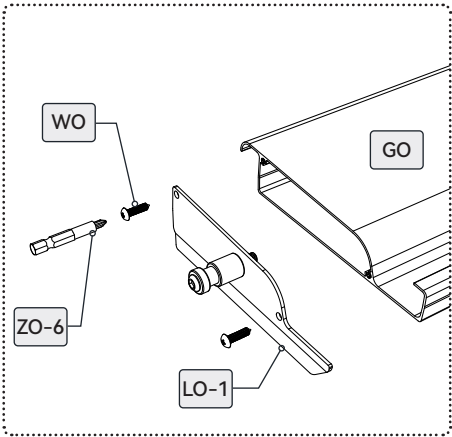


X18

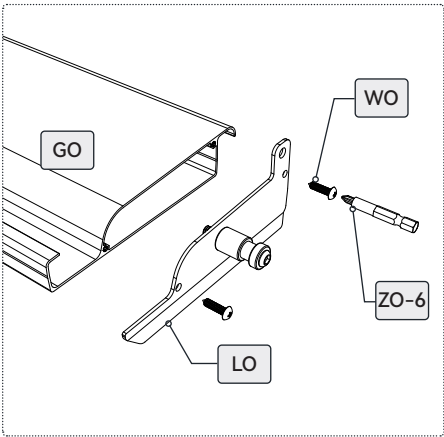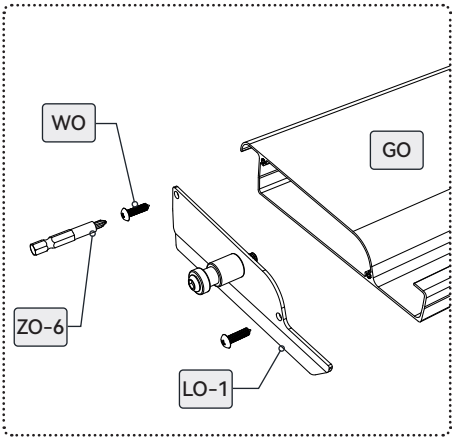 


First, connect the input end of the controller to an extension cable, then pass the extension cable through the upright and out from the drainage hole to prevent interference with the subsequent installation of the base plate.

E-A		1
E-B		1

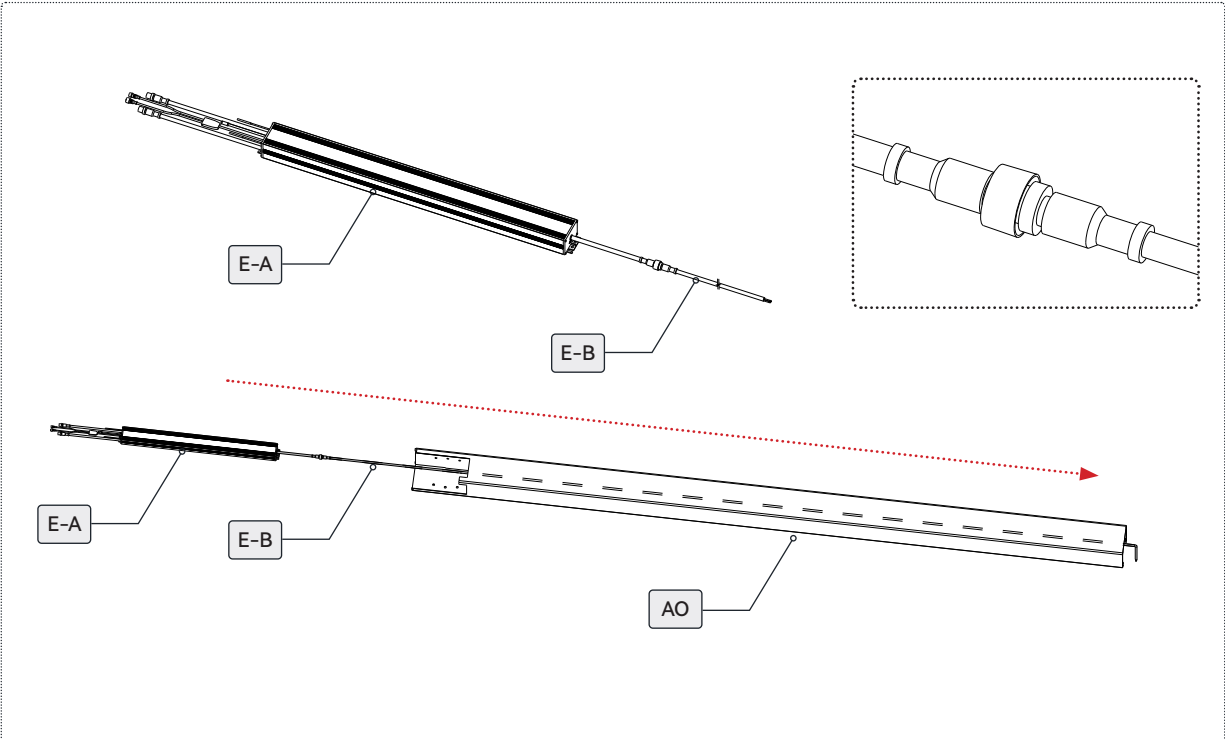


Attention:
Please fasten the screw by hand after installing these screws.

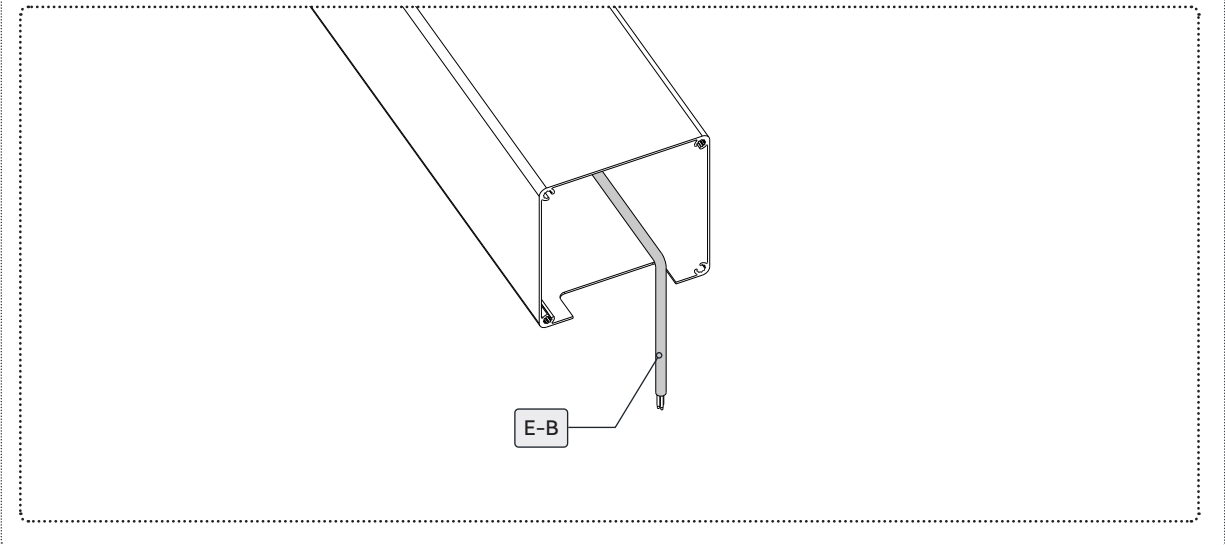


- 1. Install the post skirt first
- 2. Make sure the outlet of the skirt and the post are on the same face

AO		2	IO		4	XO-1		6x35 4mm	16	ZO-1		4mm
AO-2		2	JO		4					ZO-2		4mm

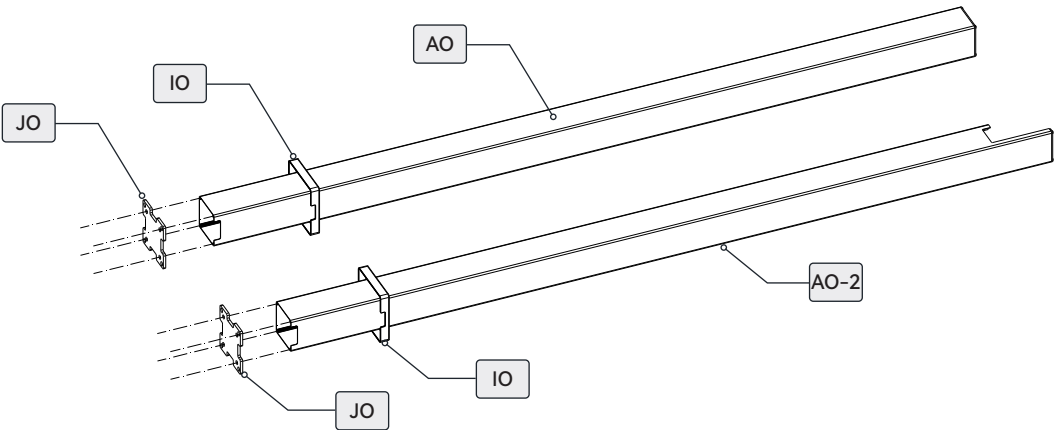


Attention:

Please fasten the screw by hand after installing these screws.

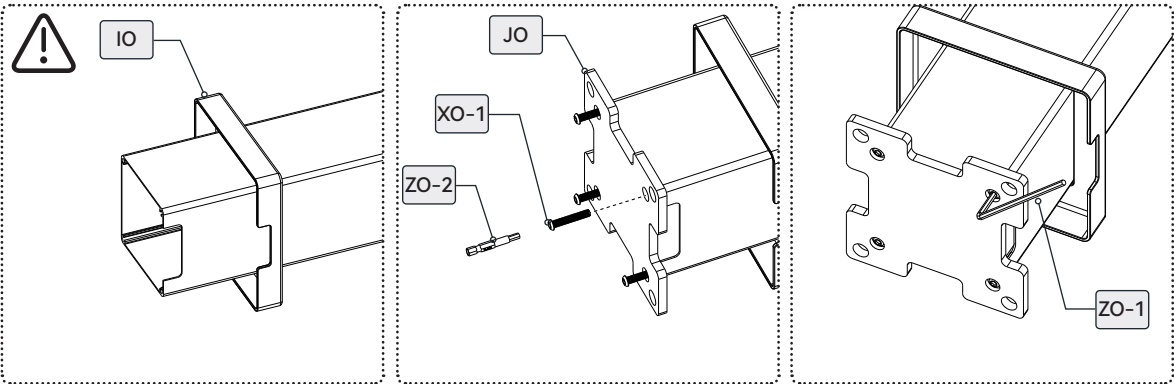



Route the appropriate output cables of the controller to facilitate later installation.Ensure that the E-A controller is bostioneccorrectly-at least 20 cm deep from the end of the beam.


CO-3		1
------	---	---

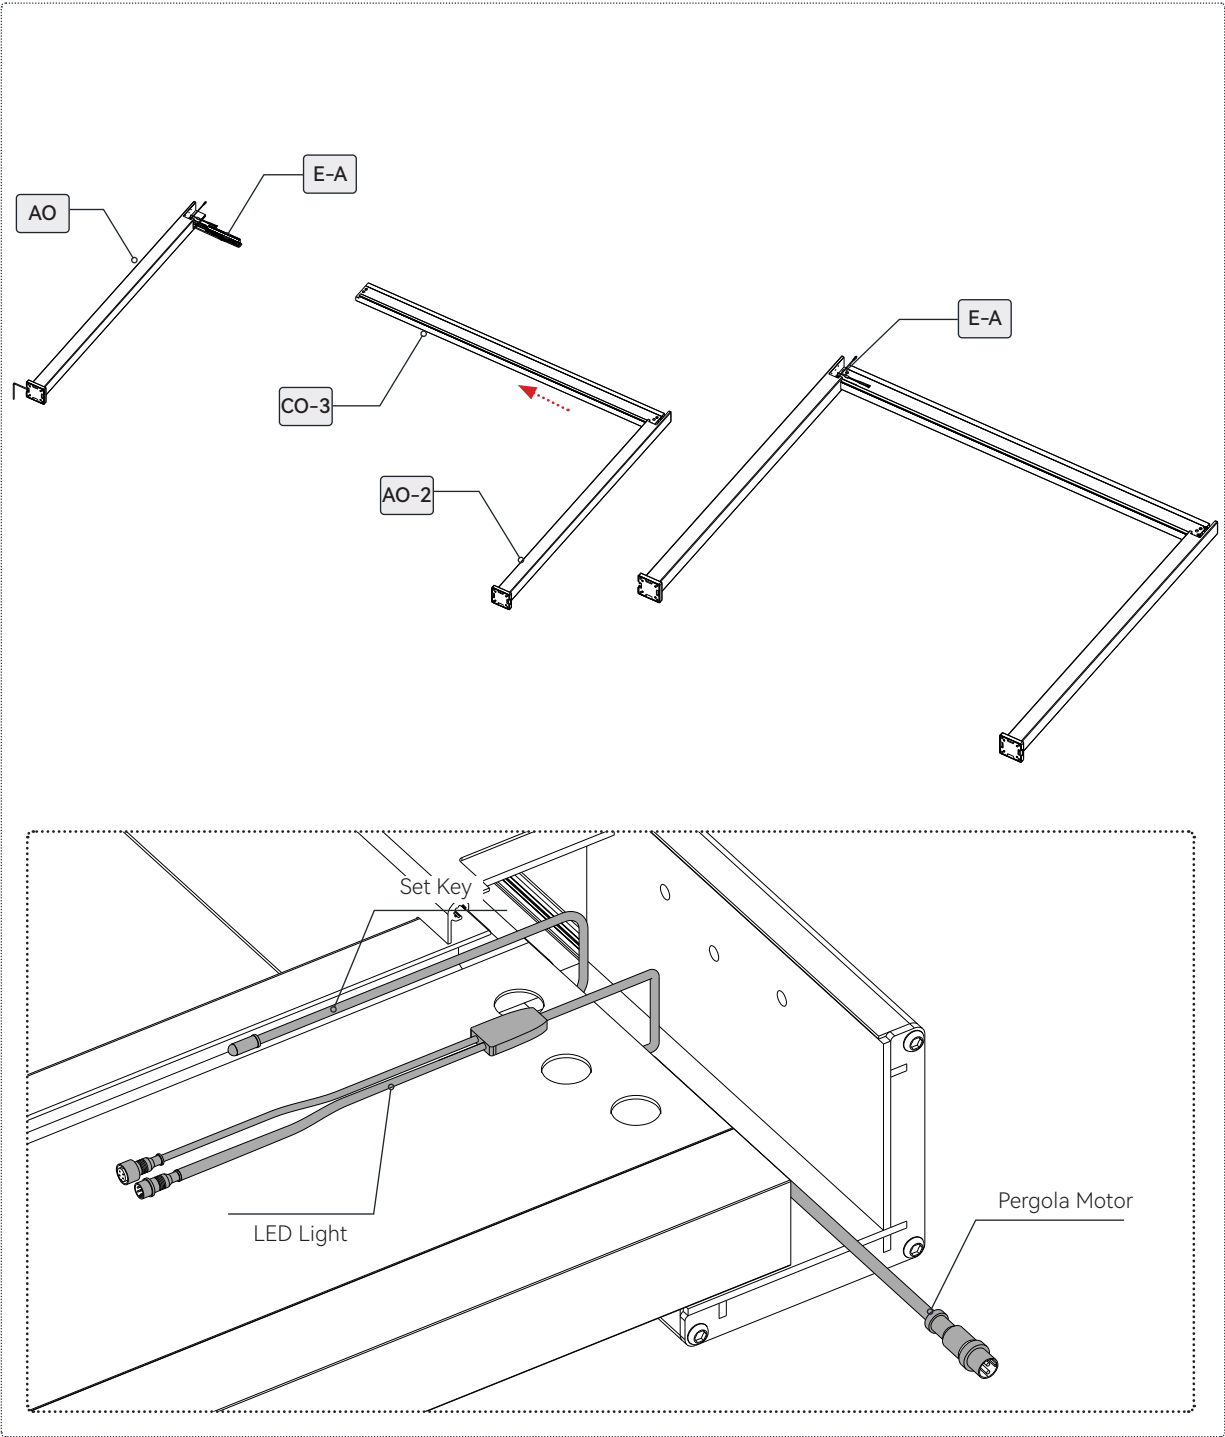


Install the screws for the side beams.

 
CO-4		1	QO			12	ZO-3		6mm
							ZO-4		6mm

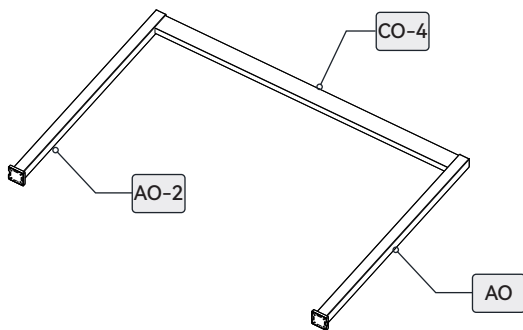


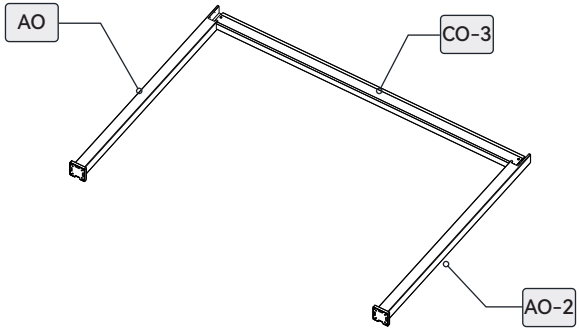

Attention:
Please fasten the screw by hand after installing these screws.

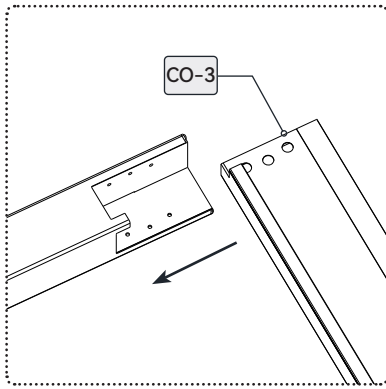

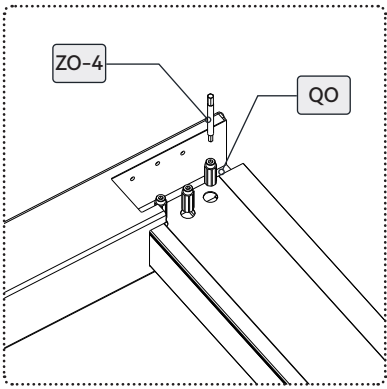



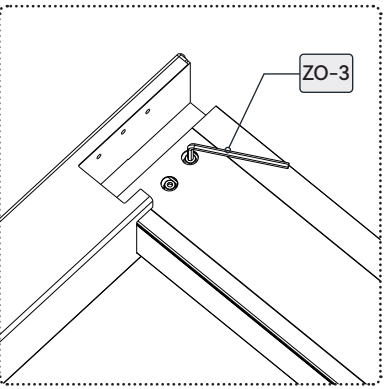


First, position the secondary beam, followed by the primary beam, taking care to note the motor connection cable on the primary beam. Then, connect the motor cable from the controller to the motor.

B3		1
BO-4		1




QO			12
----	---	---	----

ZO-3		6mm
ZO-4		6mm

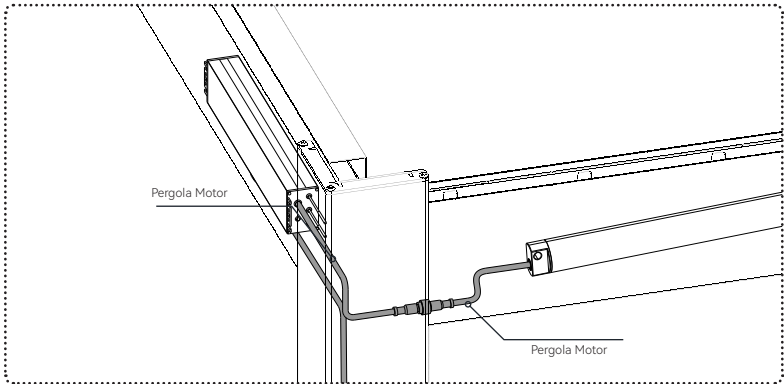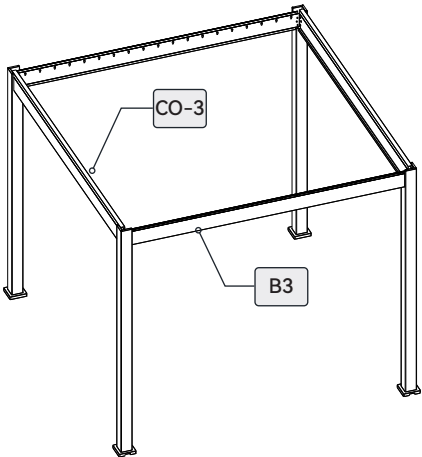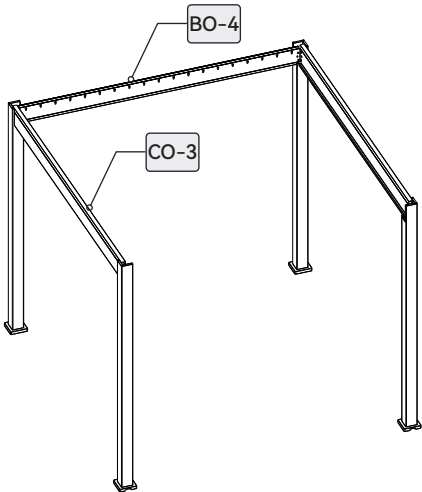







Attention:

Please fasten the screw by hand after installing these screws.

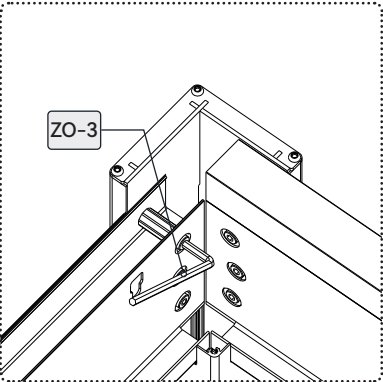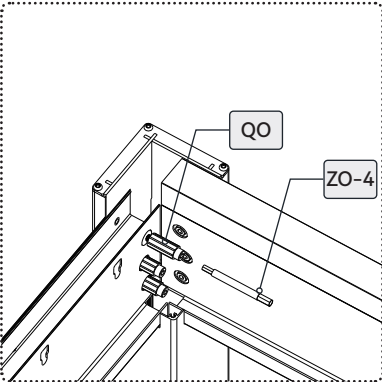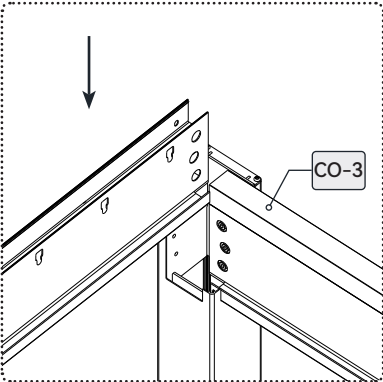



1. Check the dimensions as shown in the diagram.
2. Use a spirit level to ensure that all beams are level and that the posts are at a 90° angle to the ground.
3. Check the vertical alignment of the posts. (Only for 3 / 6 posts)
4. Adjust the lower edge of the columns according to the dimensions in the diagram.
5. Use a 12 mm hammer drill to drill the holes, then insert the expansion bolts and tighten them with an M17 wrench.

TO	 10x80	16
----	---	----

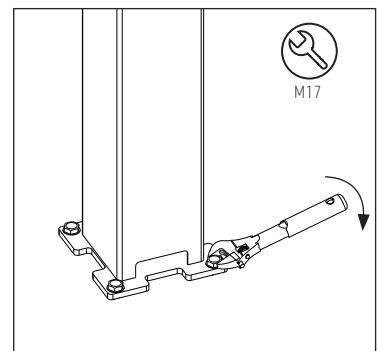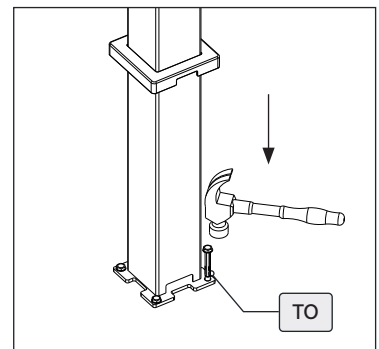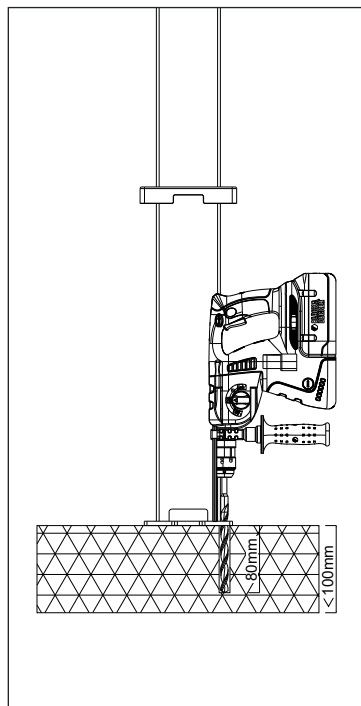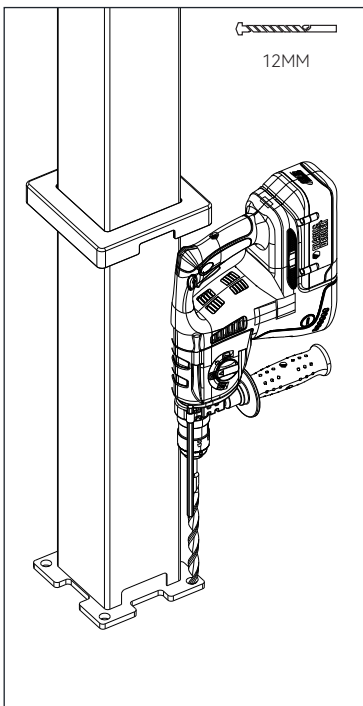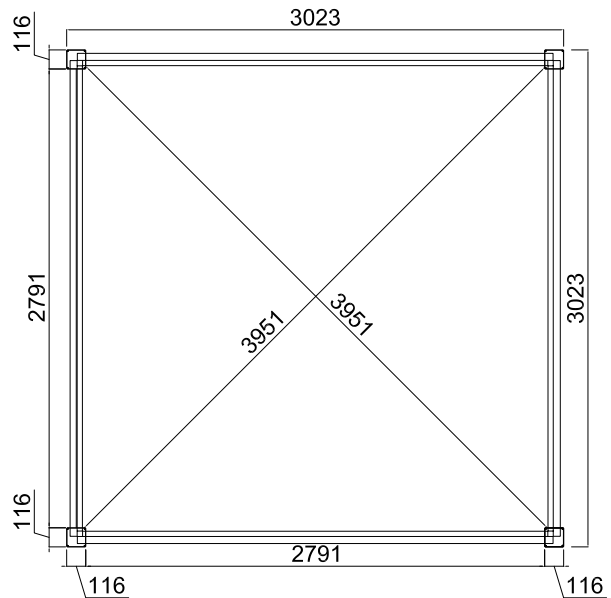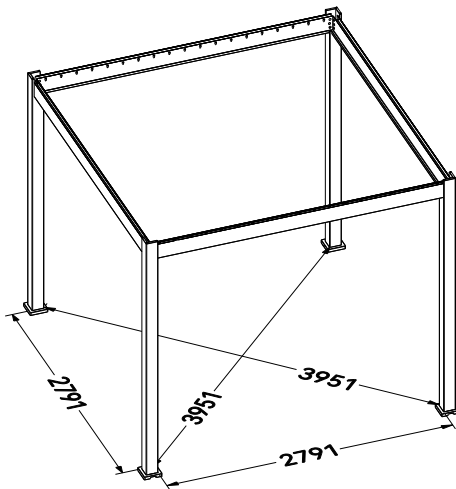

 
Place the external light strip, connect it to the controller, and link them together in series.

LED1		4
------	---	---

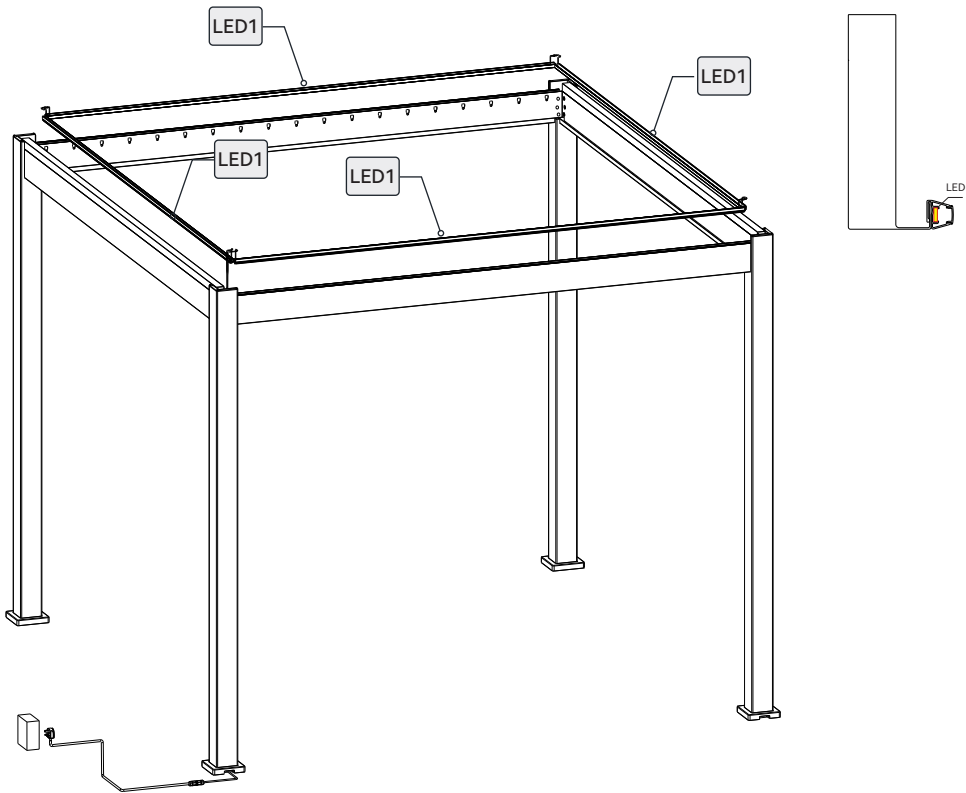



Attention:

Interconnect the LED strips and connect one segment to the controller's LED terminal. After completing connections, securely route the cables into the drainage port.


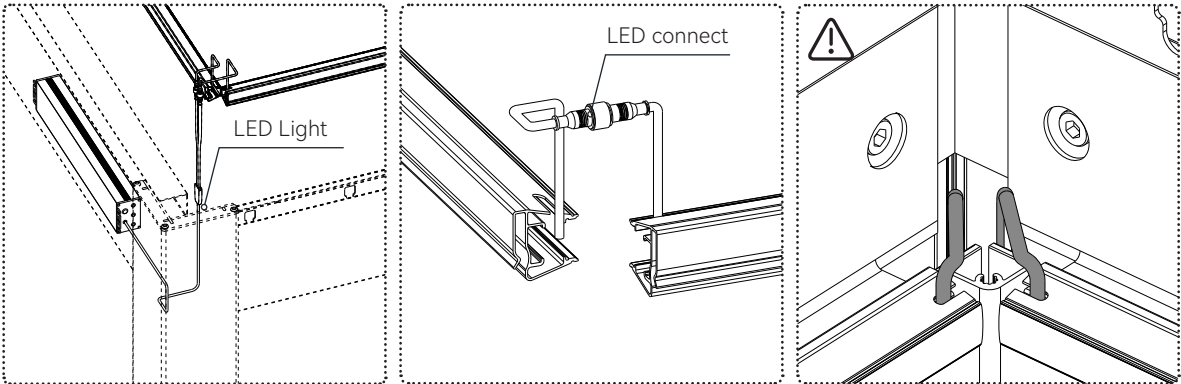



Install the main shaft louvers and secure them using screws.Ensure that the louvers are level.

UO-3	 M14	1
------	---	---

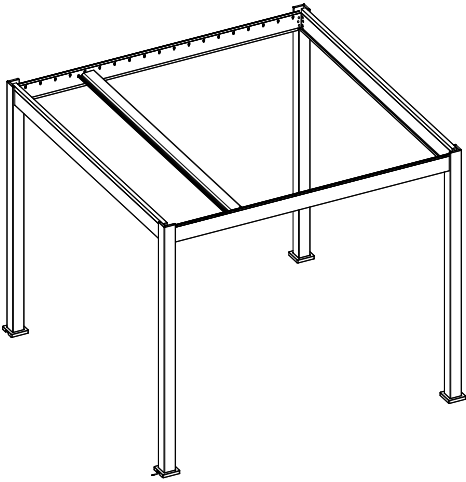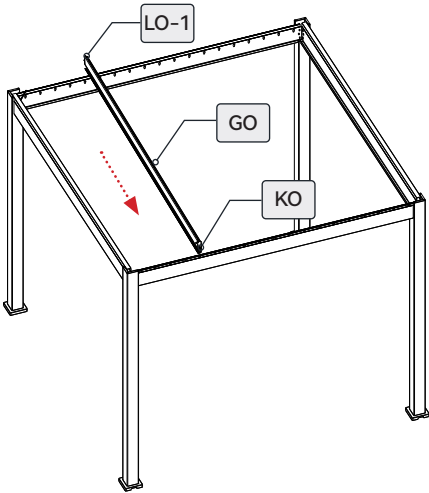

Attention:
Tighten using a wrench.

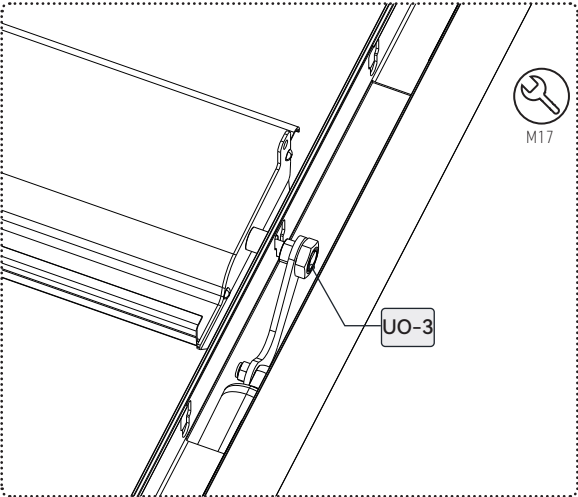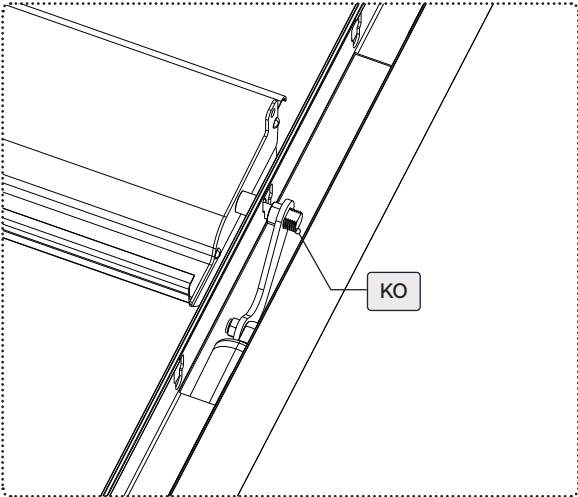

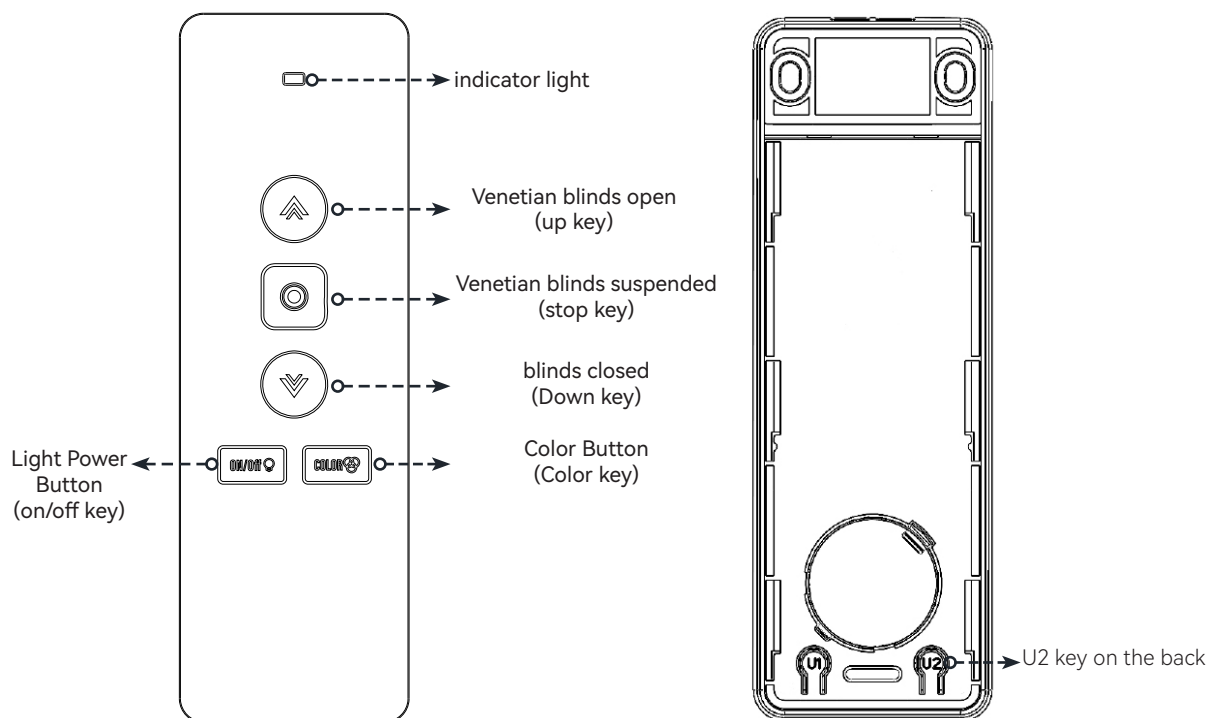

RGB Lighting Function

Light Power Button Function:

Short Press: Cycle control for turning the light on/off.

Long Press (2 seconds): Cycle dimming for brightness, gradually dimming and brightening.

Color Button Function:

Short Press: Cycle through 8 color modes: red, green, blue, yellow, cyan, purple, white, and automatic color changing.

Long Press (2 seconds): Gradual color cycling and color adjustment.


The product also supports the TUYA function. The product can be controlled by downloading TUYA. The user must use this function when the WIFI signal is sufficient.

Reset Network:

Long press the "SET SKY" on the controller for 7 seconds.

The indicator light will stay off for 1 second, indicating that the network has been successfully cleared.



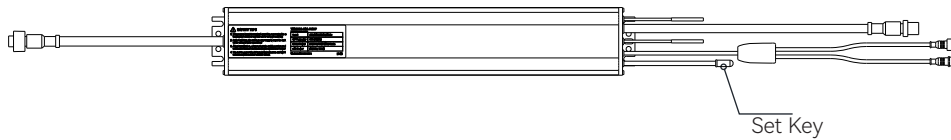

Remote Control Pairing Guide

Below are two methods for pairing the remote control, clearly organized and easy to follow:

Pairing Method 1:

Enter Pairing Mode:

Press and hold the "SET KEY" on the controller for 2 seconds. The indicator light will start blinking slowly, indicating that it has entered pairing mode.

Complete Pairing:

Press and hold the "Stop key" on the remote control for 2 seconds. The indicator light will stay off for 1 second, indicating that the remote control has been successfully added.

Pairing Method 2:

Enter Pairing Mode:

Press and hold the "U2 Button" on the back of the already paired remote control for 2 seconds. The indicator light will start blinking slowly, indicating that it has entered pairing mode.

Add a New Remote Control:

Press and hold the "Stop key" on the remote control that needs to be paired for 2 seconds. The indicator light will stay off for 1 second, indicating that the new remote control has been successfully added.

Notes:

Ensure that the remote control and controller are within the effective operating range.




If the indicator light does not change as expected, repeat the operation or check if the device is functioning properly.

Different brands or models of devices may have different operating procedures. Please refer to the specific device's user manual.

Energize the pergola and manipulate the remote control to rotate the shutters to a 90-degree position, thereby facilitating the subsequent installation of additional shutters.


E-CR		1
------	---	---

Install the battery(purchase separately) into the remote control(E-CR) Tip. The battery modle we suggest is CR2450.

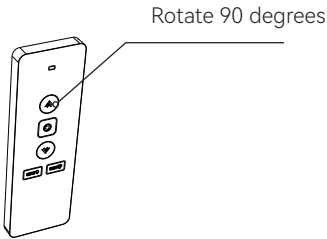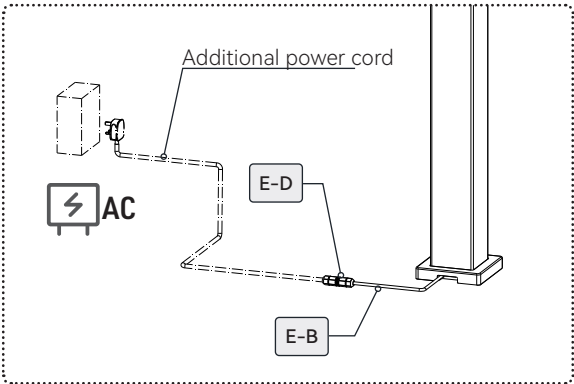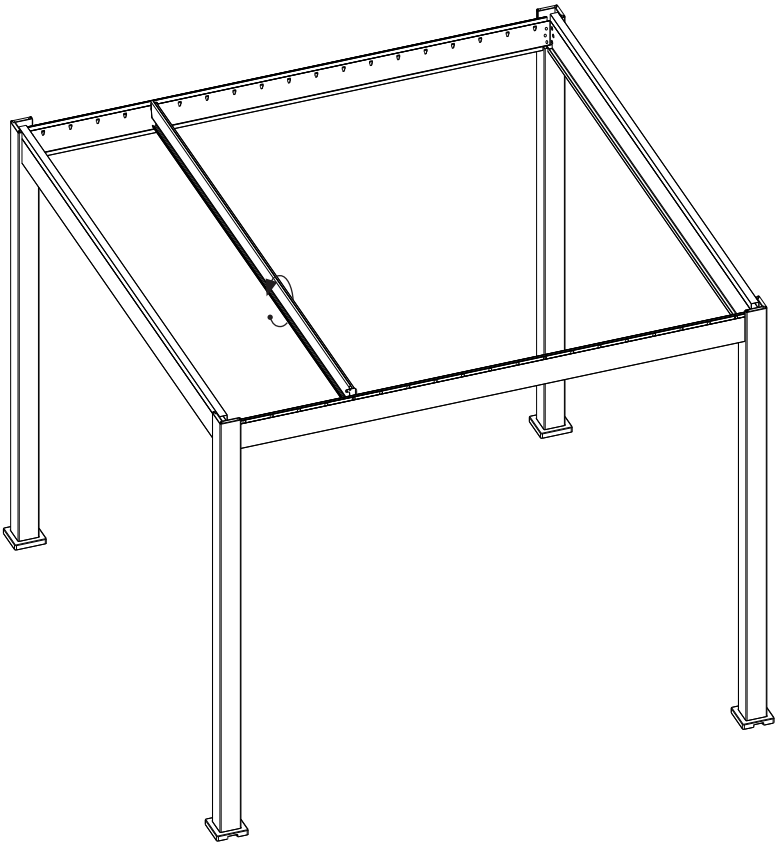

Install the louver for the pergola and attach the end caps on both sides.

SO		38
----	---	----


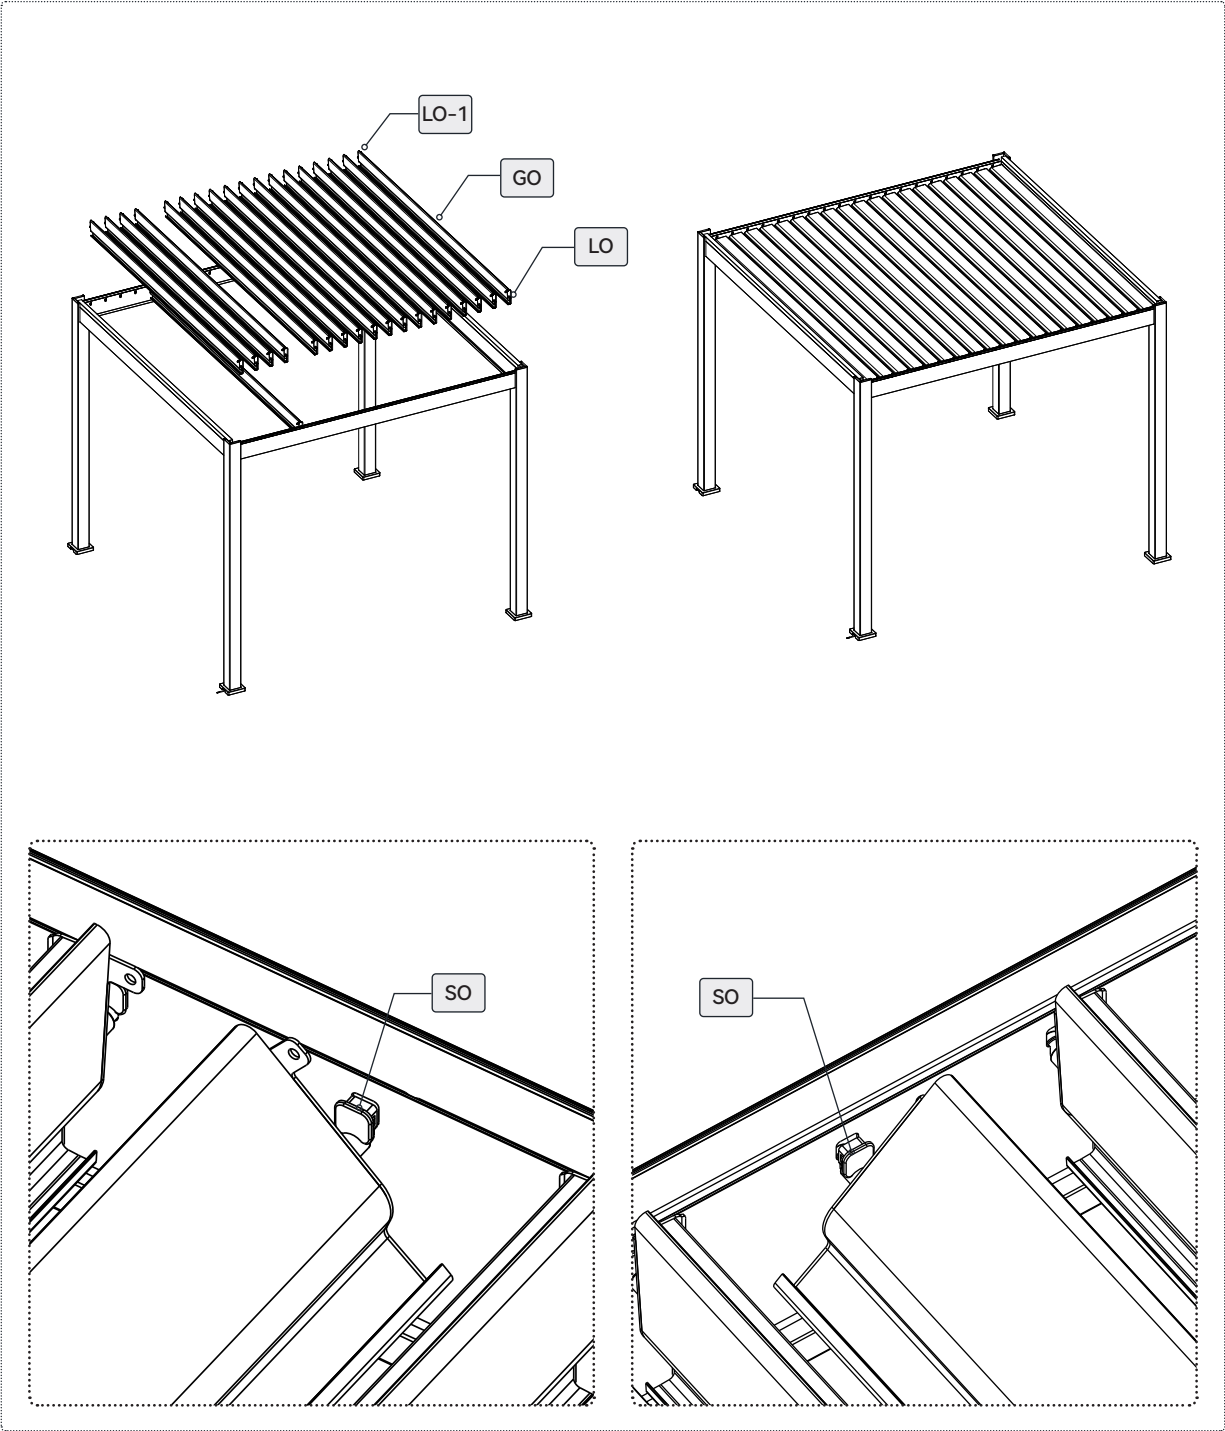


Assemble the connecting angle aluminum with the louver sealing plate and fasten securely using lock nuts and washers.

FO		1
----	---	---

UO		19
VO		19

ZO-1	
ZO-2	
ZO-5	

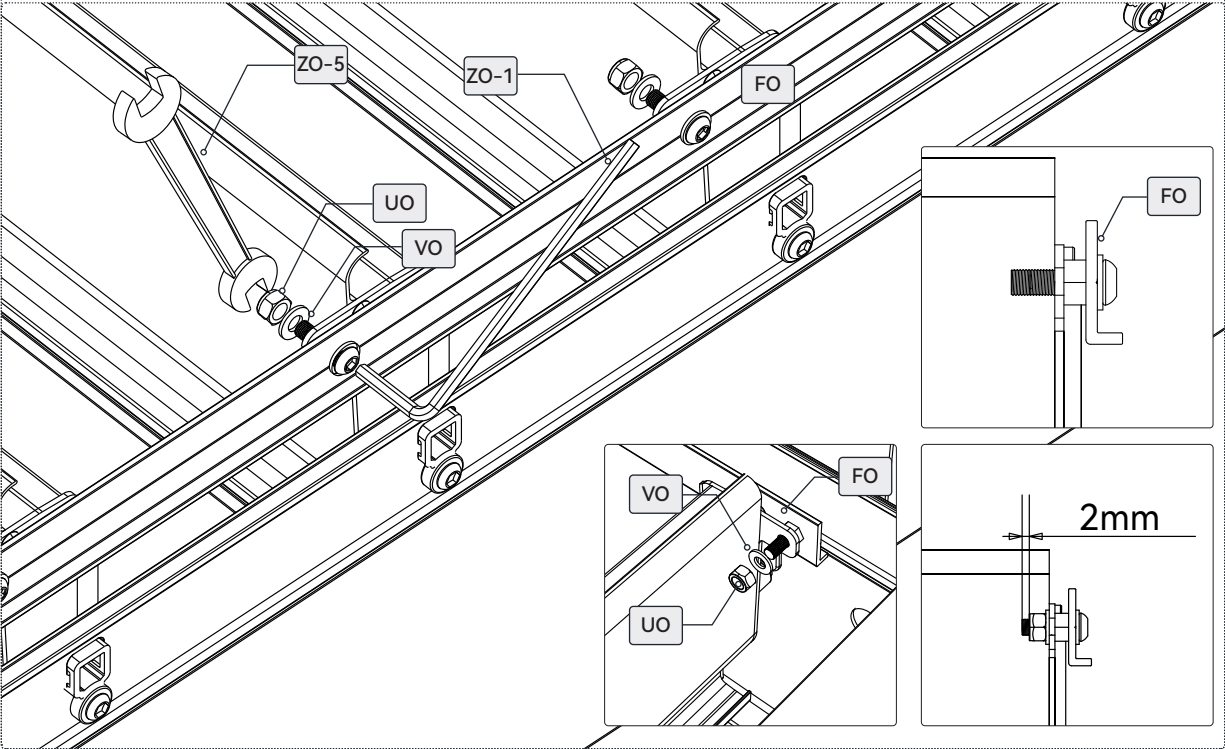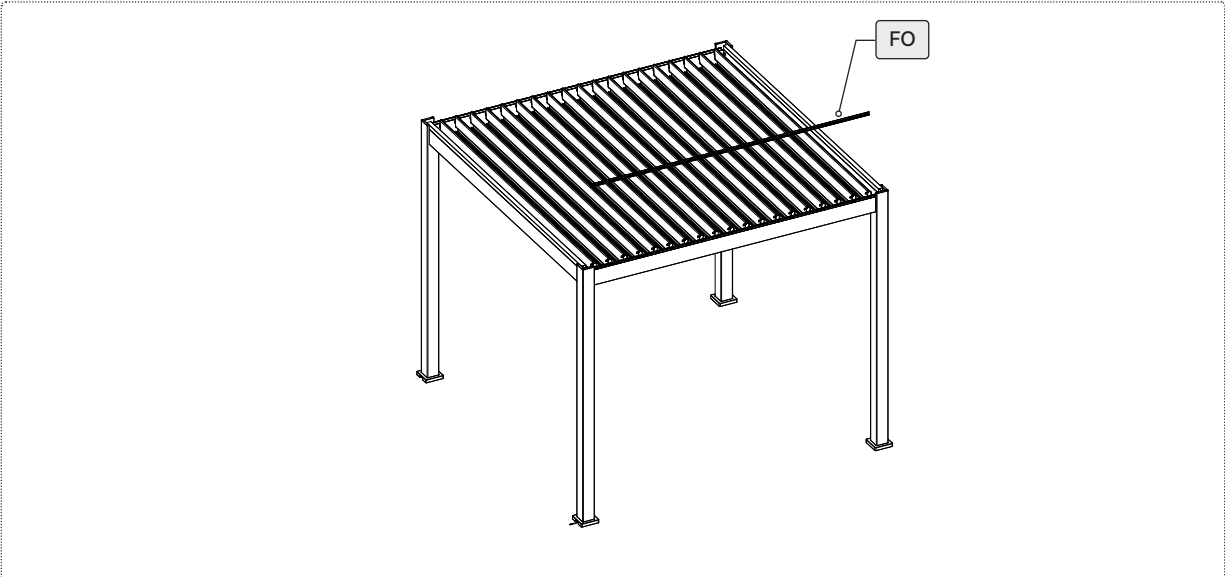

- 1. Before completing the installation, a function test of the slats is recommended. This helps to identify any damage that may not be visible to the naked eye.
- 2. Close the slats and ensure that they slide smoothly into each other. There should be no contact, misalignment, or scraping noises between the slats.
- 3. Install the end cap onto the beam and secure the mounting holes with plastic covers.

DO		2	RO		24
----	---	---	----	---	----

