


GUTROOF

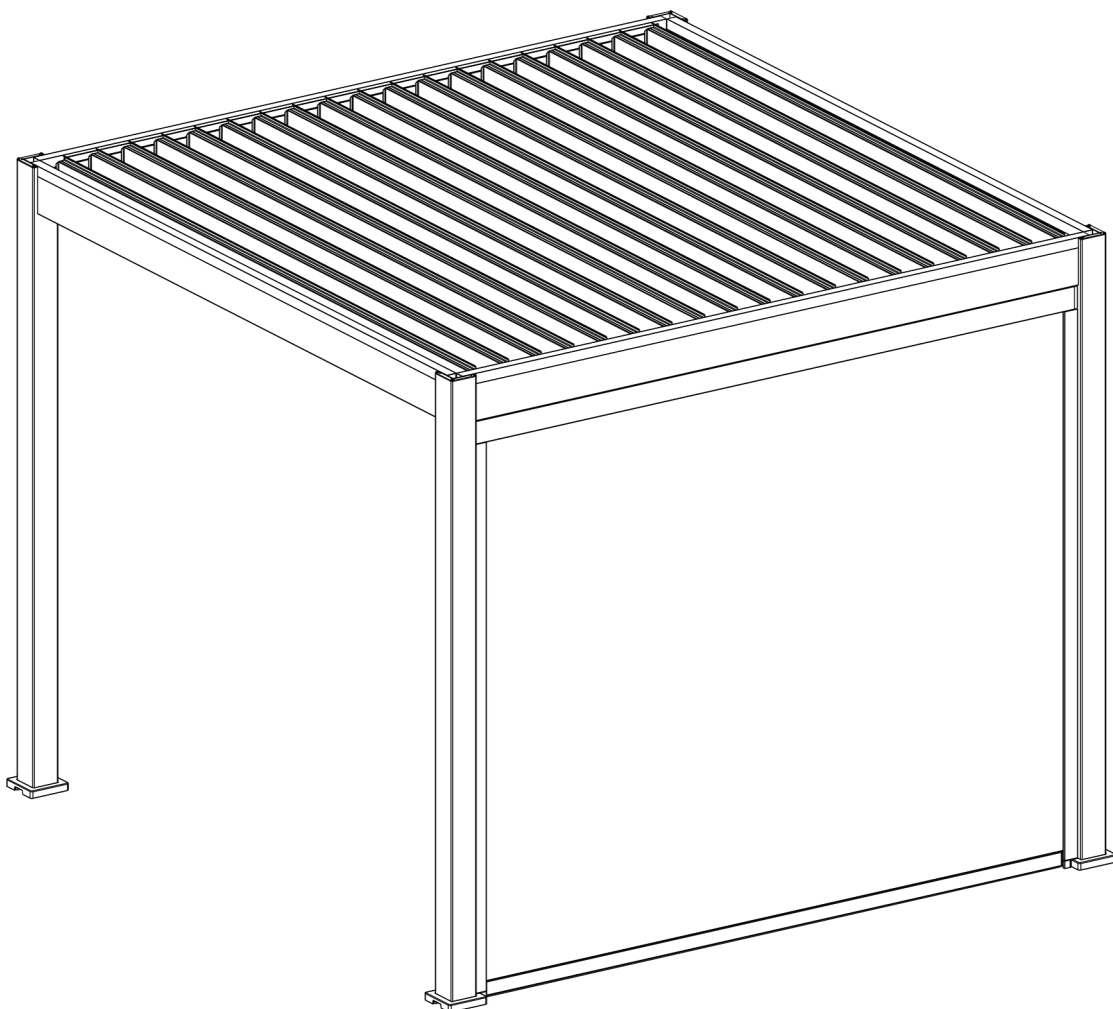

ELEGANCE/DELUXE/FUSION


ROLETA OPUSZCZANA

Instrukcja montażu


Osłona przeciwwiatrowa

Przed rozpoczęciem montażu przeczytaj dokładnie poniższe instrukcje. Wszelkie błędy popełnione podczas instalacji nie są objęte gwarancją produktu. Jeśli masz jakiegokolwiek pytania podczas instalacji, zadzwoń do nas.


NIEZBĘDNE NARZĘDZIA I ŚRODKI BEZPIECZEŃSTWA (NIE DOŁĄCZONE)

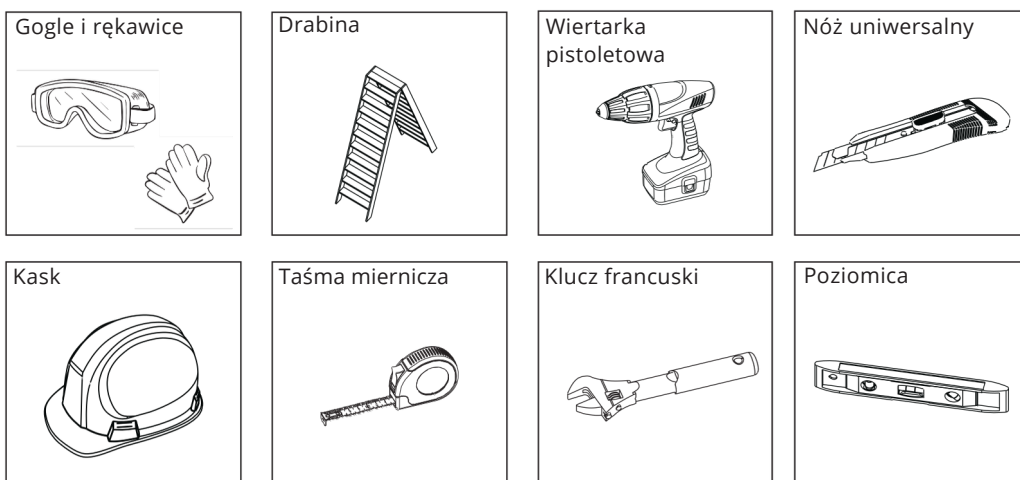


POMIAR PODSTAWY 2D i 3D

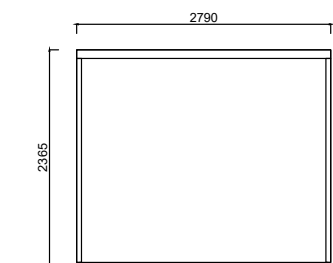


2790x2365

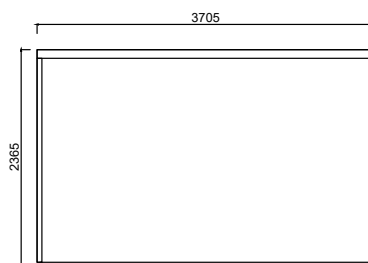

3705x2365


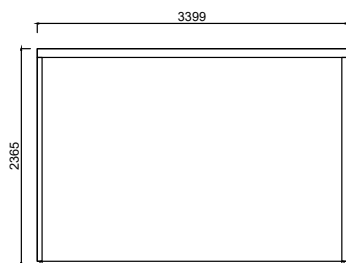



3399x2365

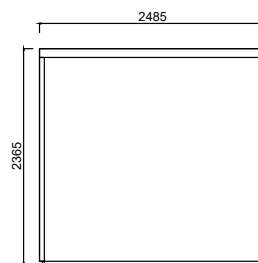

2485x2365


LISTA KARTONÓW

ODNOŚNIK	IKONA		ILOŚĆ
A	 		1
	A-1		1
	A-2		1
	A-3		1
	A-4		4
B	 		1
	B-1		1
	B-2		1
	B-3		1
	B-4		4
C-1			1


ODNOŚNIK	IKONA	ILOŚĆ
K1	 5x25	8
K2	 4mm	1

ODNOŚNIK	IKONA	ILOŚĆ
K3	 8mm	1


Przed montażem upewnij się, że wymiary są prawidłowe, jak pokazano na poniższym schemacie, mianowicie $A1=A2=A3$ i $AX=BX$. Nie instaluj szyby przedniej, jeśli wymiary są nieprawidłowe. Dostosuj gotowy rozmiar przed montażem.

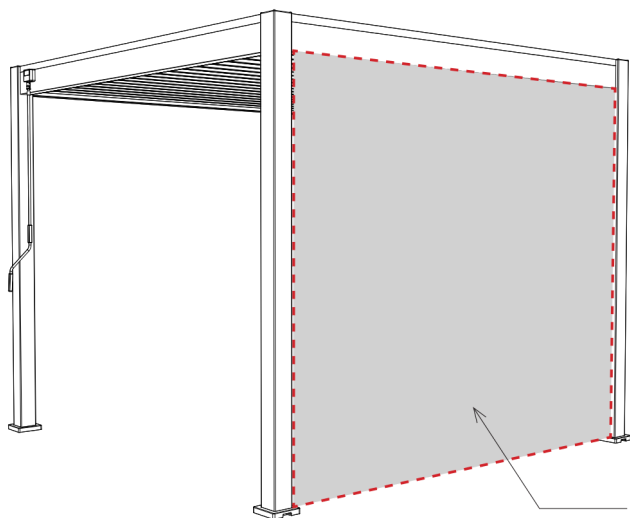

Proszę wybrać stronę, na której ma zostać zamontowana szyba przeciwwiatrowa.

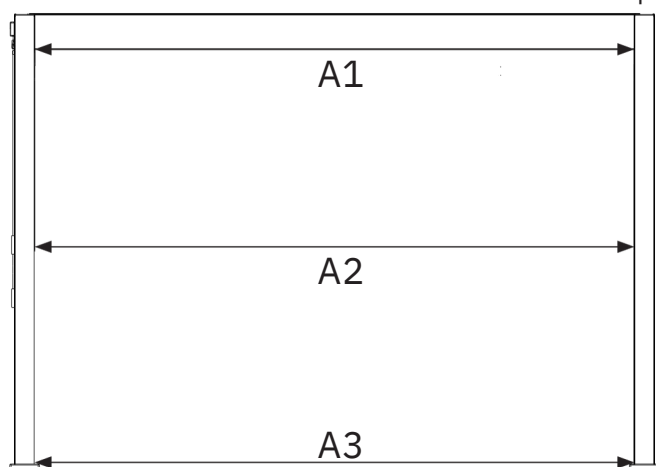


$$A1=A2=A3$$

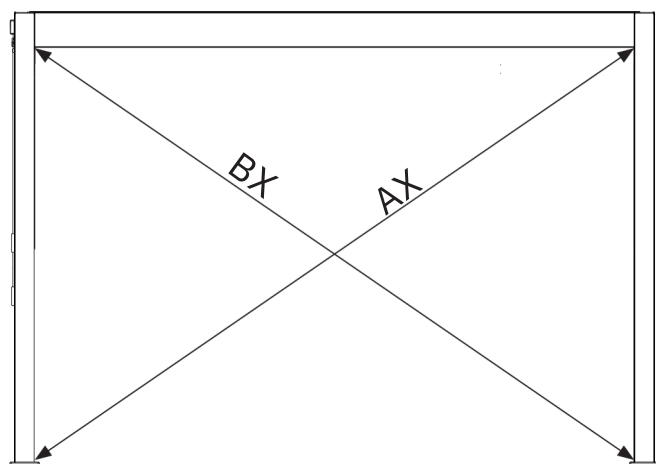


$$AX=BX$$

1


Zdemontuj słupki A i B, jak pokazano powyżej.

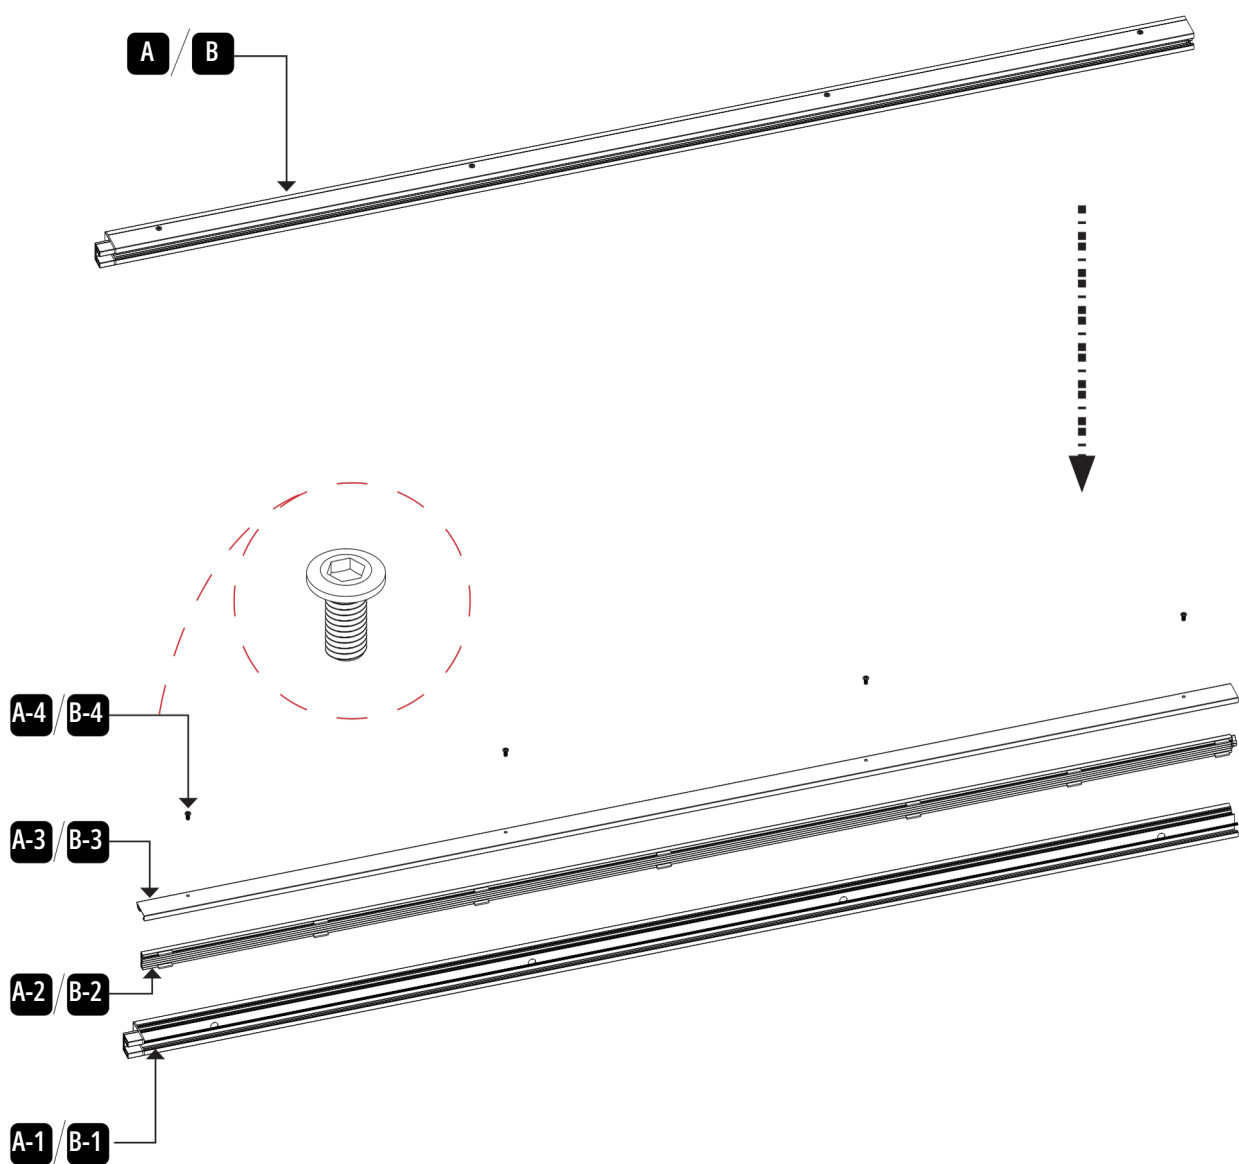




Włóż A-1/B-1 do bocznego panelu skrzynki osłony przeciwwiatrowej (C1).

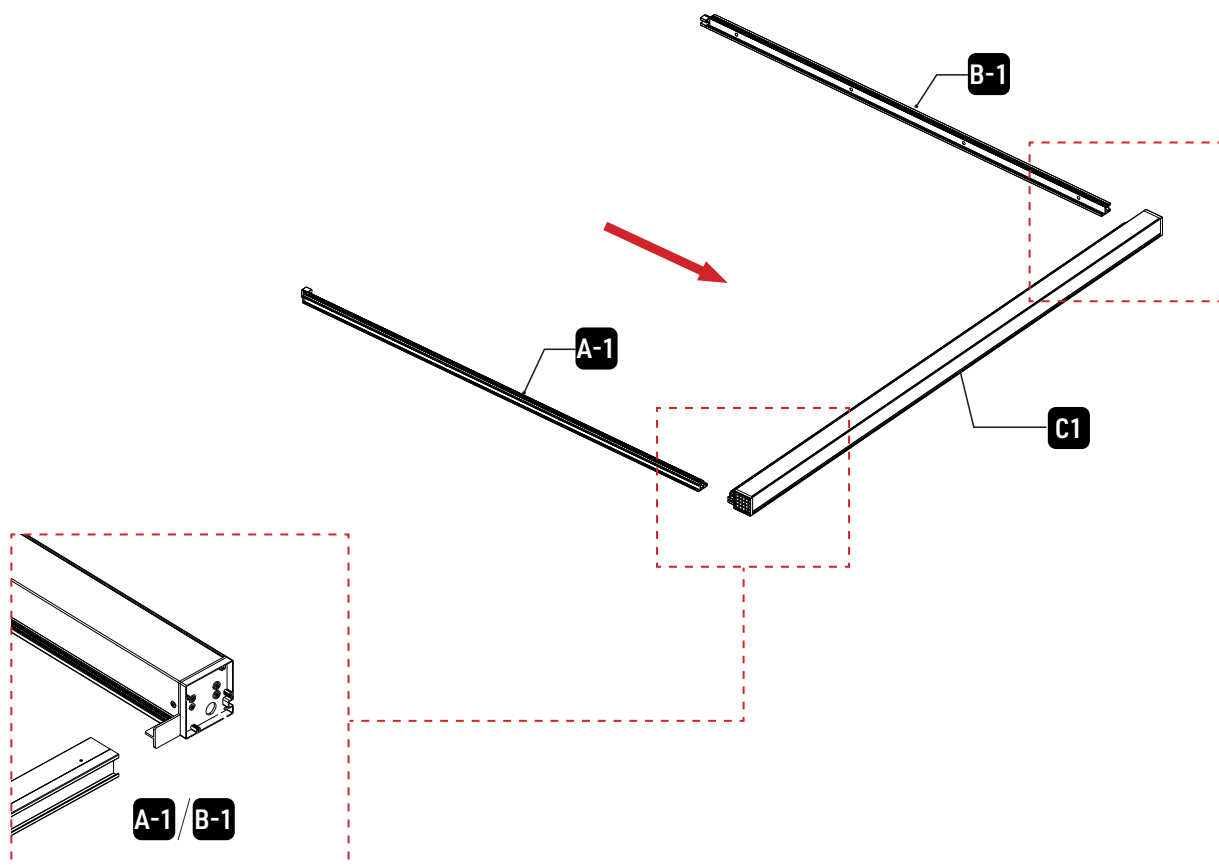



Nie wolno huścić A-1 i B-1 na boki podczas przesuwania żaluzji pod pergolą. Należy uważać, aby przesuwać żaluzję w pozycji poziomej i nie przesuwać jej w pozycji pionowej.

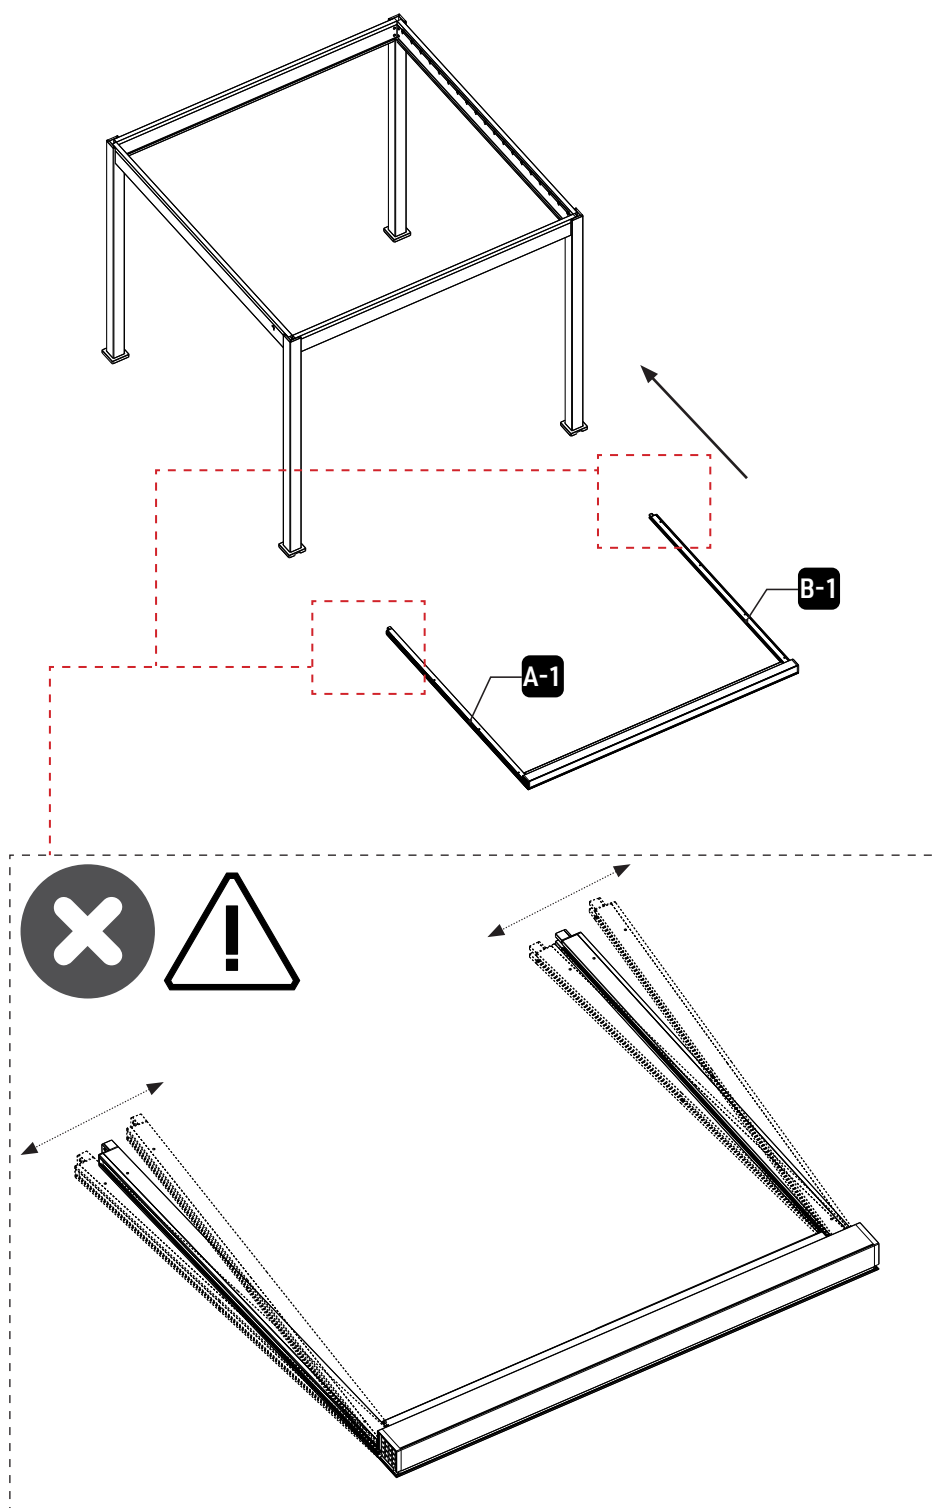


Przesuń żaluzję pod pergolą i ustaw całą żaluzję pionowo. Nie przesuwaj A-1 i B-1 do przodu i do tyłu po ich uniesieniu, lecz przemieszczaj żaluzję jako całość.

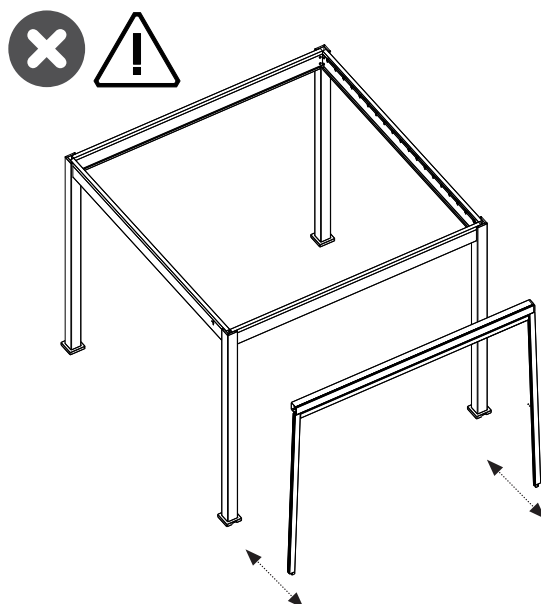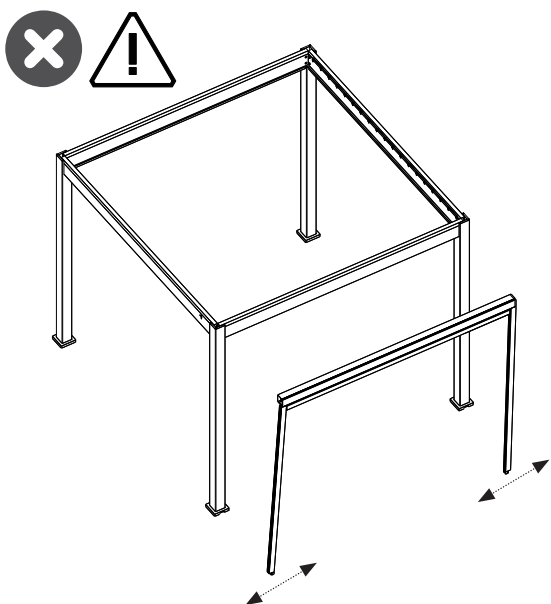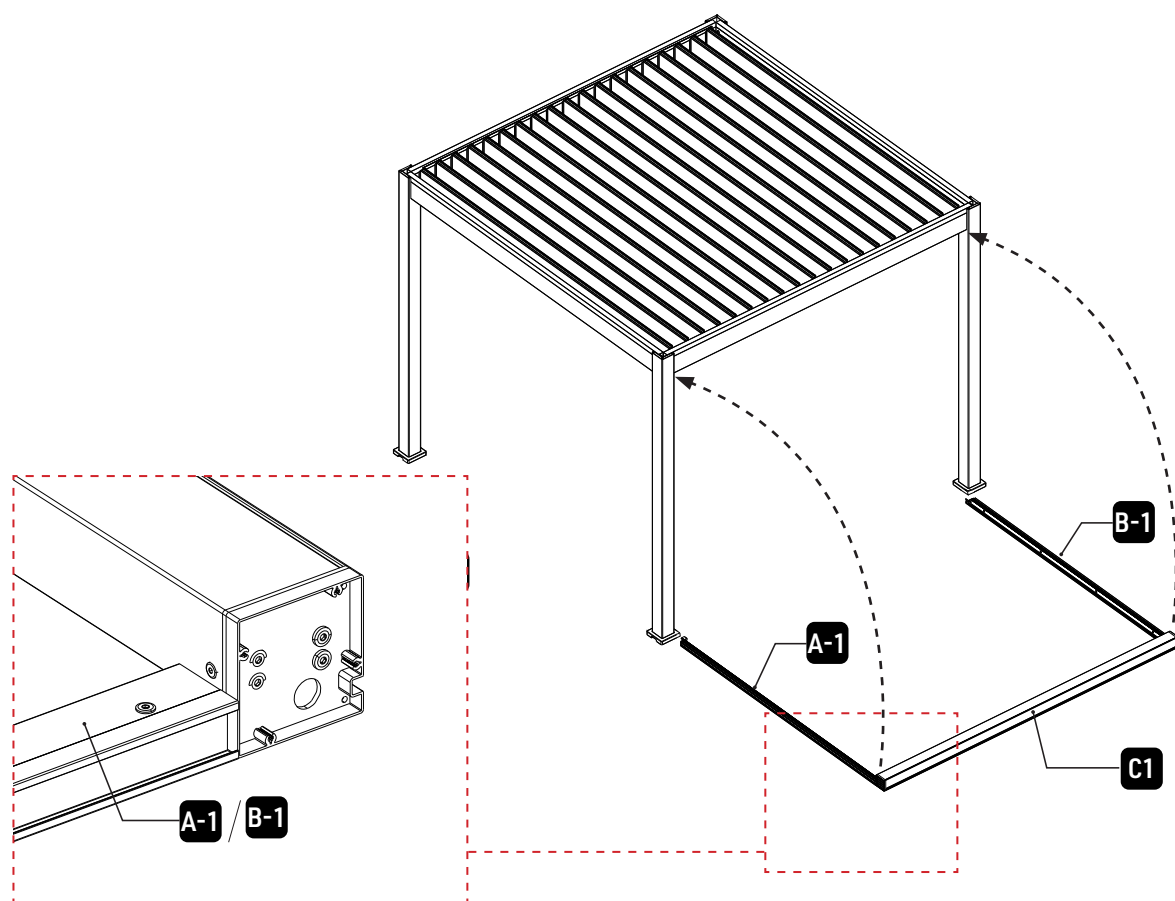




Podnieś ramę i upewnij się, że zewnętrzna powierzchnia skrzynki na żaluzję jest wypoziomowana z zewnętrzną powierzchnią belki.

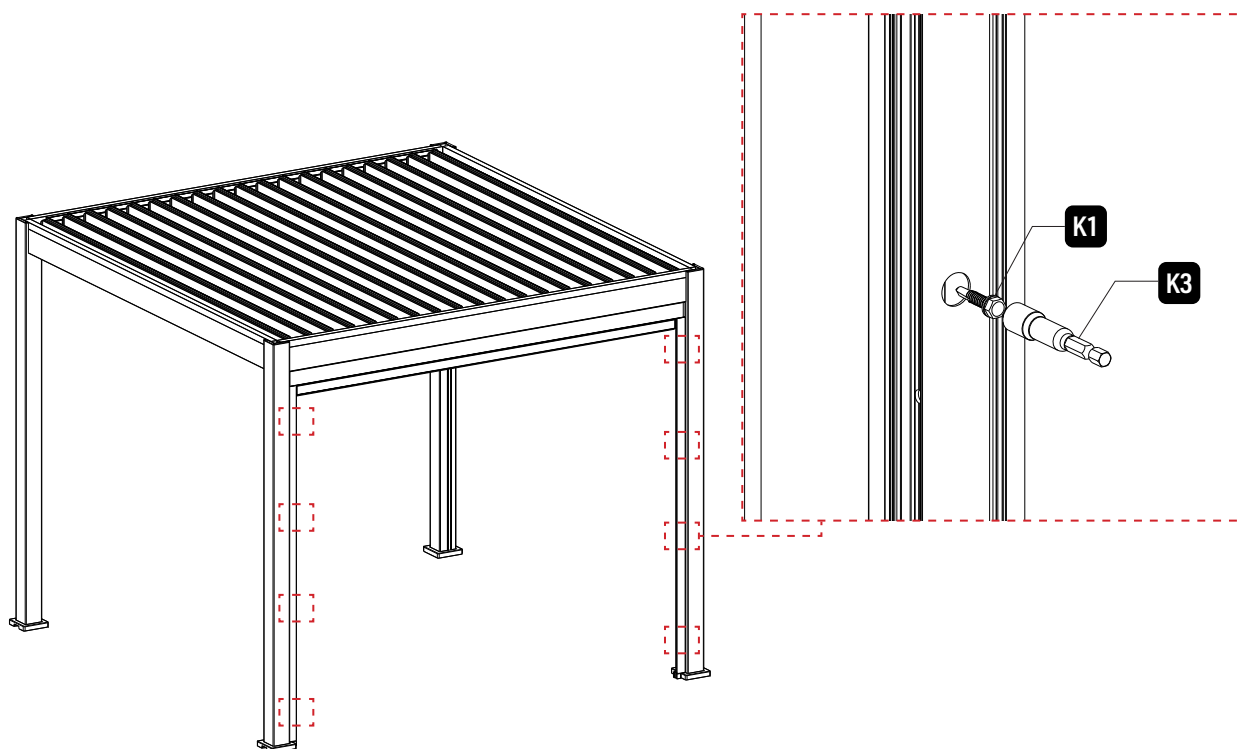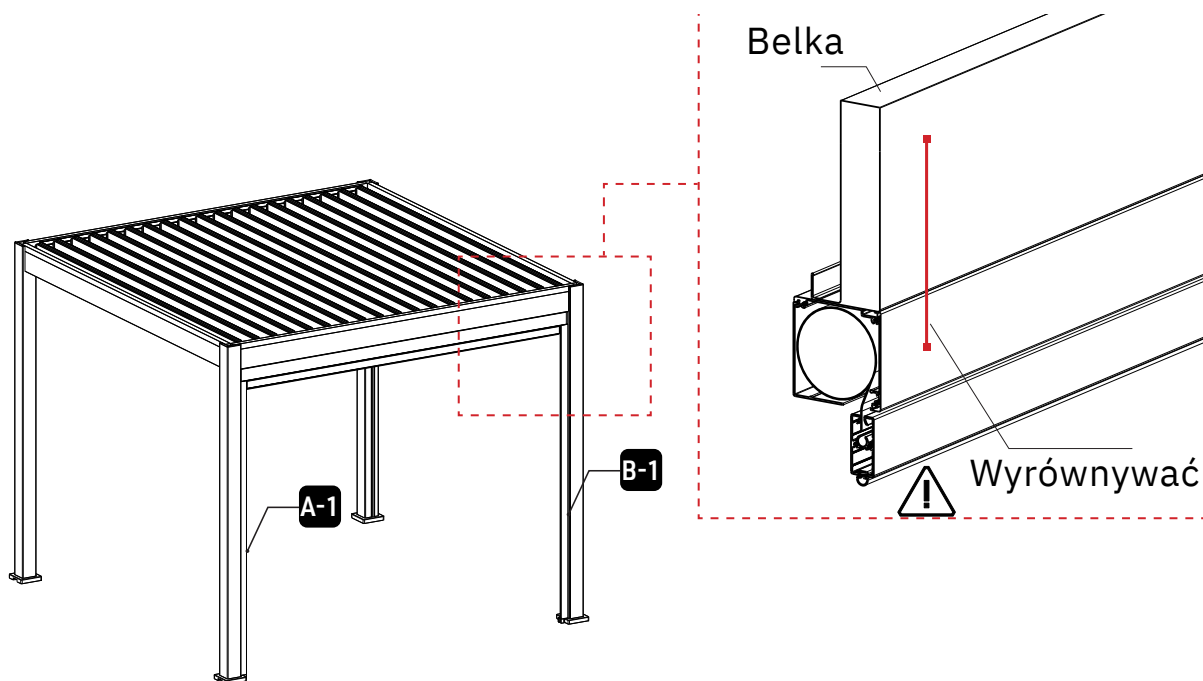


- a. Wsuń A-2 ukośnie do kanału A-3.
- b. Upewnij się, że wycięcie w A-2 styka się z boczną zamkiem błyskawicznym wzdłuż ekranu.
- c. Umieść A-2 pionowo w kanale A-1.
- d. Powtórz tę samą procedurę po drugiej stronie.

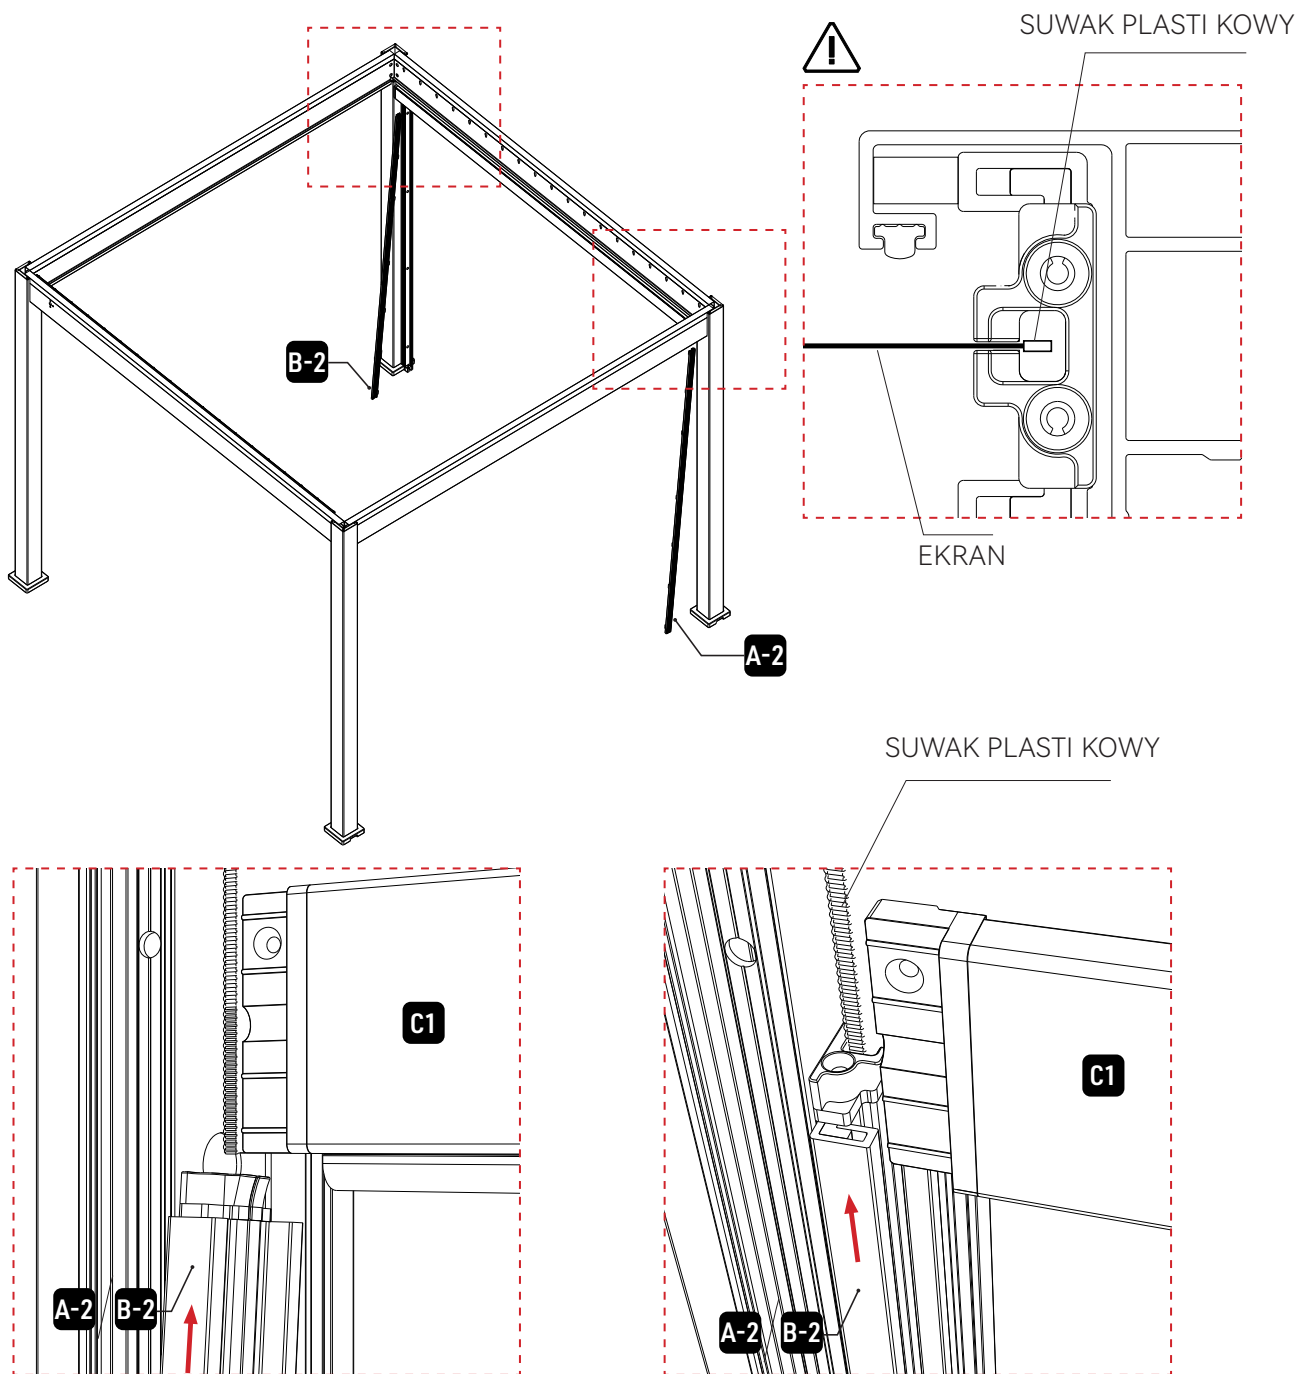



- a. Włóż nakładkę słupka (A-3/B-3) na słupek.
- b. Umieść blok gąbkowy we właściwej pozycji (patrz poniżej).
- c. Lekko dokręć śrubę (nie za mocno).
- d. Przetestuj ruch siatki w górę i w dół.
- e. Dokręć wszystkie śruby, gdy potwierdzisz, że ekran działa prawidłowo.

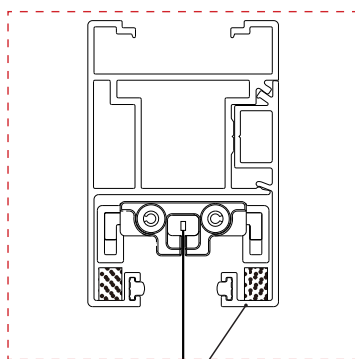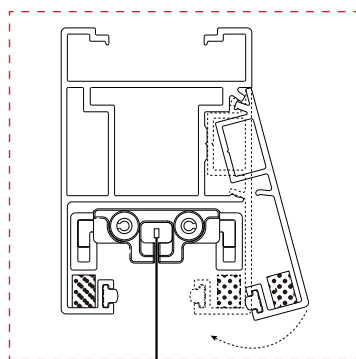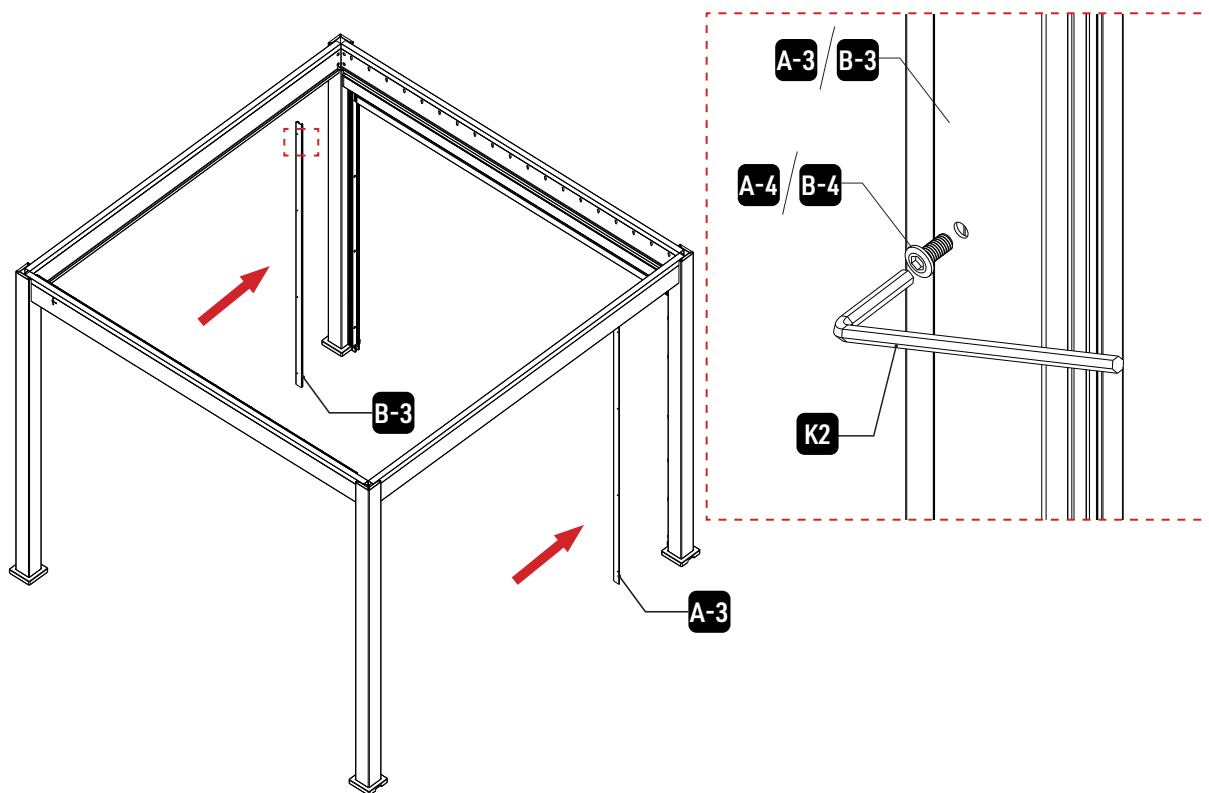

Upewnij się, że piankowa uszczelka po bokach A-2/B-2 może zostać wsunięta w rowek U ramy osłony przeciwwiatrowej.

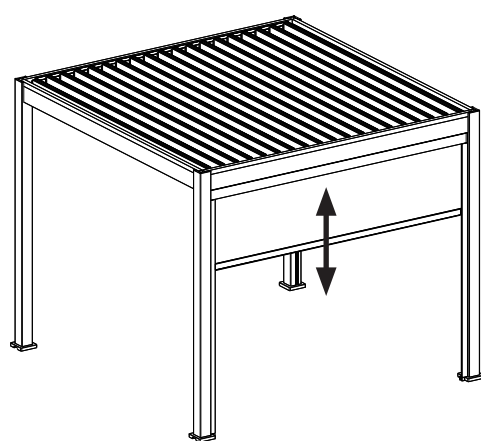

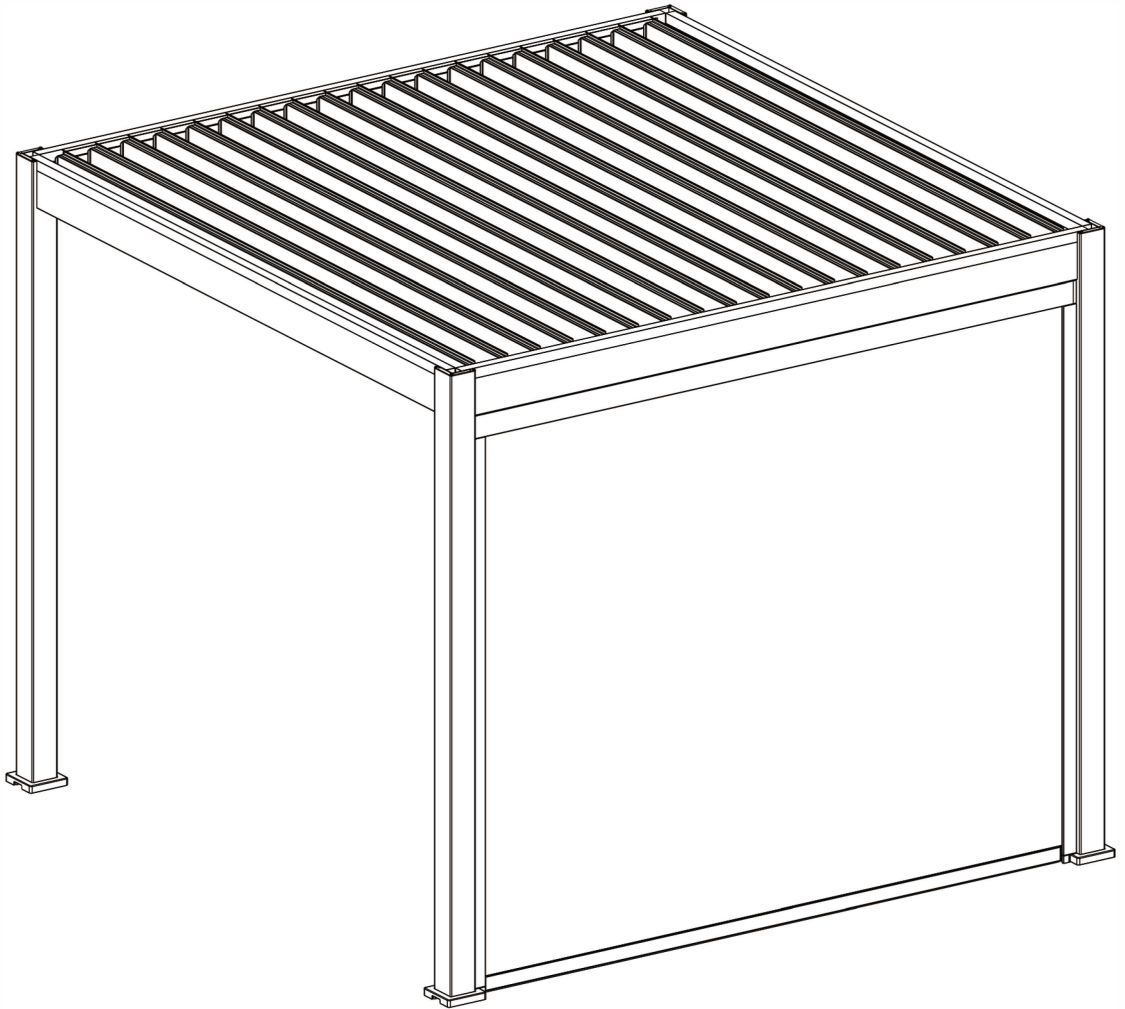

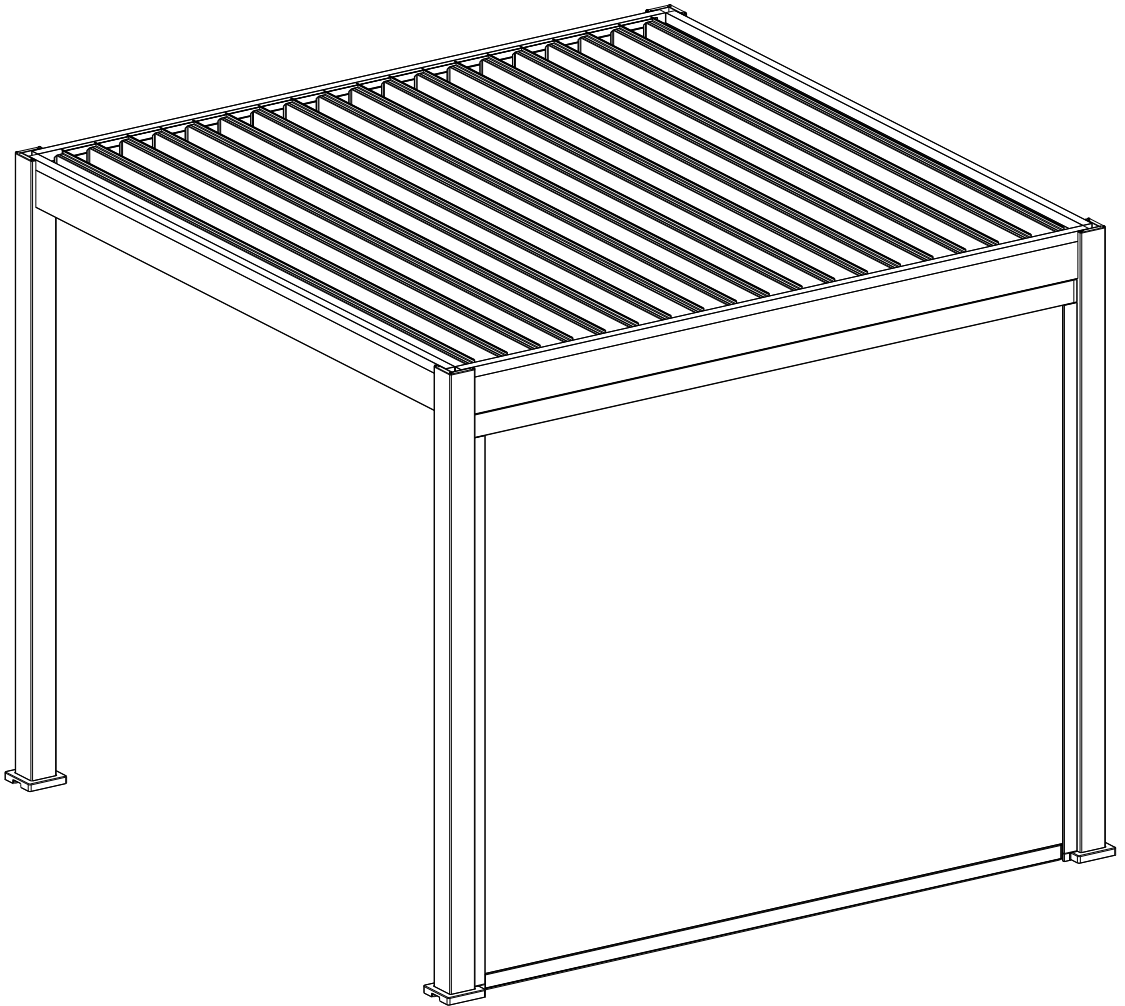


Wind Screen

Assembly Instructions


Wind Screen

Please read the following instructions completely before you begin assembly. Any errors made during installation are not covered by the product's warranty. If you have any questions during the installation process, please call us .



NECESSARY TOOLS AND SAFETY GEAR(NOT SUPPLIED)

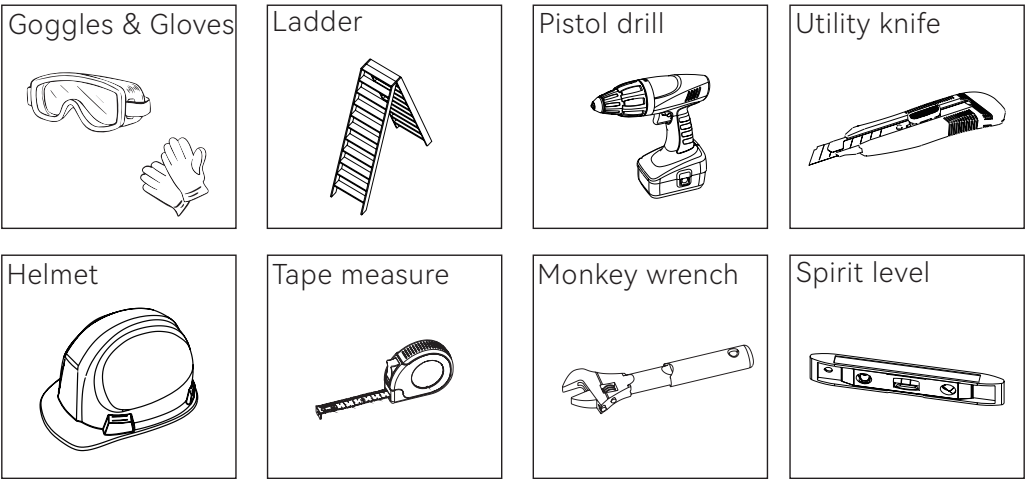

2D FOOTING MEASUREMENT

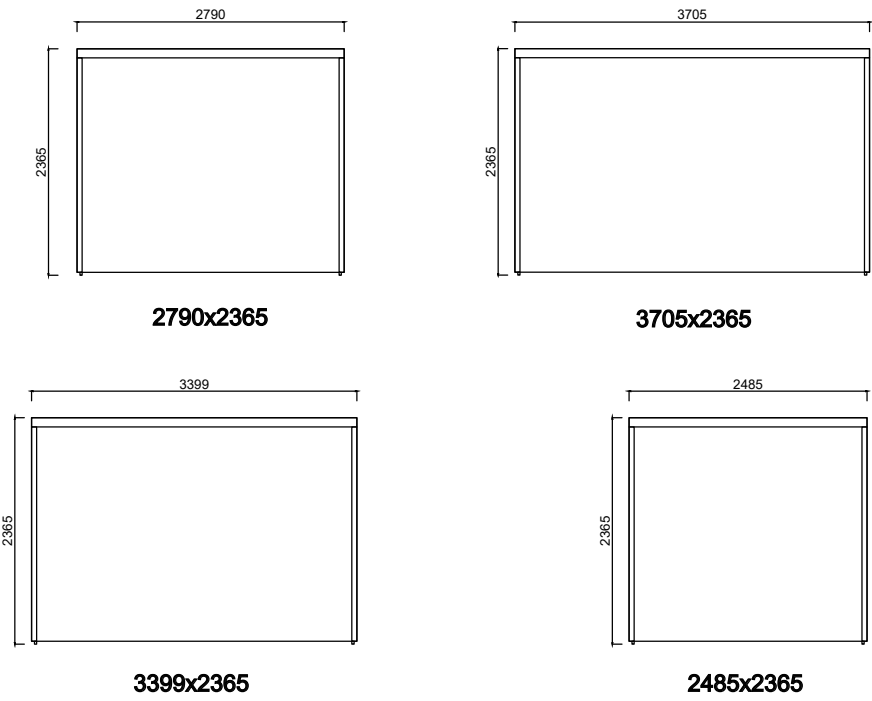

CARTON LIST


REF	ICON		QTY
A		 	1
	A-1		1
	A-2		1
	A-3		1
	A-4		4
B		 	1
	B-1		1
	B-2		1
	B-3		1
	B-4		4
C-1			1

REF	ICON	QTY
K1		8
K2		1


REF	ICON	QTY
K3		1

Before installation, please make sure the dimension should be correct as the diagram shows below, namely, $A1=A2=A3$ and $AX=BX$.


Please do not install the wind screen if the dimension is incorrect. Please adjust the finished size before installing.

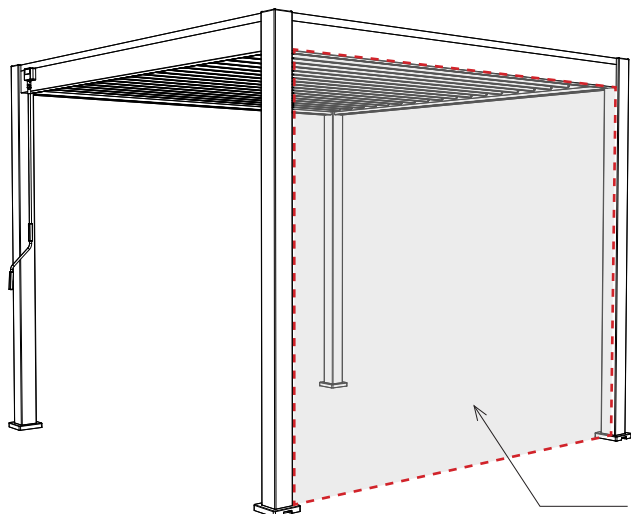

Please choose which face to install the wind screen.

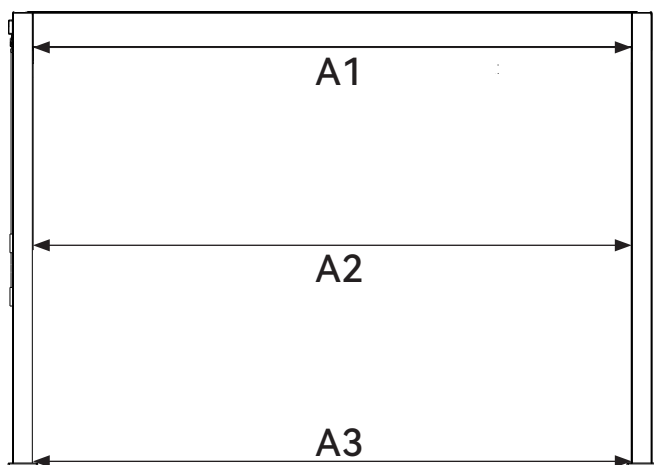


$$A1=A2=A3$$

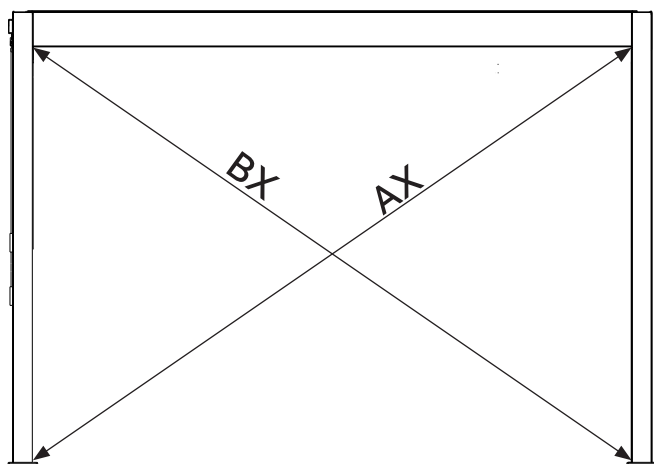

$$AX=BX$$


1

Disassemble the post A and B as shown above.

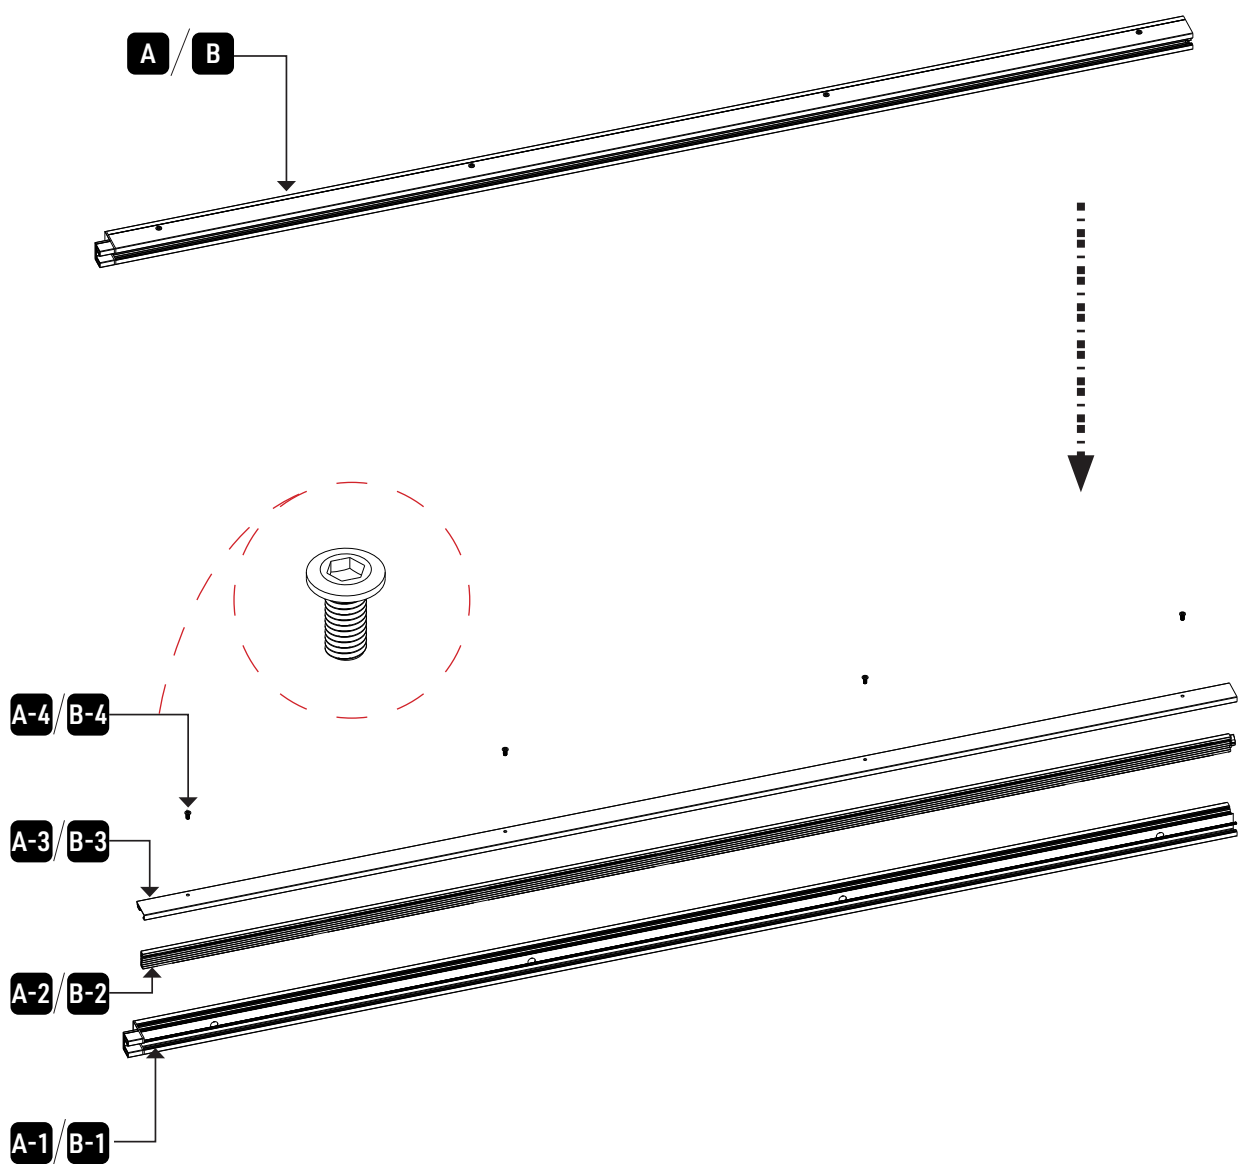


2




Insert A-1/B-1 into the side panel of wind screen box (C1).

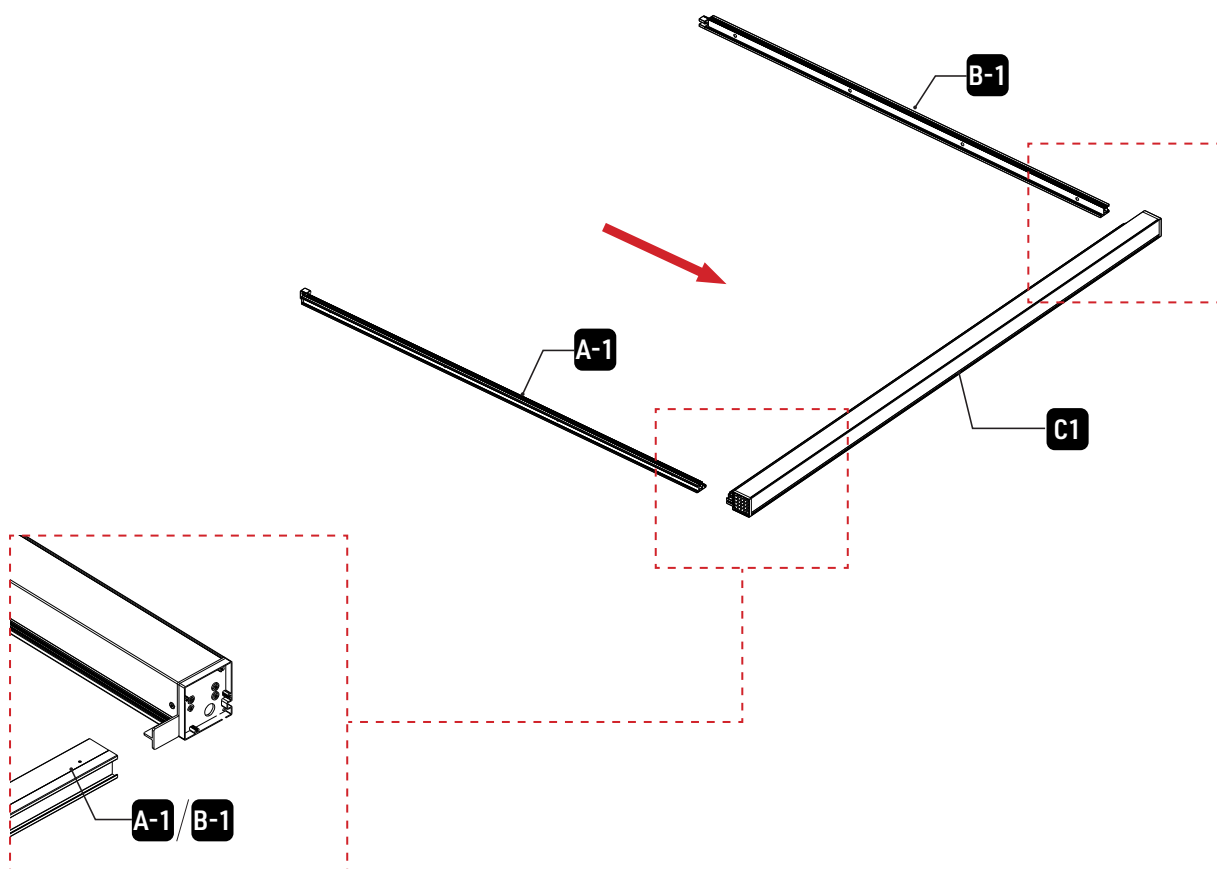





Do not swing A-1 and B-1 from side to side when moving blind under the pergola. Be careful to move the blind in a flat position and don't move the blind in an upright position.

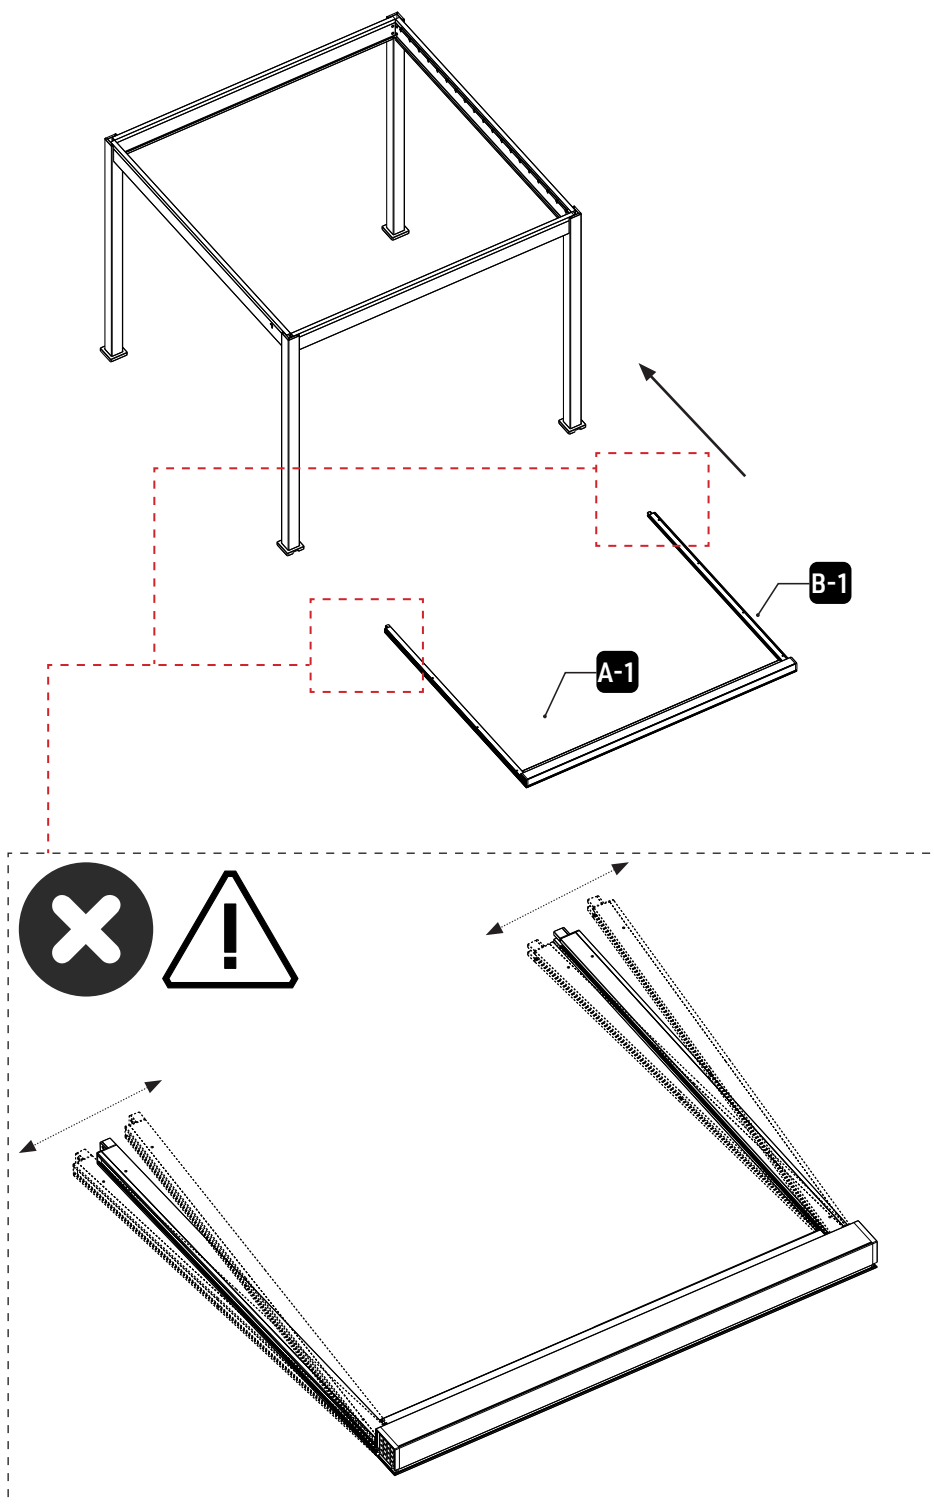


Move blind underneath the pergola and erect the entire blind vertically. Do not move A-1 and B-1 back and forth once they are up, but rather move the blind as a whole.

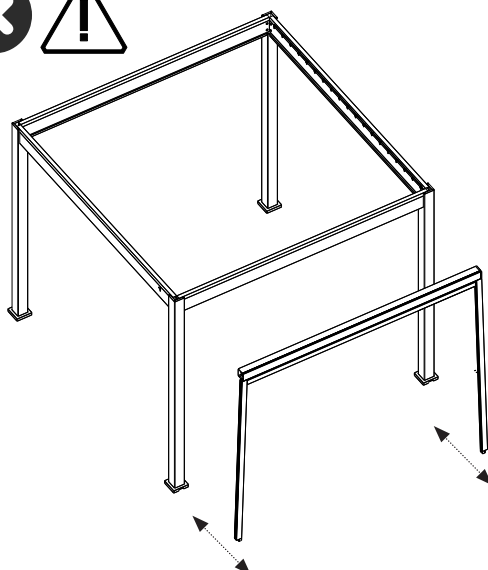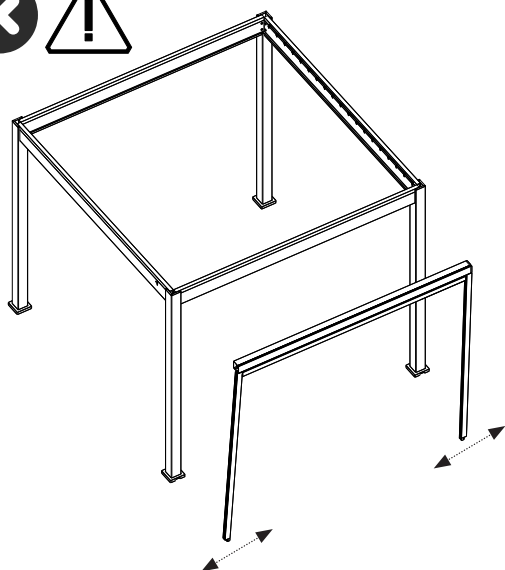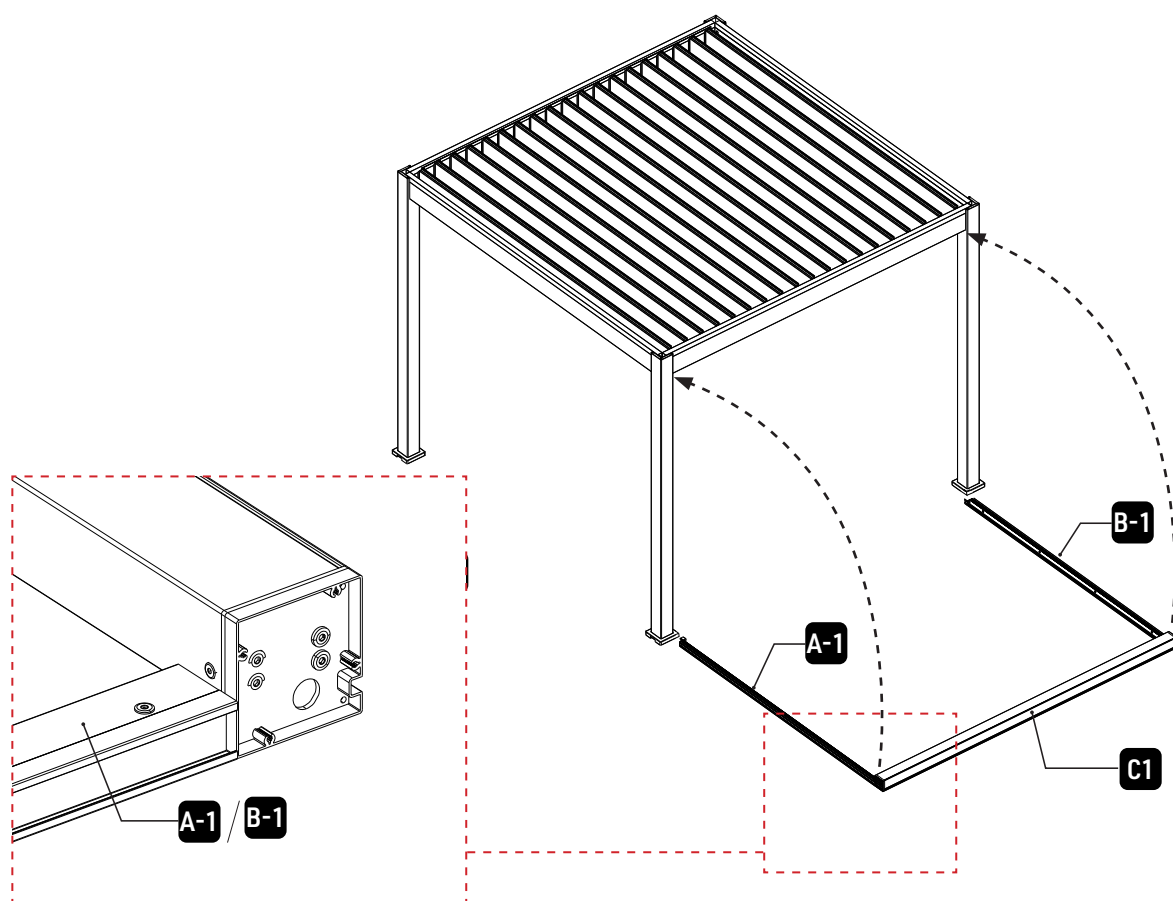



Put the frame up and make sure the outer face of wind screen box align with outer face of beam.

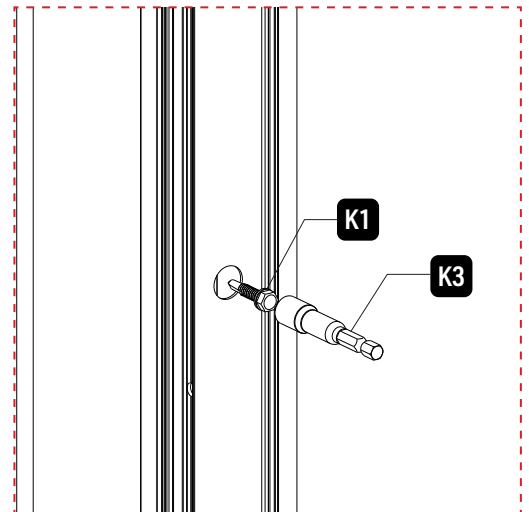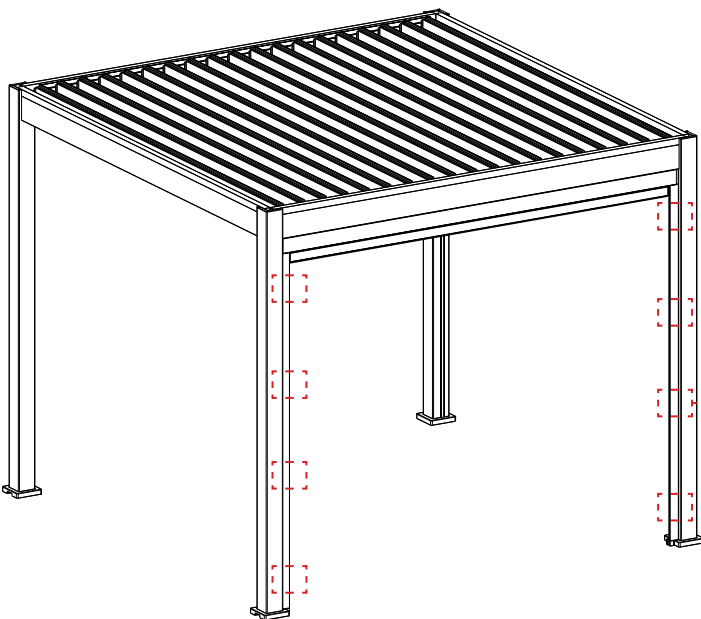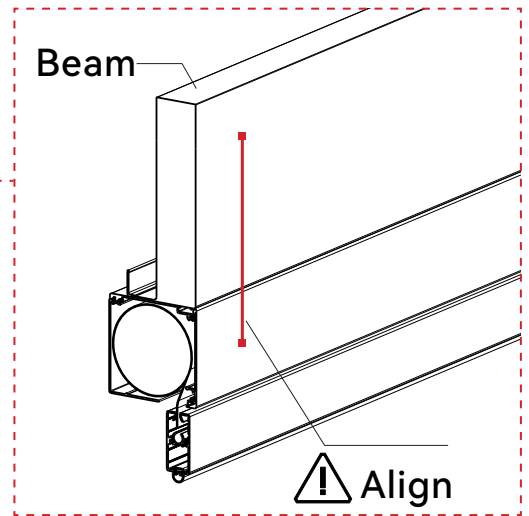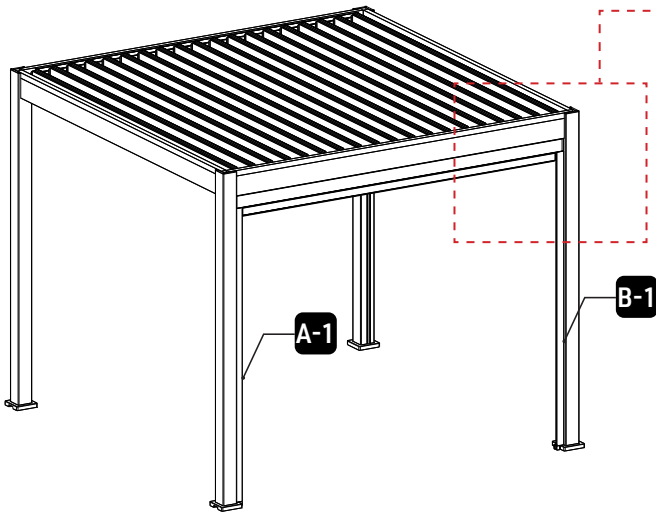

- Insert A-2 diagonally into the channel of A-3.
- Make sure the notch of A-2 meet to side zipper along the screen.
- Place A-2 vertically into the channel of A-1.
- Repeat the same process in the other side.

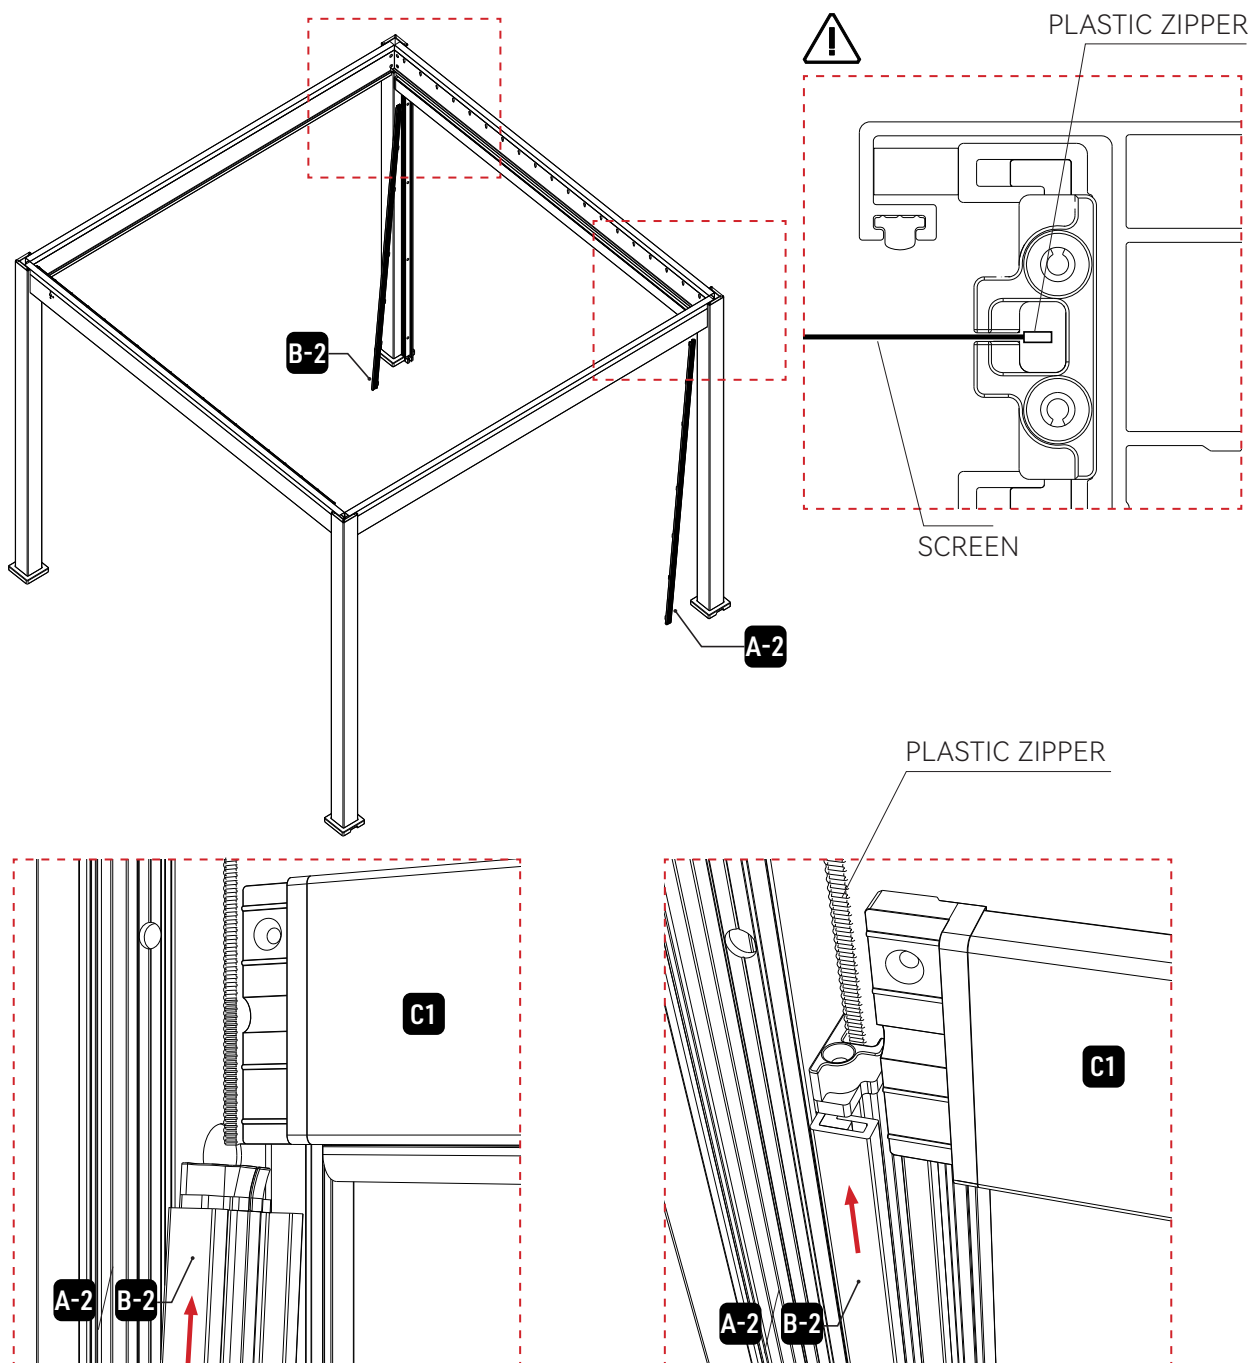

- a. Insert post cover (A-3/B-3) to the post
- b. Settle sponge block into right position (see below)
- c. Fix screw slightly (not to tight)
- d. Test the screen up and down
- e. Fix all screws when you confirm screen is running well.

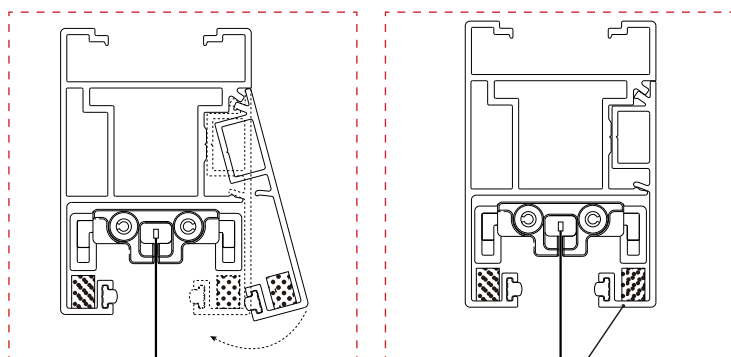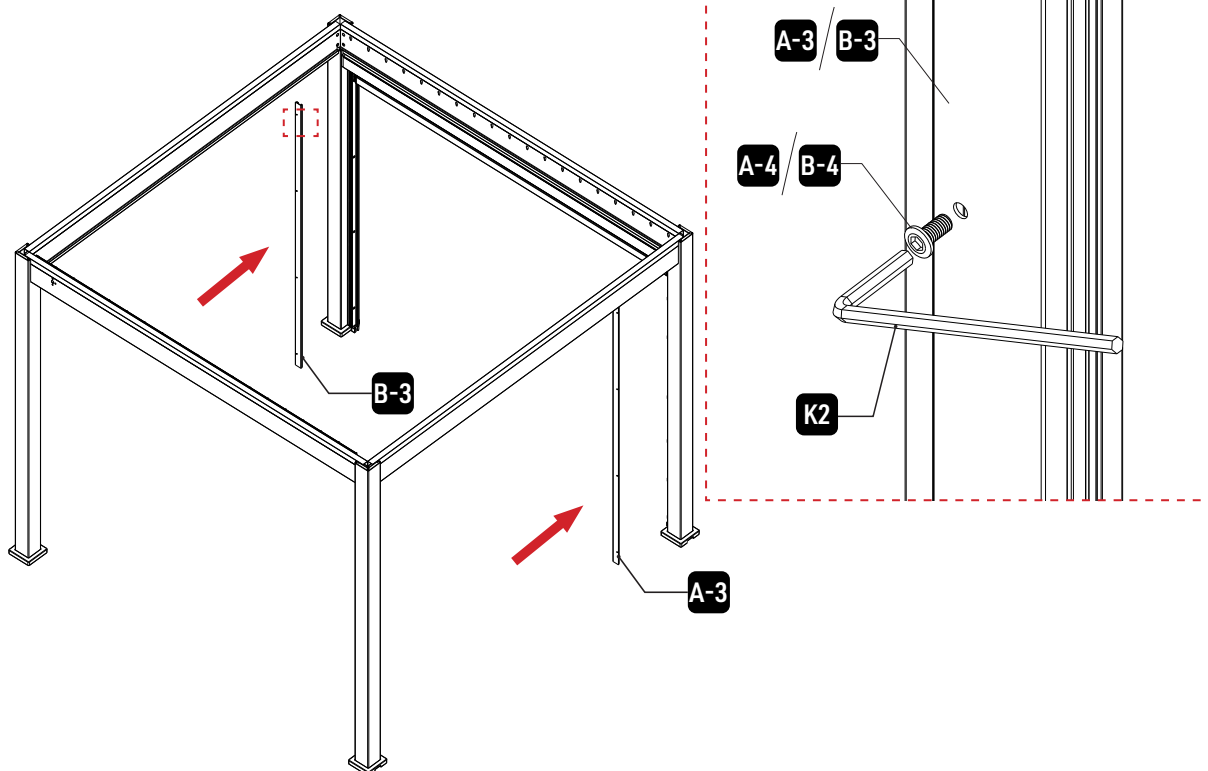

Please make sure the foam strip on the sides of A-2/ B-2 can be inserted into the U groove of the wind screen's frame.

