


GUT ROOF

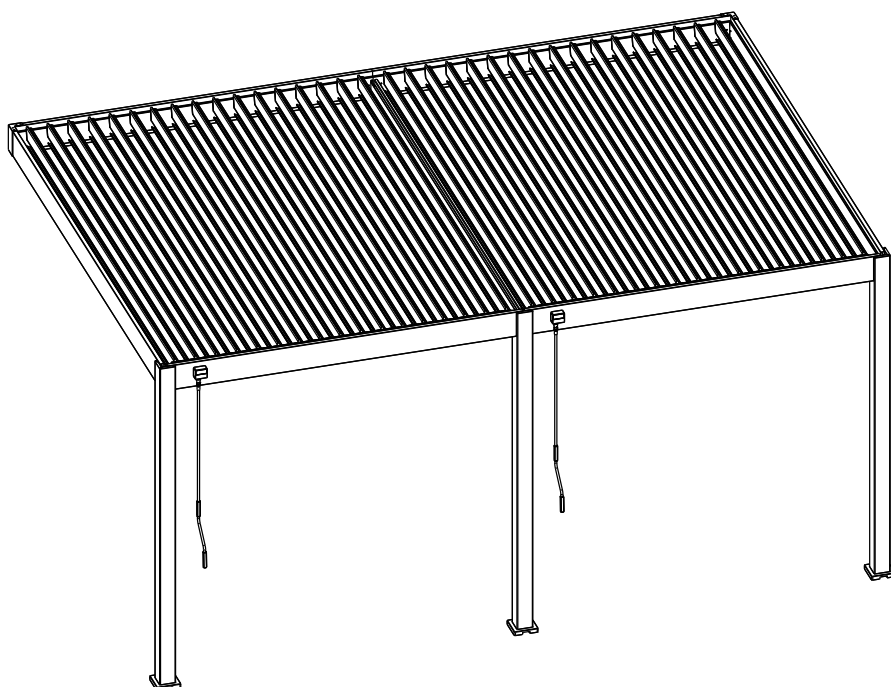


DELUXE WALL 3.6x5.3 TERRACE PERGOLA

Assembly instructions


NIEZBĘDNE NARZĘDZIA I ŚRODKI BEZPIECZEŃSTWA (NIE DOŁĄCZONE)



WYMIARY PODSTAWY 2D (wymiar w mm)

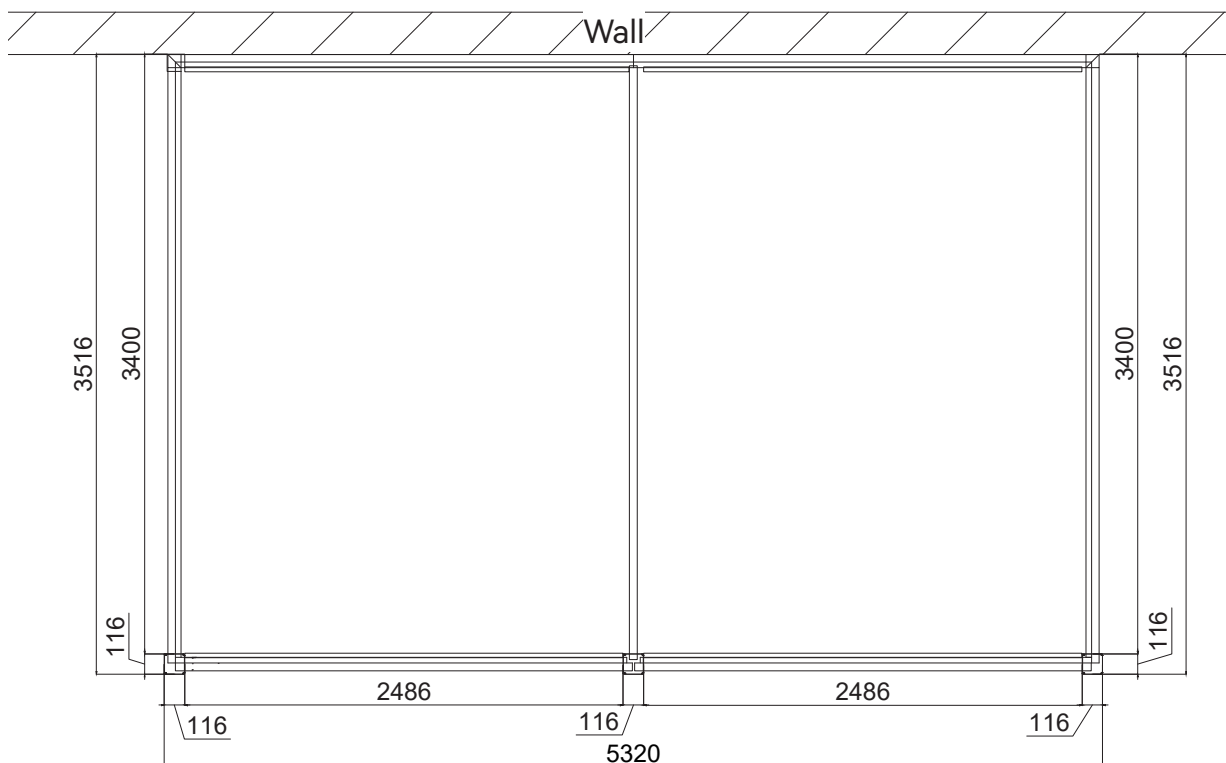

WYMIARY PODSTAWY 3D (wymiary w mm)

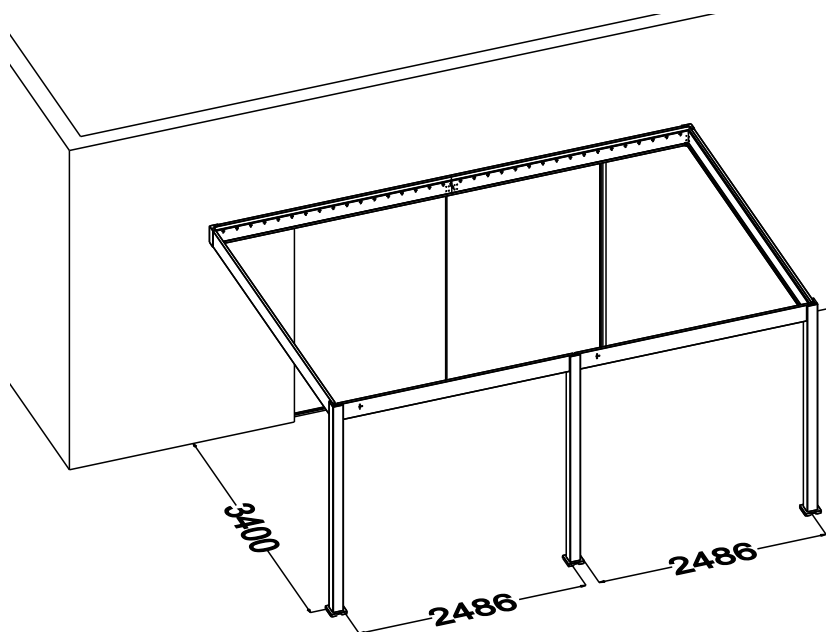

ŚRODKI OSTROŻNOŚCI PRZY UŻYCIU

Tego produktu nie należy używać w ekstremalnych warunkach pogodowych: burze, silne wiatry, grad i śnieg. Gwarantujemy odporność pergoli na wiatry o prędkości do 100 km/h i maksymalną masę śniegu 50 kg/m². W przypadku silnych wiatrów lub śniegu zdecydowanie zalecamy pozostawienie żaluzji otwartych. Aby utrzymać dobre warunki pracy żaluzji, należy odśnieżyć je. Nasza pergola wytrzyma ulewne deszcze, ale nie możemy zagwarantować, że będzie w 100% wodoodporna ze względu na ekstremalne warunki pogodowe. Wyjątkowe zjawiska klimatyczne mogą zagrozić idealnemu uszczelnieniu produktu. Aby uniknąć uszkodzeń i obrażeń, nie zalecamy wspinania się na dach ani konstrukcję pergoli.

WSKAZÓWKI I INSTRUKCJE BEZPIECZEŃSTWA

W zależności od lokalizacji i powierzchni, budowa może podlegać pozwoleniom na budowę. Upewnij się, że sprawdziłeś u lokalnych władz, aby uzyskać potrzebne informacje przed montażem.

Montaż produktu:

- Wymagane jest co najmniej 2/3 osób
- Zdejmij folię ochronną (potrzebne około 1 godziny)
- Nie należy trzymać dzieci w pobliżu miejsca zgromadzenia.
- Uważaj na ryzyko przytrzaśnięcia
- Nie dokręcaj śrub przed złożeniem całego produktu.
- Wszystkie kroki montażu muszą być dokładnie przestrzegane.
- Sprawdź poziom konstrukcji ze wszystkich stron
- Nie kotwić pergoli przed złożeniem całego produktu.

Nie można wprowadzać żadnych zmian w produkcie. Produkty, w które użytkownik ingerował, nie są objęte gwarancją, dlatego uznaje się je za nieważne.

Miejsce należy wybrać ostrożnie. Zaleca się, aby nie montować pergoli w deszczowy dzień, w kierunku dominujących wiatrów i pod zwisającym drzewem.

Pergolę należy zamontować na płaskim, równym fundamencie. Zaleca się montaż na płycie betonowej lub podkładkach betonowych 25x25 cm przy każdym słupku. Prosimy o prawidłowe zakotwiczenie pergoli do podłoża za pomocą śruby rozporowej.

Jeśli chcesz zamontować pergolę w pobliżu domu lub budynku, sprawdź, czy posiada ona rynny odprowadzające wodę.

W przypadku nieprzestrzegania niniejszej instrukcji lub przestrzegania jej tylko częściowo, gwarancja sprzedawcy zostanie unieważniona.

KONSERWACJA

Aby zapewnić trwałość i estetyczny wygląd, konieczna jest regularna konserwacja.

Zalecamy:

- Raz lub dwa razy w roku czyść pergolę czystą wodą za pomocą gąbki lub szmatki.
- Nie należy używać detergentów ani materiałów ściernych.
- Regularnie (przynajmniej raz w roku) sprawdzaj dokręcenie śrub.
- Regularnie smarować olejem (przynajmniej raz w roku).
- Upewnij się, że nic nie utrudnia przepływu wody w rynnach (liście, gałęzie...).
- Usuń wodę, która mogła gromadzić się wokół nóg pergoli (podnieś spódnicę słupków).

GWARANCJA

Niniejsza gwarancja nie obejmuje:

- Normalne zużycie produktów.
- Utrata lub uszkodzenie jakiejkolwiek części podczas rozpakowywania lub instalacji.
- Brak staranności, zaniedbanie, wandalizm, uderzenie ciałem obcym, użycie siły, kontakt z materiałem ściernym, estetyka produktu, demontaż, odbudowa lub relokacja.
- Siła wyższa: grad, silne wiatry, burze, śnieg, powódzie, pioruny itp.
- Produkt został poddany ingerencji użytkownika.

Gwarancja obejmuje wyłącznie wymianę zapasowego diagramu lub dostarczonego produktu. Zwrot pieniędzy nie będzie dokonywany.

Wszelkie roszczenia gwarancyjne należy zgłaszać w punkcie sprzedaży (sklepie lub witrynie internetowej), w którym dokonano zakupu produktu.


Schemat LISTY (NA KARTON)

Przed przystąpieniem do montażu pergoli żaluzjowej należy sprawdzić, czy wszystkie wymienione schematy są dostarczone i nie są uszkodzone. Wszelkie braki części muszą zostać zgłoszone w ciągu 10 dni od dostawy.



Możesz udać się do lokalnego sklepu outletowego lub złożyć wniosek bezpośrednio na naszej stronie internetowej.

Nie wyrzucaj opakowania bez upewnienia się, że produkt działa prawidłowo.




Numer śledzenia produktu znajduje się wewnątrz kartonu (patrz poniższy schemat). Aby zapewnić lepszą i wydajniejszą obsługę posprzedażową w przyszłości, po rozpakowaniu kartonu zrób zdjęcie numeru śledzenia i zapisz je.

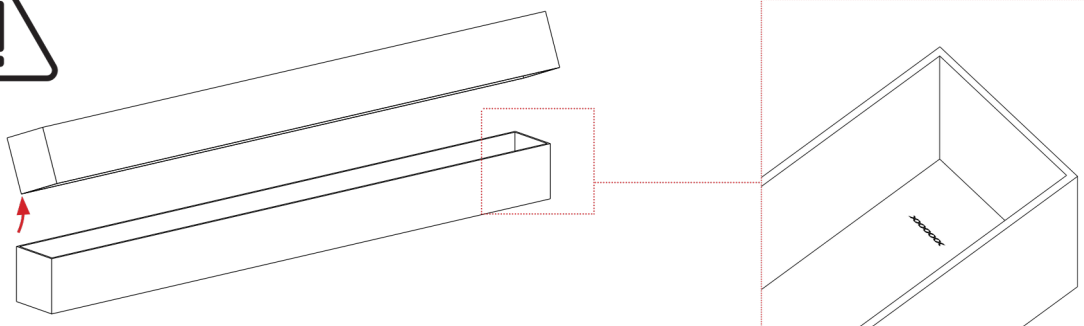




KARTON 1/6

NR.	Profi	Diagram	Rozmiar	ILOŚĆ
AO			116X116 L=2550mm	1
AO-2			116X116 L=2550mm	1
AO-3			116X116 L=2550mm	1

NR.	Diagram	ILOŚĆ
IO		3
JO		3



NR.	Diagram	ILOŚĆ
KO		2
LO		32
LO-1		34
EO-1		1
EO-2		1
EO-3		2
EO-4		2
EO-5		1
MO		66
MO-1		66

NR.	Diagram	ILOŚĆ
TO	 10×80	12
XO-1	 6×35  4mm	12


NR.	Diagram	ILOŚĆ
XO-2	 6×20  4mm	34
NO		2
OO-1		2
OO-2		2
PO		2
YO	 6×45  4mm	6
RO		18
SO		68
TO-1	 8×100	12
UO-1	 plastic nut	34

KARTON 1/6




NR.	Diagram	ILOŚĆ
WO	  4x16 PH2	136
WO-1	 5x19	36
XO	  6x40 4mm	66
QO	  6mm	18

NR.	Diagram	ILOŚĆ
ZO-1	 4mm	1
ZO-2	 4mm	1
ZO-3	 6mm	1
ZO-4	 6mm	1

NR.	Diagram	ILOŚĆ
WO-2	  4x19 PH2	2
XO-3	  6x16 4mm	2
VO		168
UO	 lock nut	100

NR.	Diagram	ILOŚĆ
ZO-5	 10mm	1
ZO-6	 PH2	1
ZO-7	 10mm	1
ZO-8		1

KARTON 2/6

NR.	Profi	Diagram	Rozmiar	ILOŚĆ
BO-3			75X195 L=2589mm	2
BO-4			75X195 L=2640mm	1
BO-5			75X195 L=2640mm	1
CO-3			75X195 L=3449mm	1
CO-4			75X195 L=3449mm	1

KARTON 2/6

NR.	Profil	Diagram	Rozmiar	ILOŚĆ
EO			64X111 L=3366mm	1
FO			27X8 L=2442mm	2
HO			L=1300mm	2

KARTON 3/6

NR.	Profi	Diagram	Rozmiar	ILOŚĆ
GO			166X38 L=3366mm	9

KARTON 4/6

NR.	Profi	Diagram	Rozmiar	ILOŚĆ
GO			166X38 L=3366mm	9

KARTON 5/6

NR.	Profi	Diagram	Rozmiar	ILOŚĆ
GO			166X38 L=3366mm	9

KARTON 6/6


NR.	Profi	Diagram	Rozmiar	ILOŚĆ
GO			166X38 L=3366mm	7


Before proceeding with the assembly of your louvered pergola, it is necessary to check that all parts listed are supplied and not damaged.

Any missing part must be reported within 10 days of delivery.

Do not discard the packaging without ensuring that the product is functioning properly.

SCHEMAT MONTAŽU

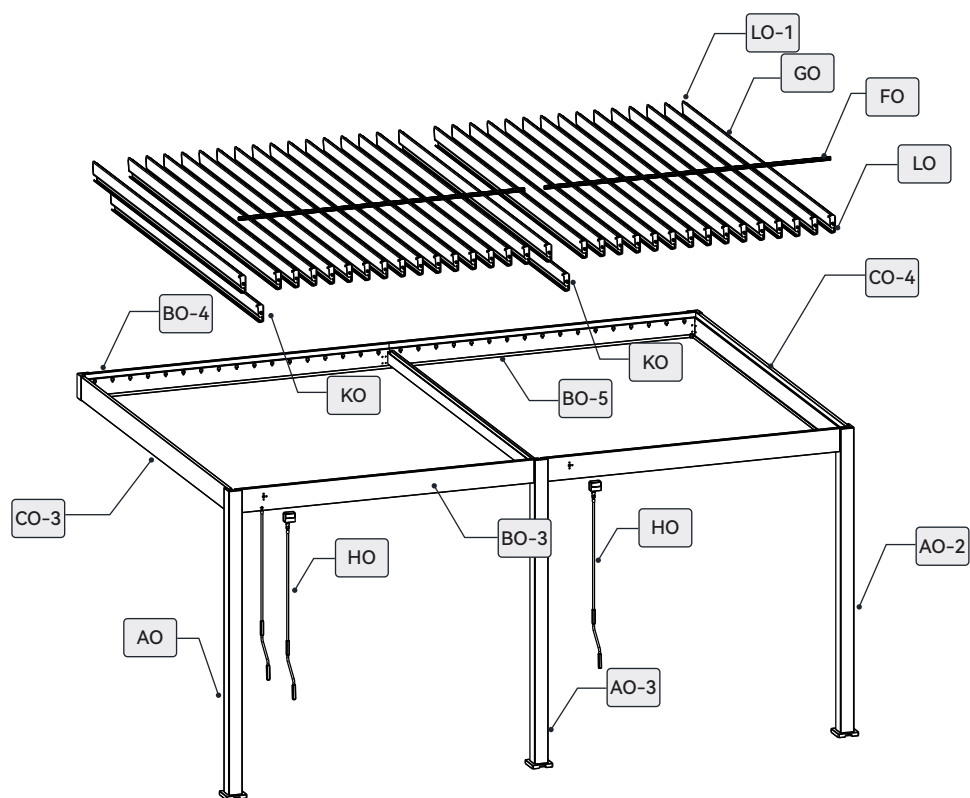


AO		1
AO-2		1





IO		2
JO		2

XO-1		6x35	4mm	8
------	---	------	-----	---

ZO-1		4mm
ZO-2		4mm

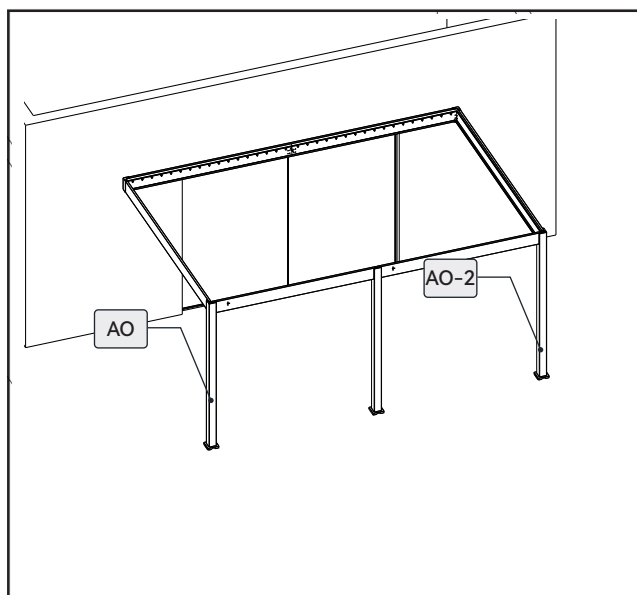

Schemat po instalacji

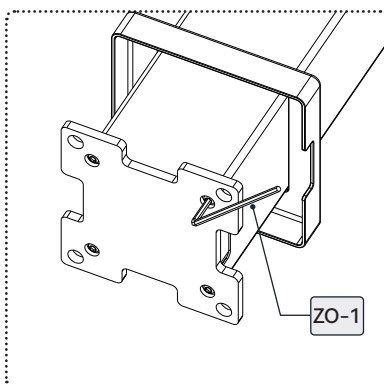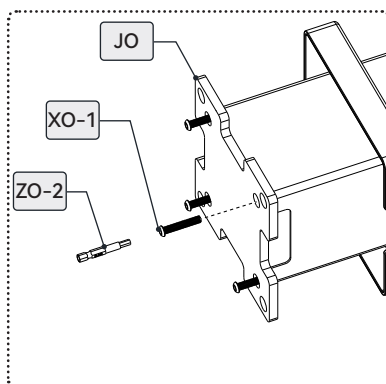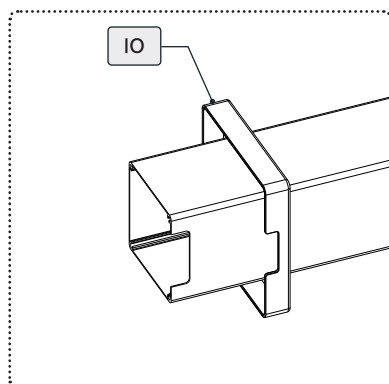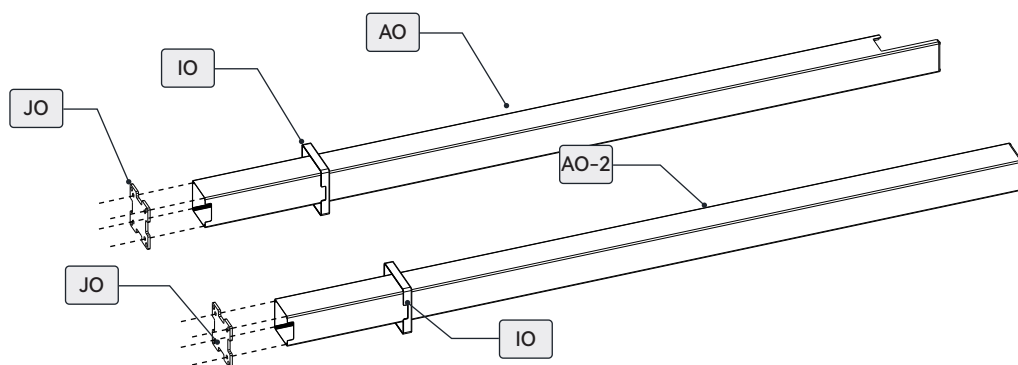


AO-3		1
------	---	---



IO		1
JO		1

XO-1		4
------	---	---

ZO-1		4mm
ZO-2		4mm

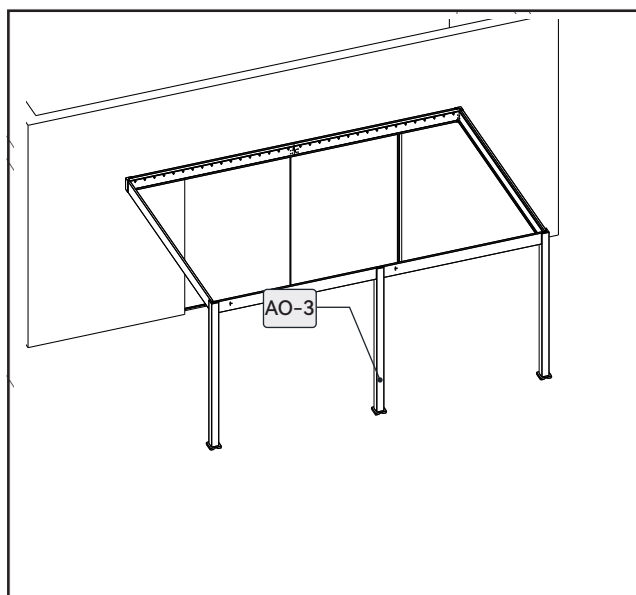

Schemat po instalacji

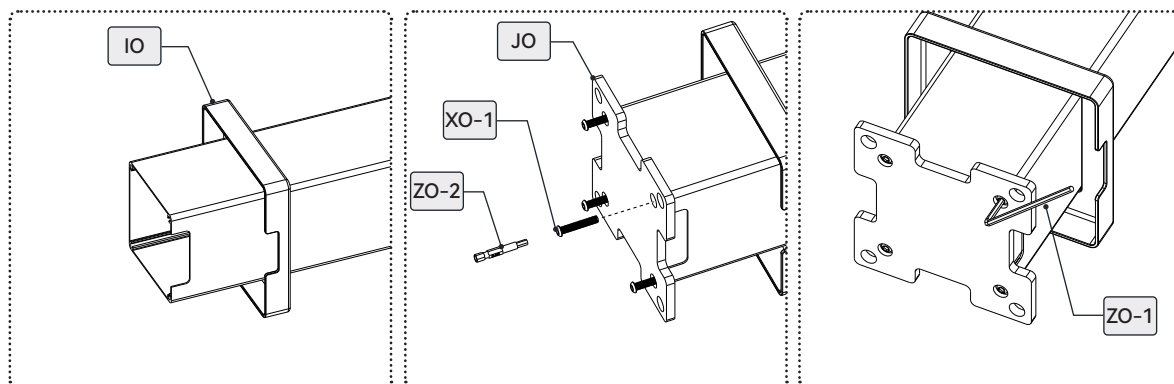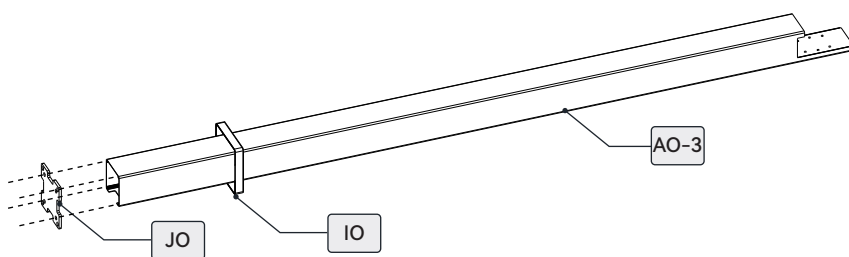


BO-4		1
BO-5		1


EO-4		2
EO-5		1
TO-1	 8x100	12



EO-3		2
WO-1	 5x19	20
	 8mm	






ZO-7	 8mm	
------	--	--



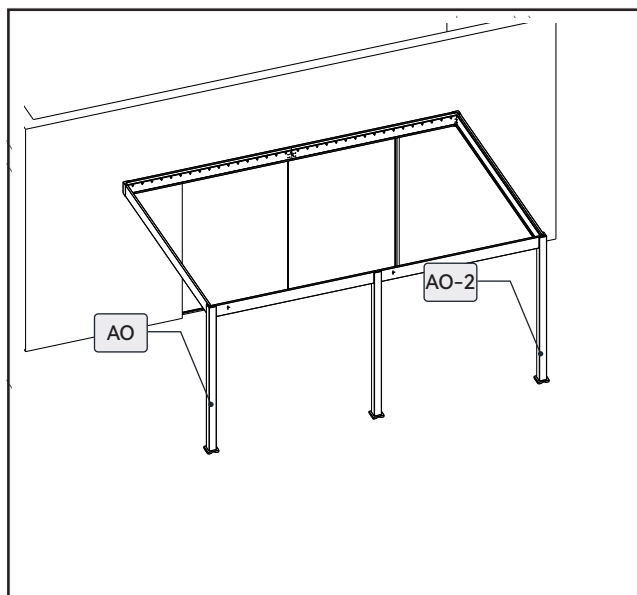


Połącz belki z kolumnami

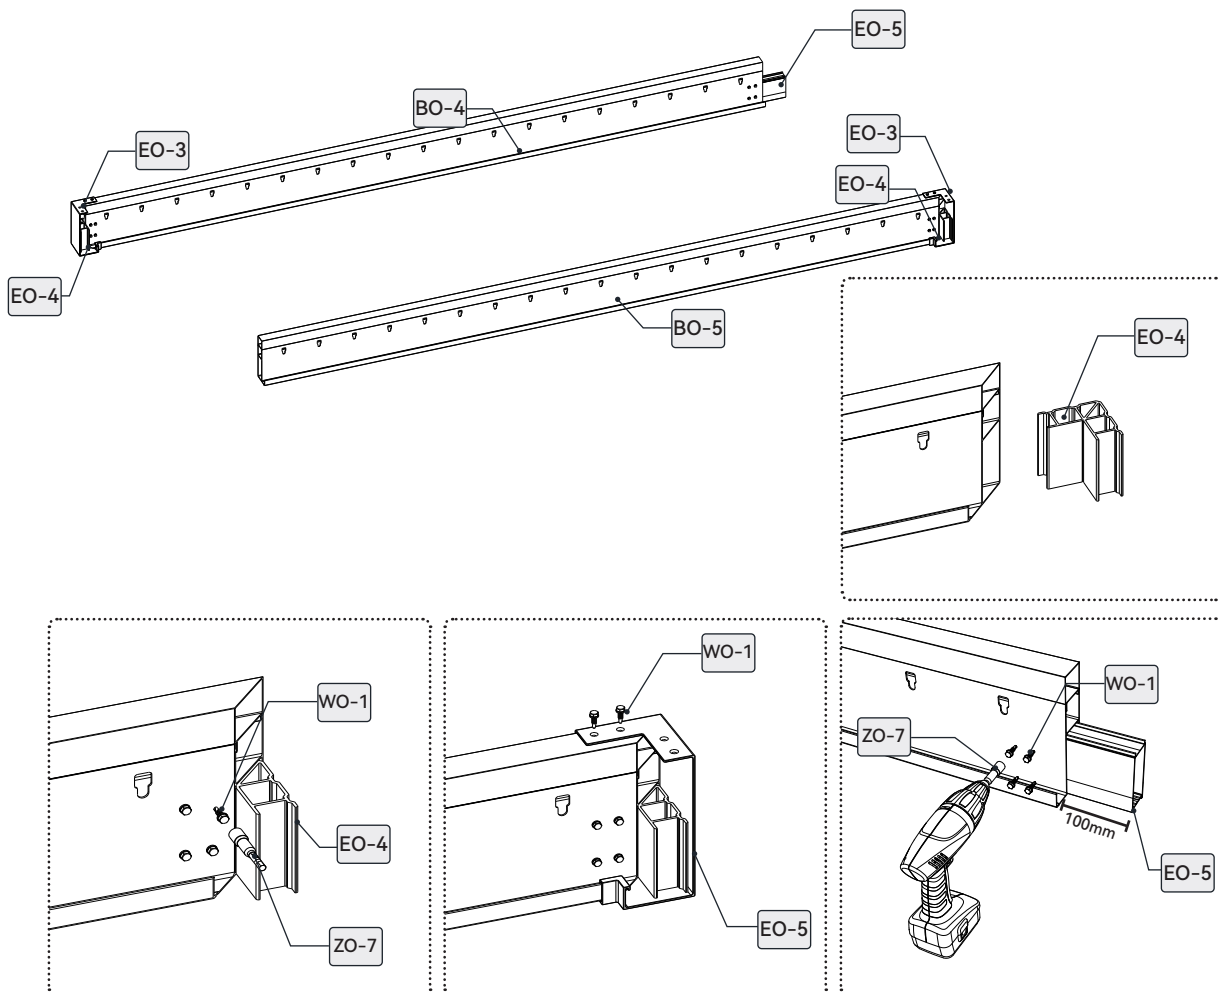

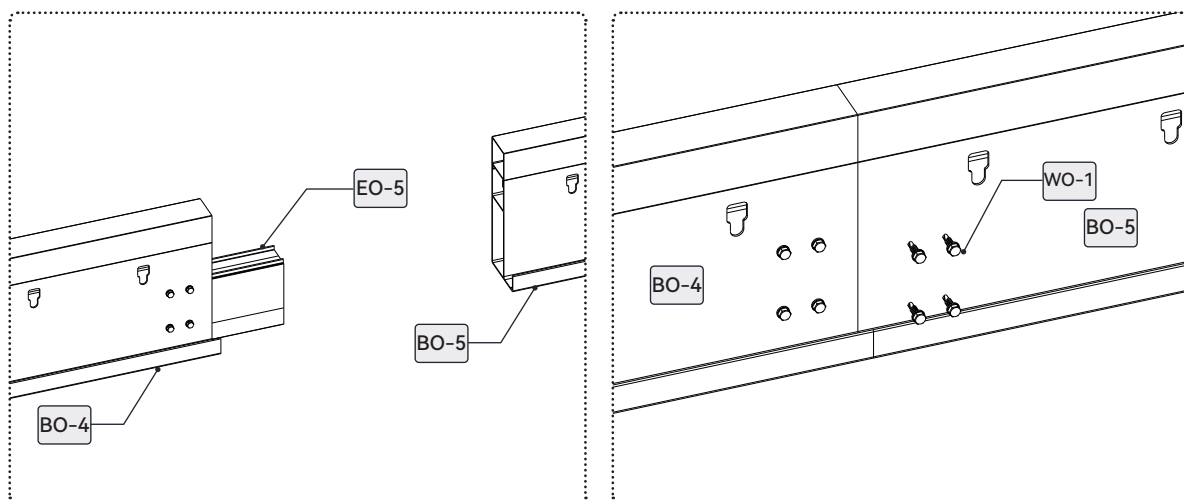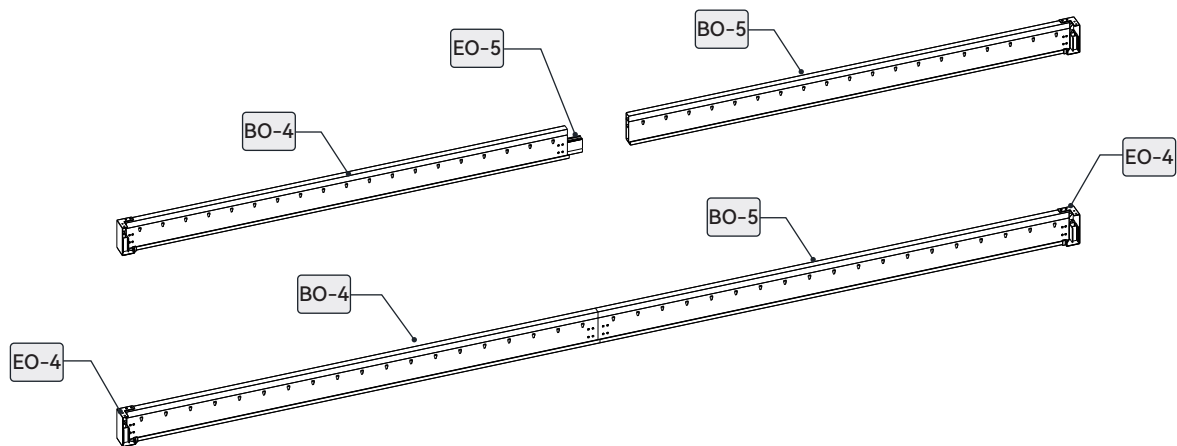

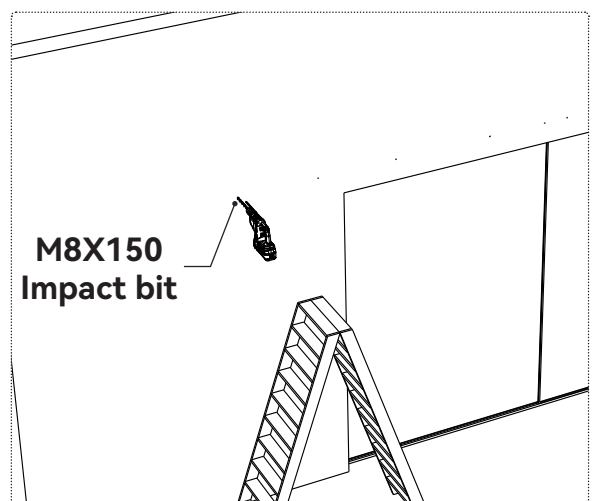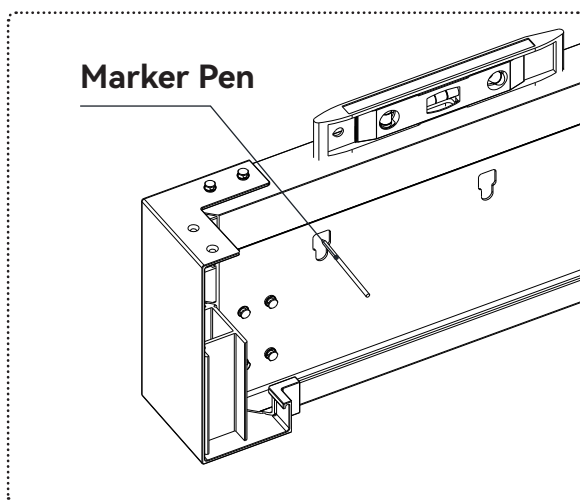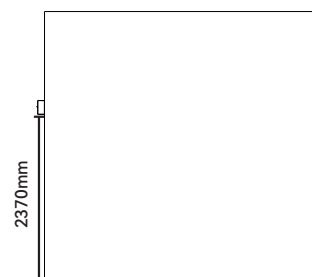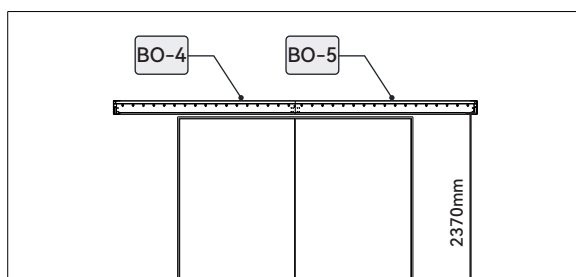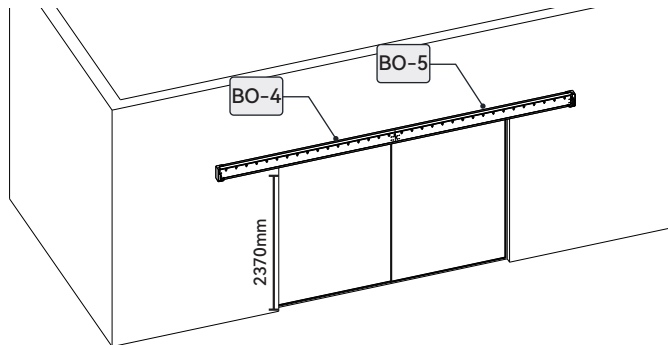


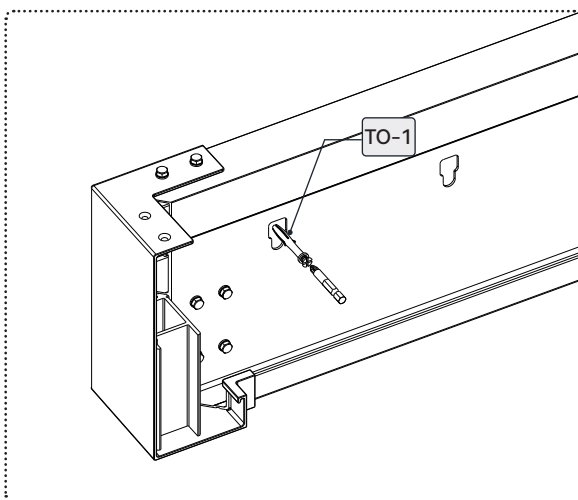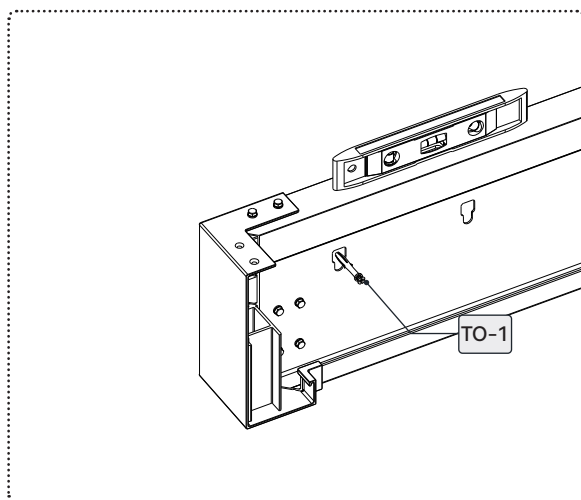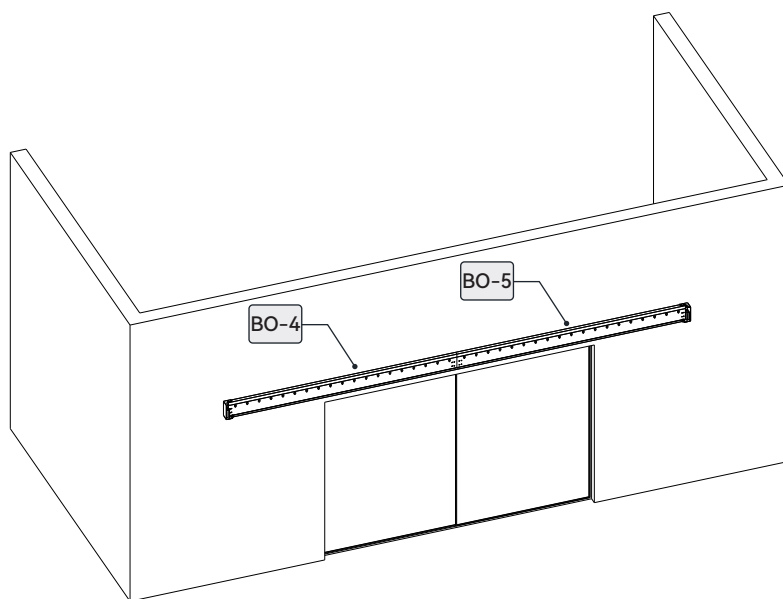






CO-3		1
CO-4		1



QO			6
WO-1			12

ZO-3		6mm
ZO-4		6mm

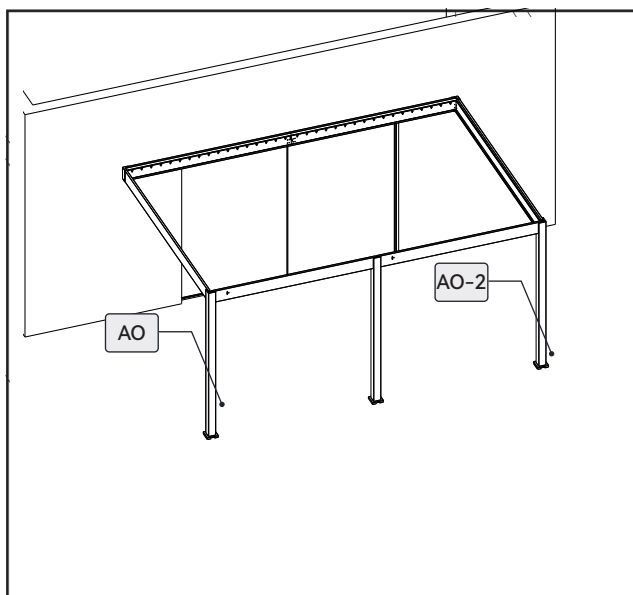


Połącz belki z kolumnami

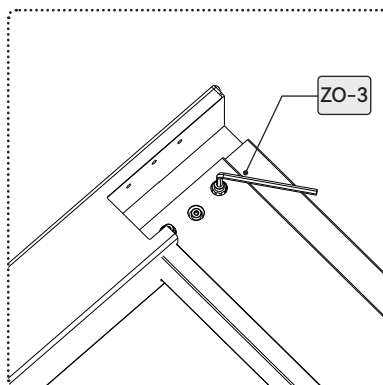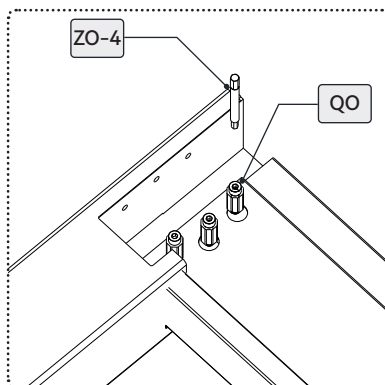
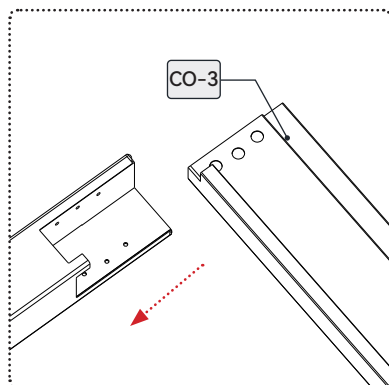
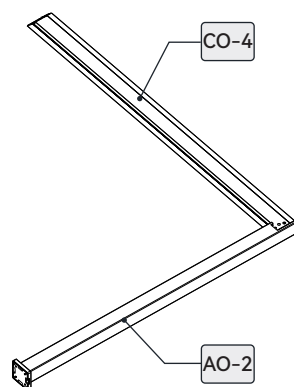
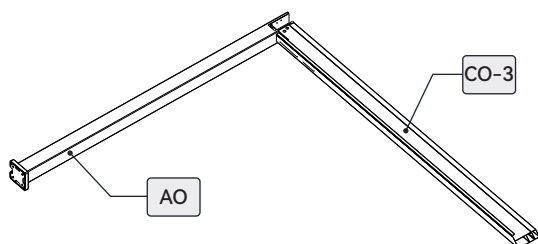


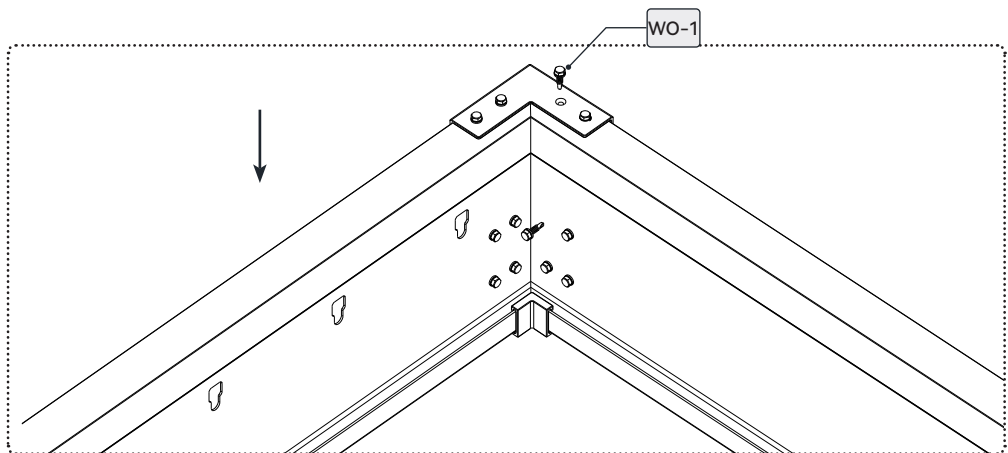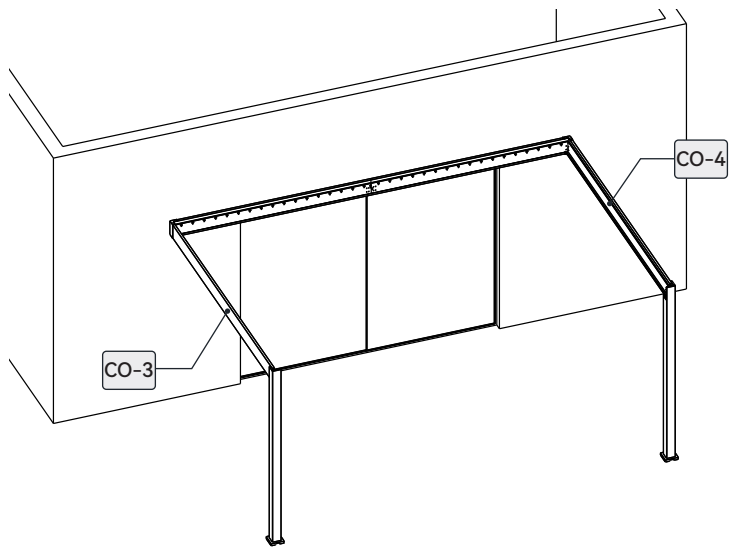

BO-3		2
QO	 	12
ZO-3	 6mm	
ZO-4	 6mm	
ZO-8		

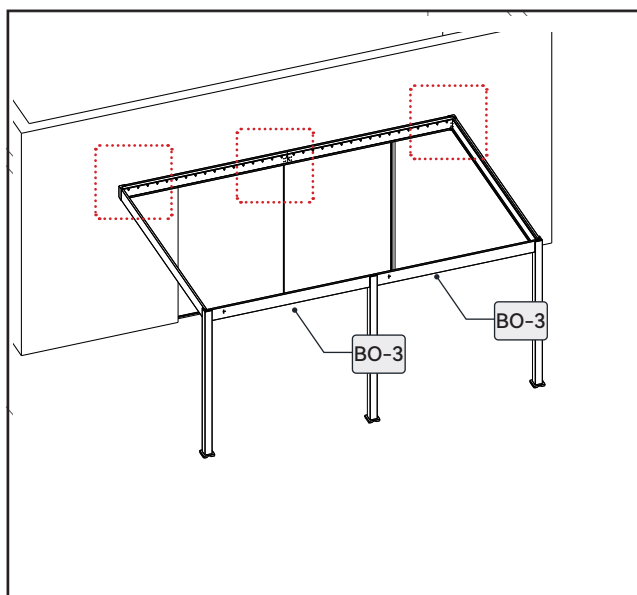


Połącz belki z kolumnami

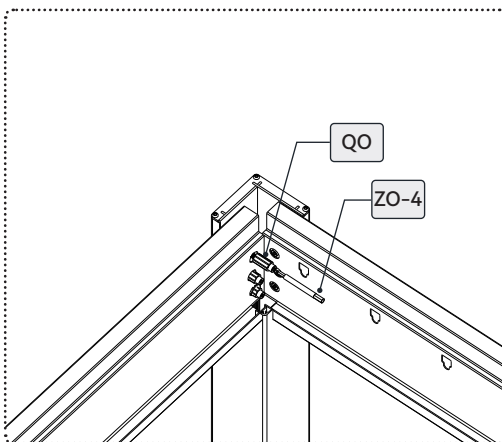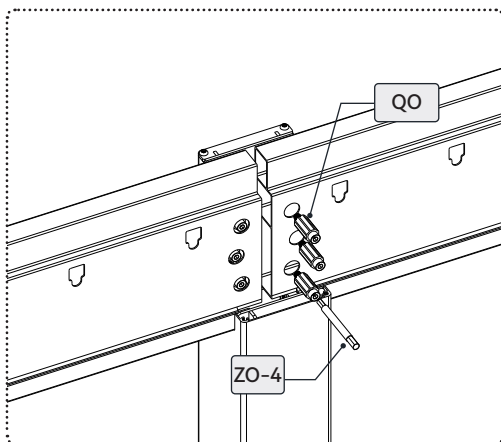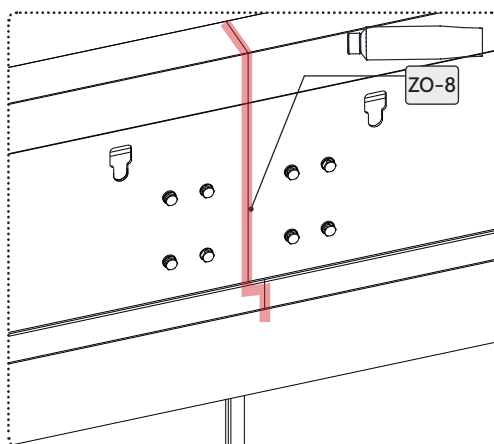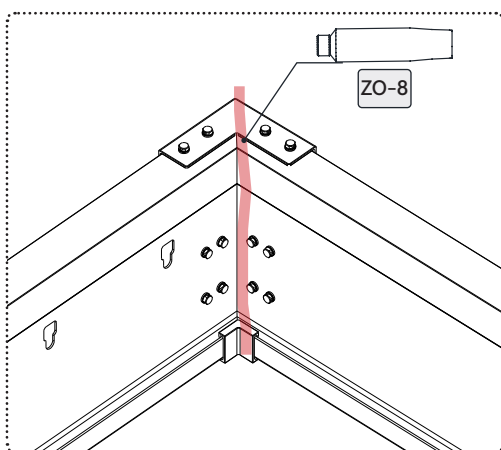





EO		1
----	--	---






EO-1		1	WO-1			4
EO-2		1	WO-2			2
XO-3		2				

ZO-7		
------	---	--

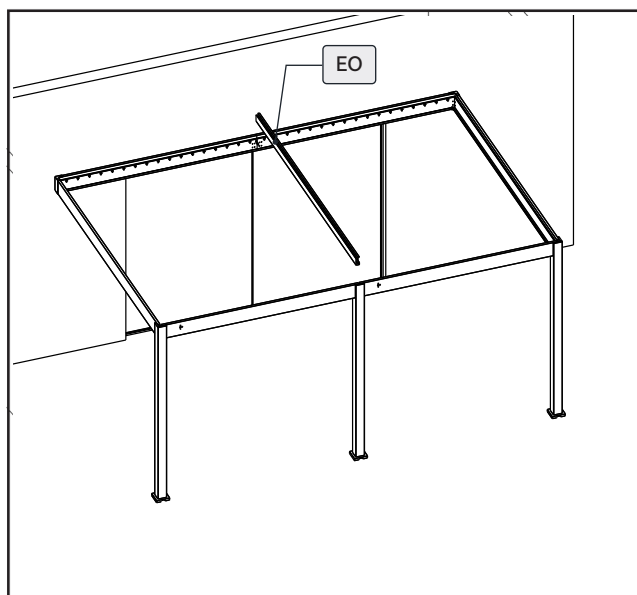

Połącz belki z kolumnami

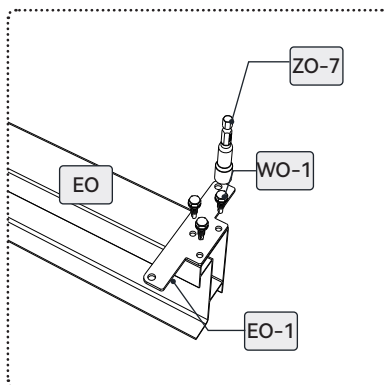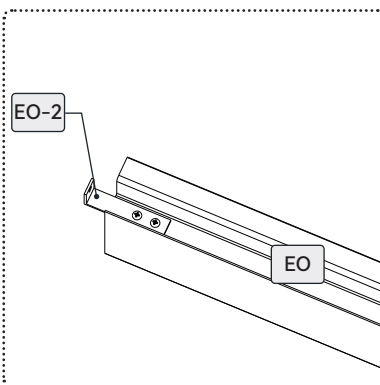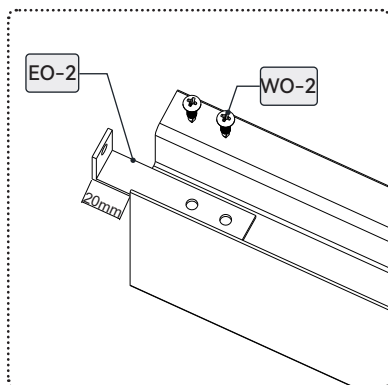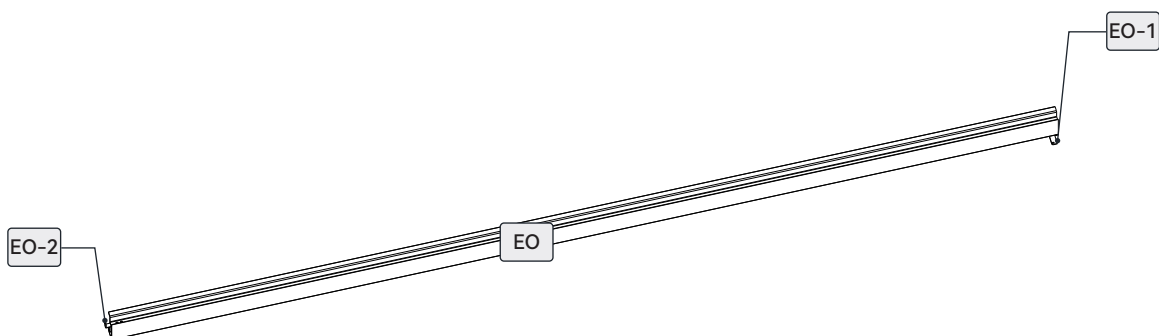


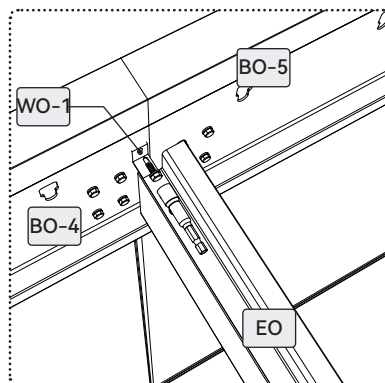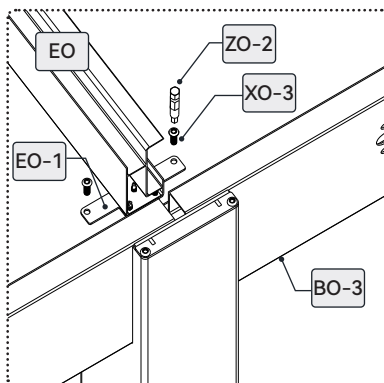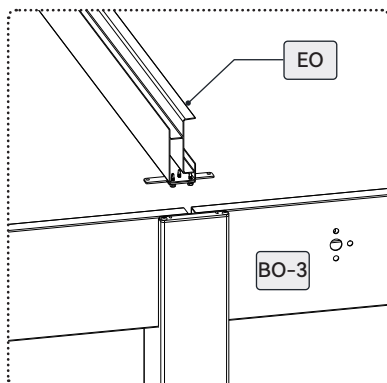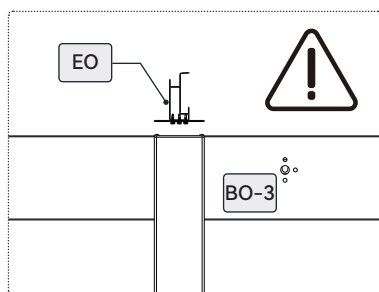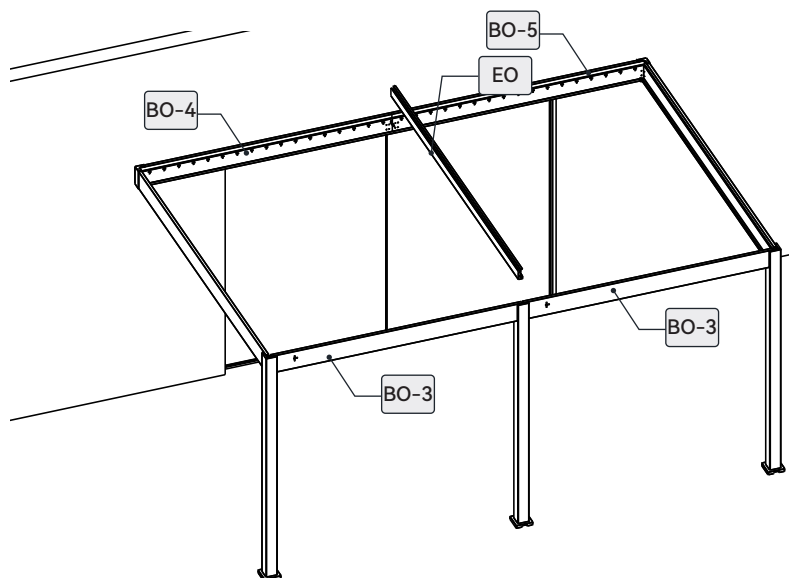

KO		2
LO		32
LO-1		34


MO		66
MO-1		66
XO		66

UO		66
VO		66

ZO-1		4mm
ZO-2		4mm
ZO-5		10mm


Płyta uszczelniająca żaluzji

X32

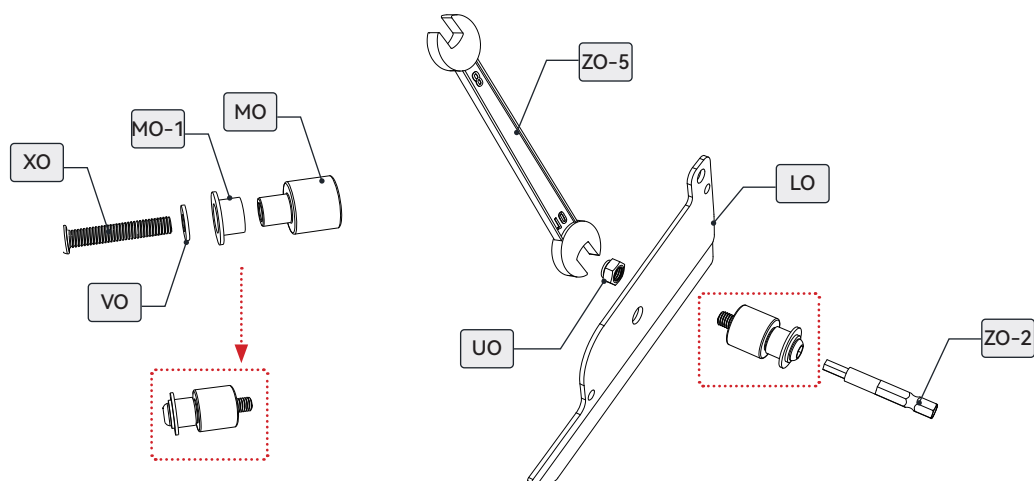


Płyta uszczelniająca żaluzji

X34


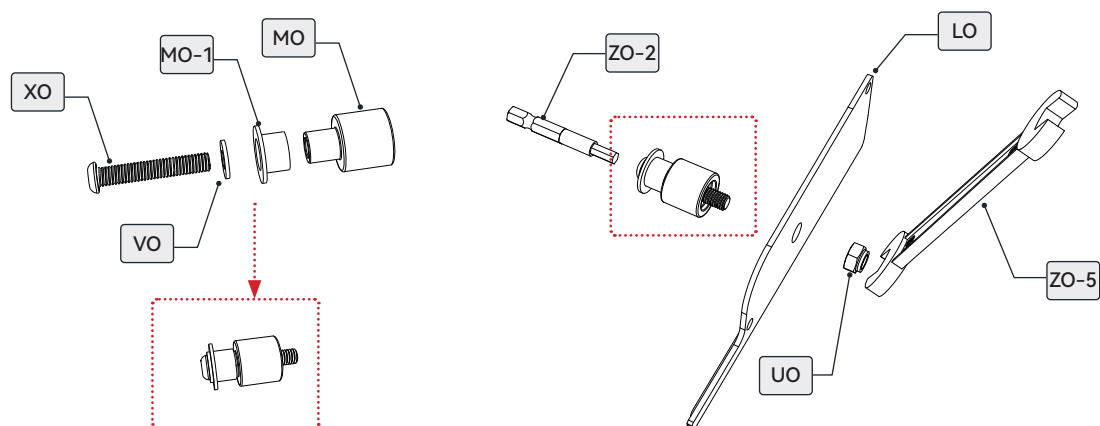


GO				34
WO			136	
ZO-6		PH2		


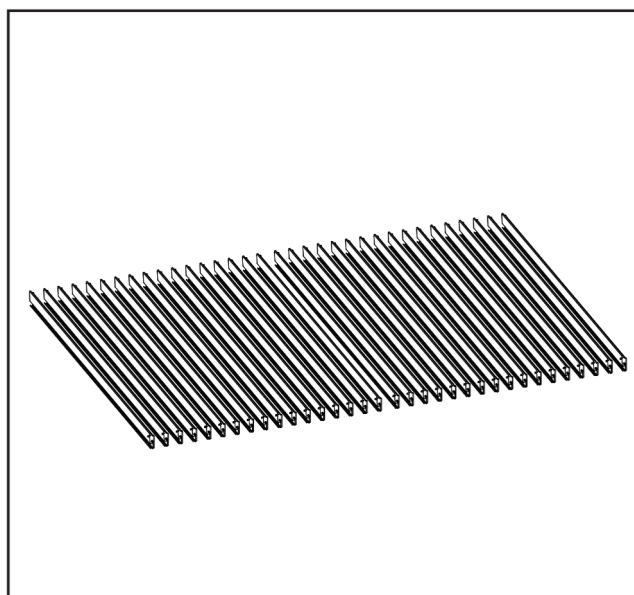



połączenie żaluzyjne

X2

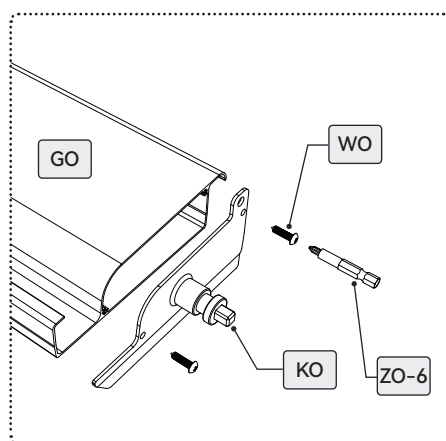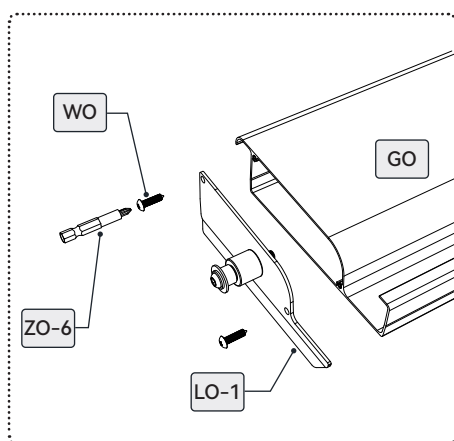






X32

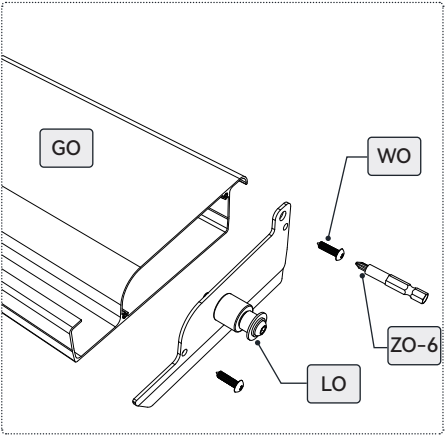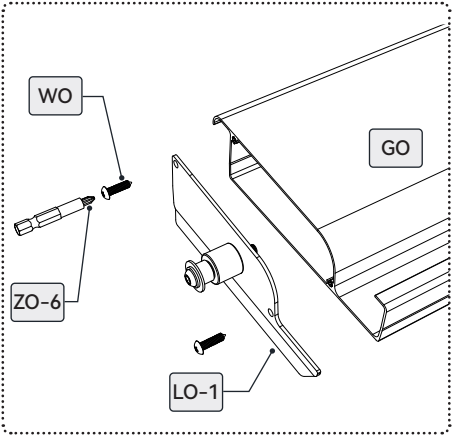


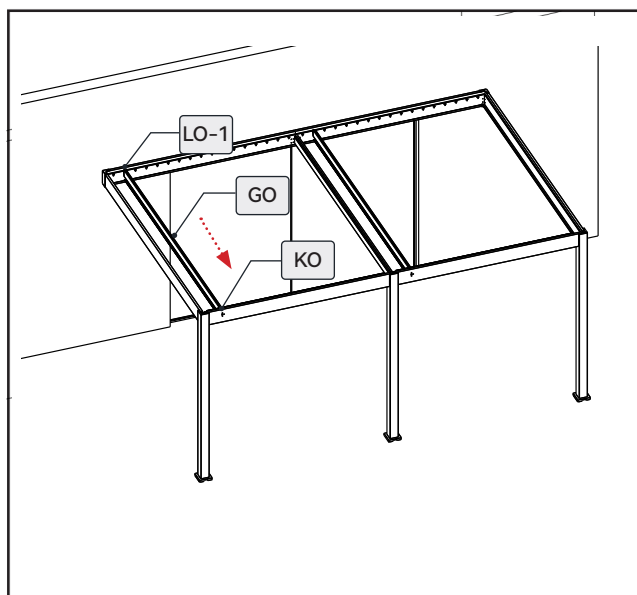




Zamocuj gumowe zatyczki na obu końcach żaluzji

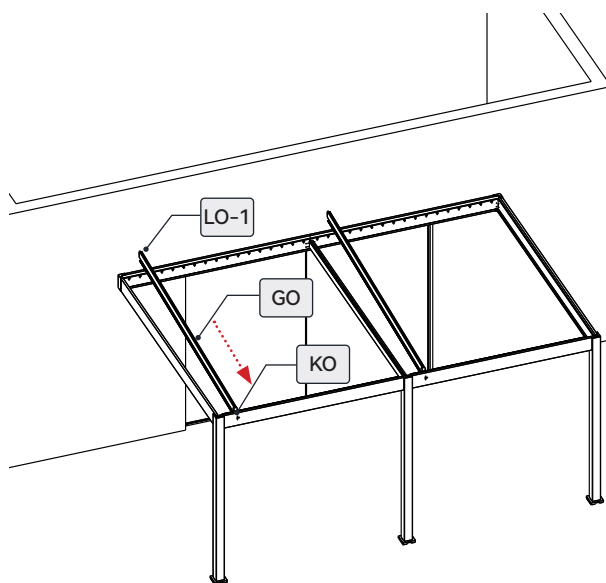

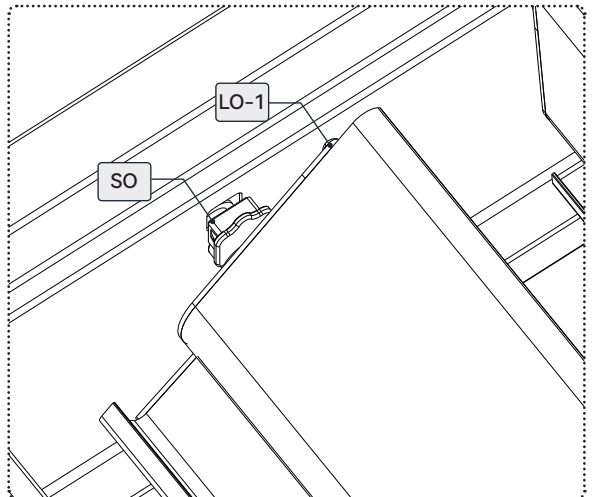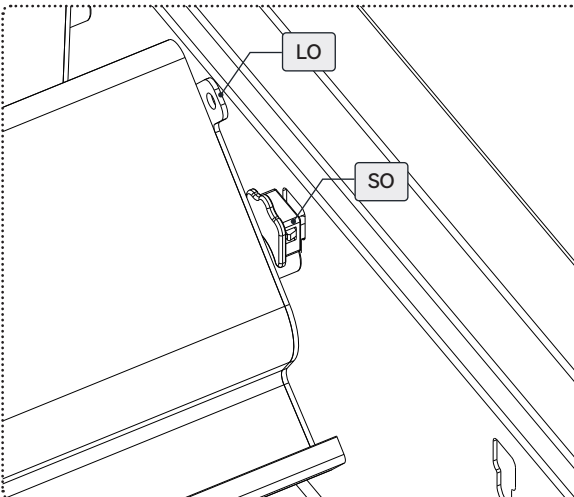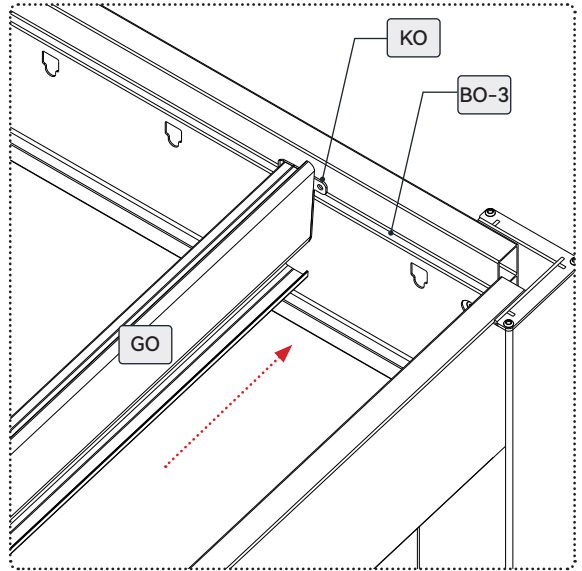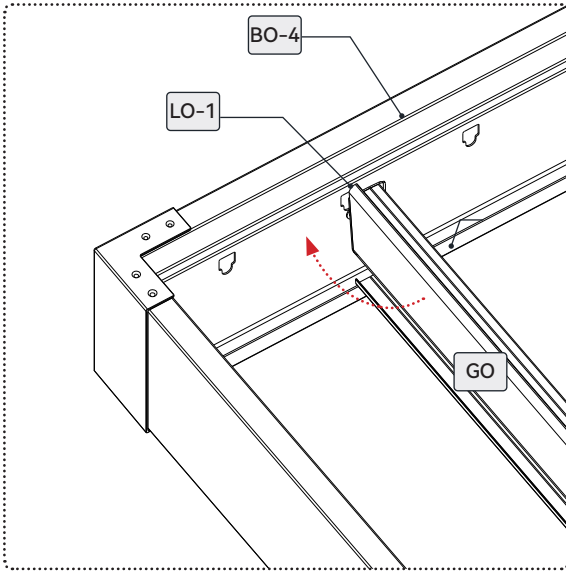

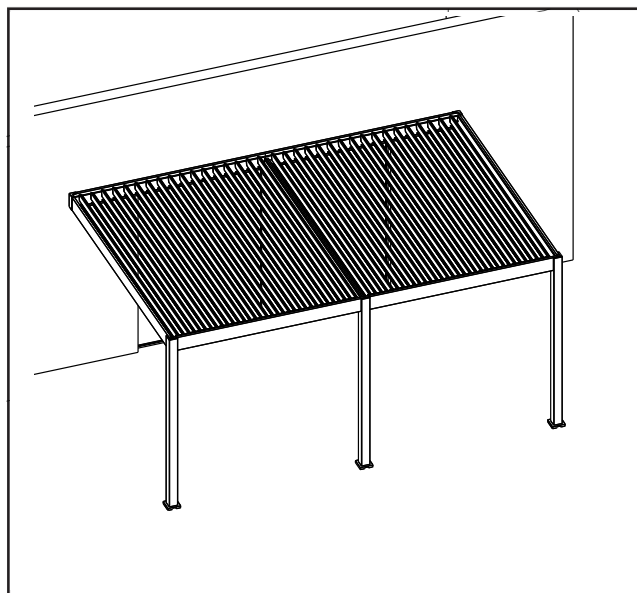


Zamontuj pozostałe żaluzje i zamknij zaślepki

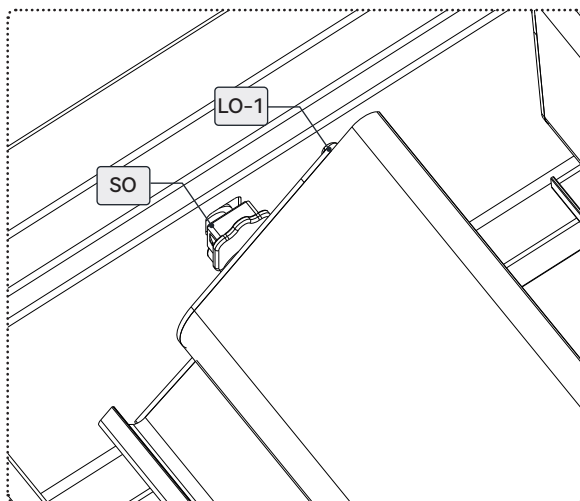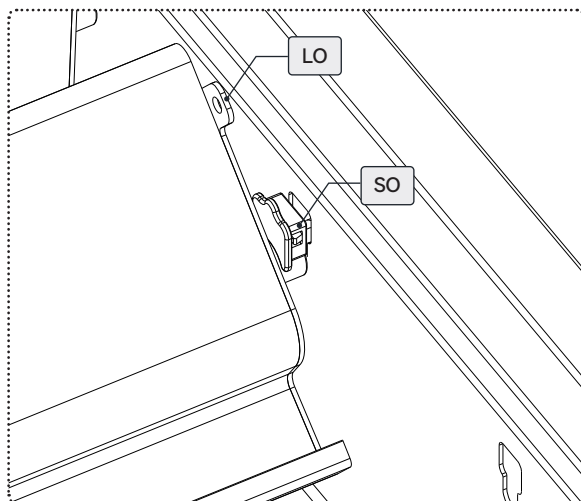
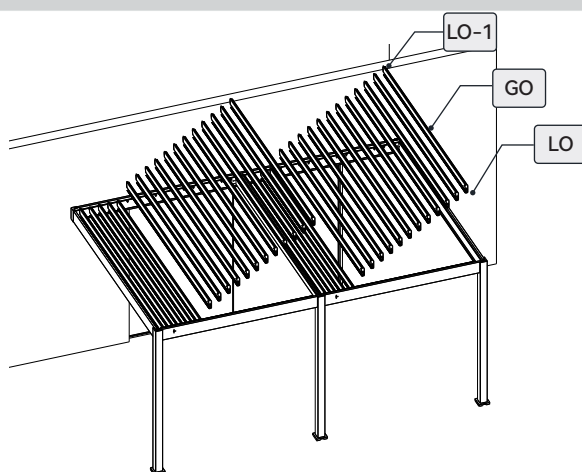


OO-1		2
OO-2		2
YO	 6x45  6mm	6


PO		2
NO		2

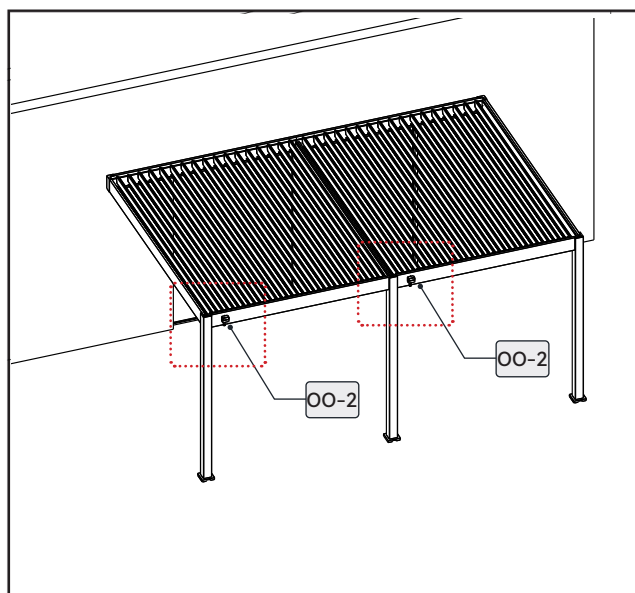




Zakończyć podłączanie żaluzji wału głównego

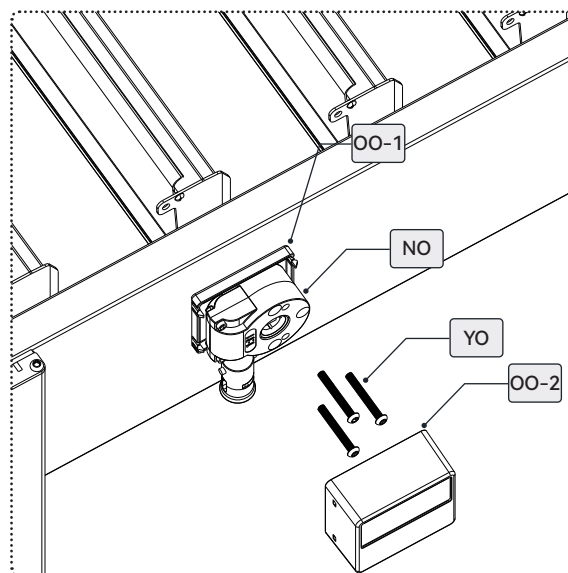
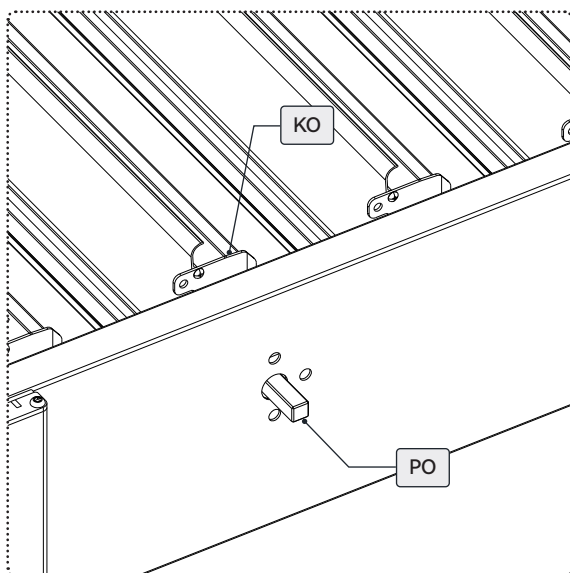


FO		2
HO		2
UO	 lock nut	34
UO-1	 plastic nut	34
VO		102
ZO-1	 4mm	
ZO-2	 4mm	
ZO-5	 10mm	
XO-2	 6x20 4mm	34

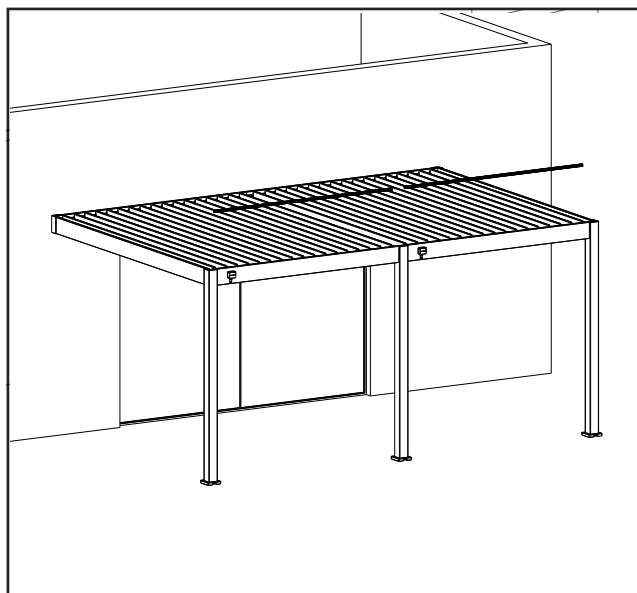


Połączenie żaluzyjne

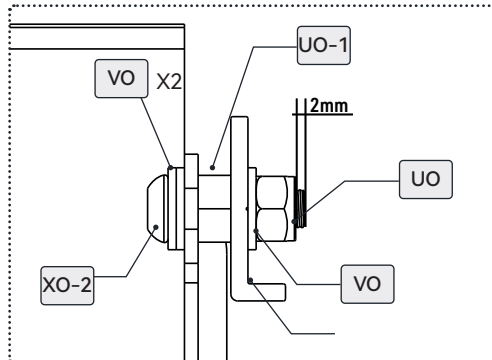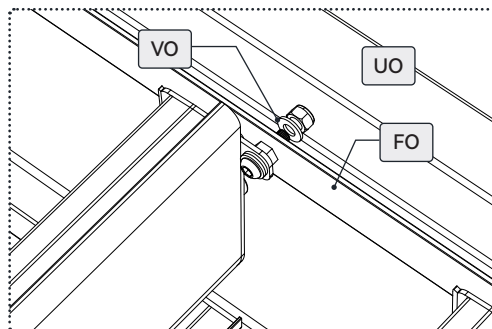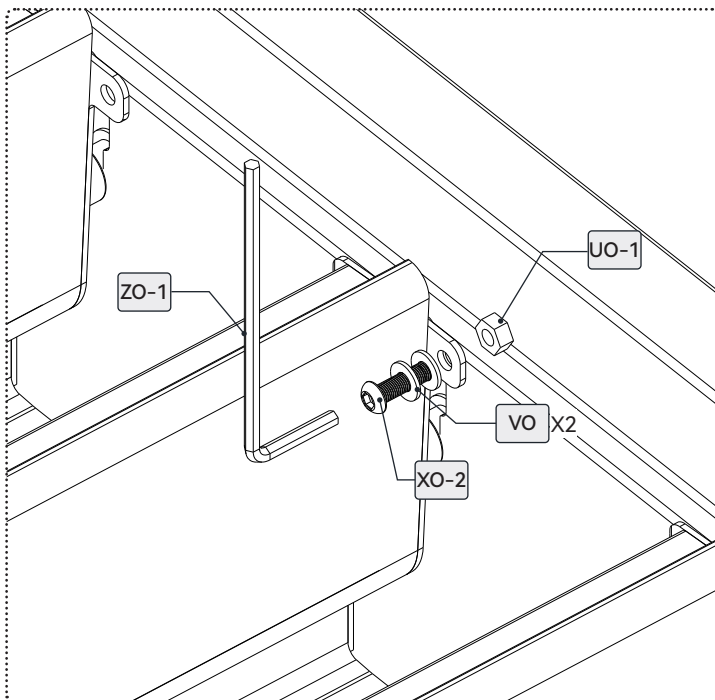

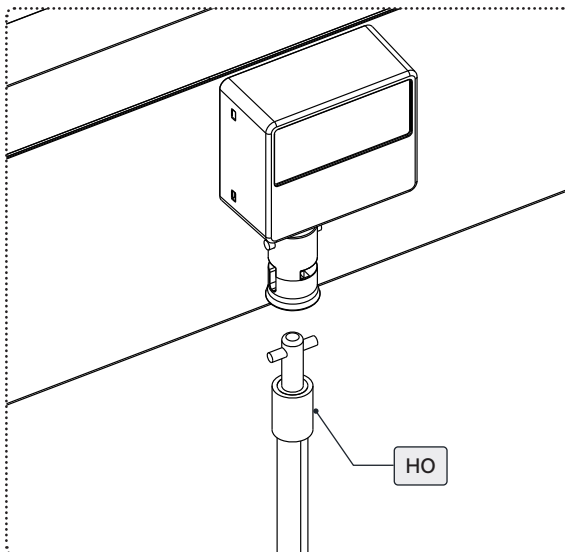
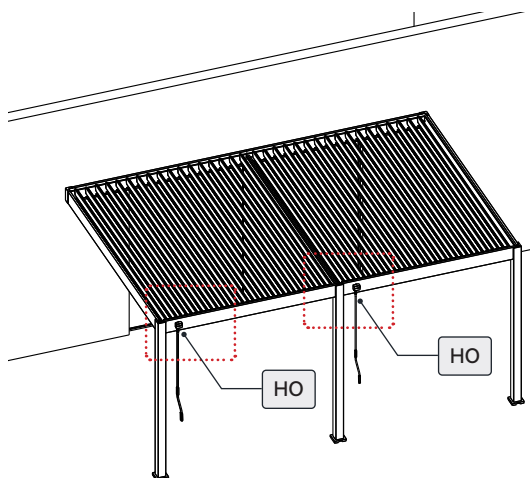






RO		18
----	---	----

TO		24
----	---	----

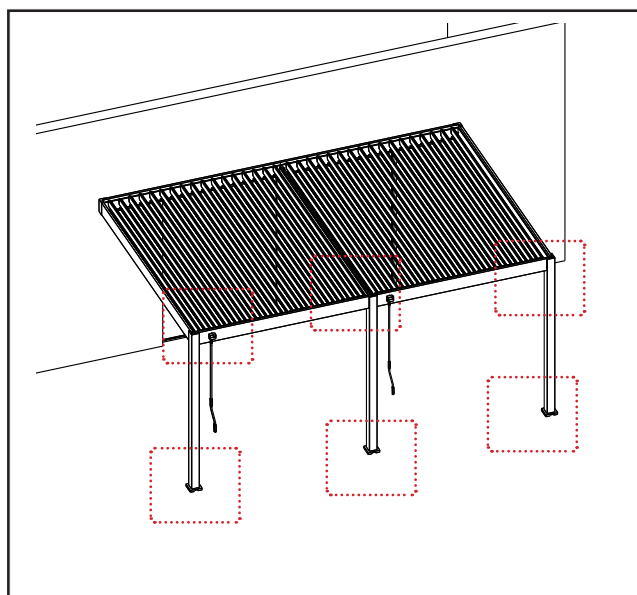


Zamknij pokrywę, aby zakończyć mocowanie pergoli.

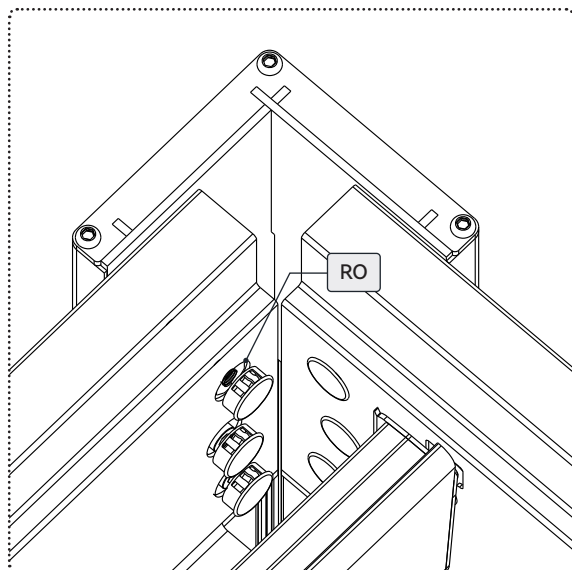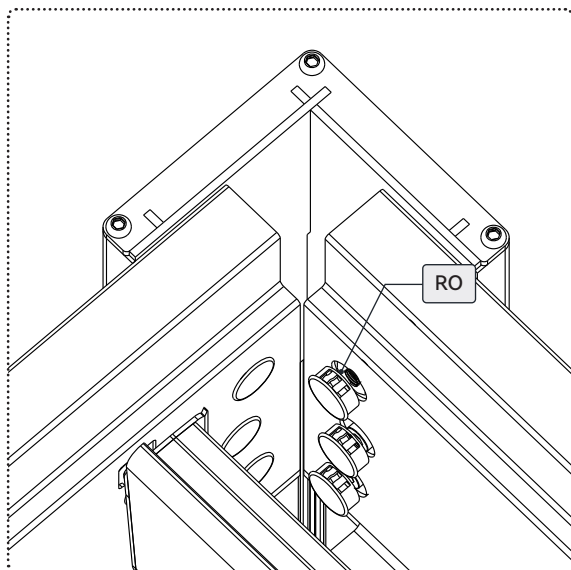

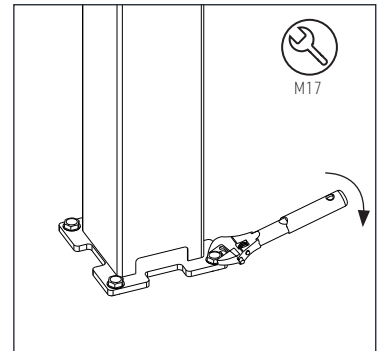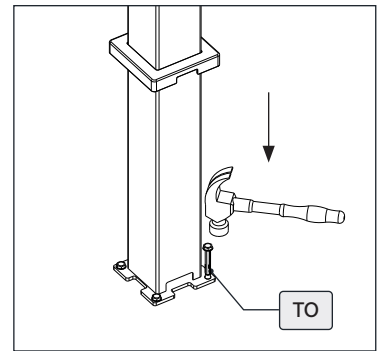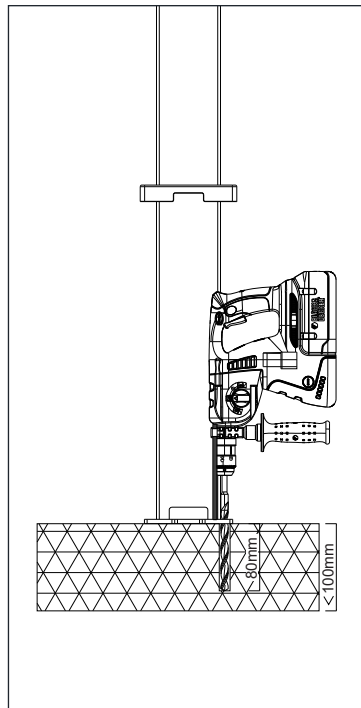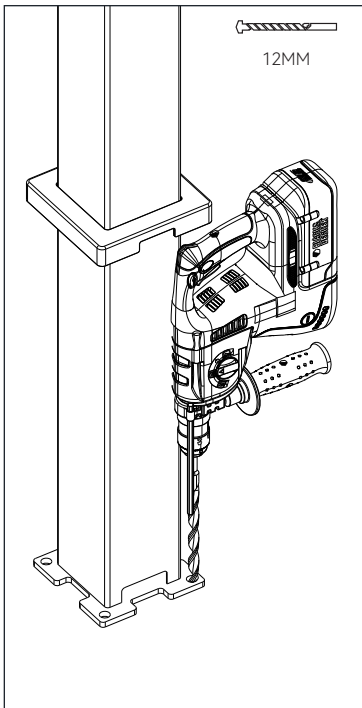


GUT ROOF

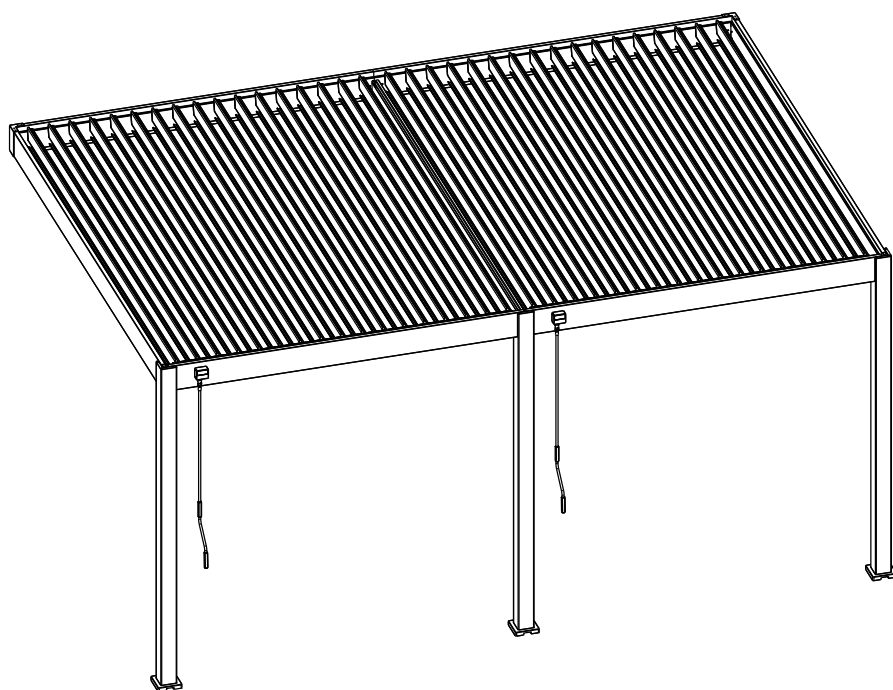


DELUXE WALL 3.6x5.3 **TERRACE PERGOLA** Assembly instructions


NECESSARY TOOLS AND SAFETY GEAR(NOT SUPPLIED)

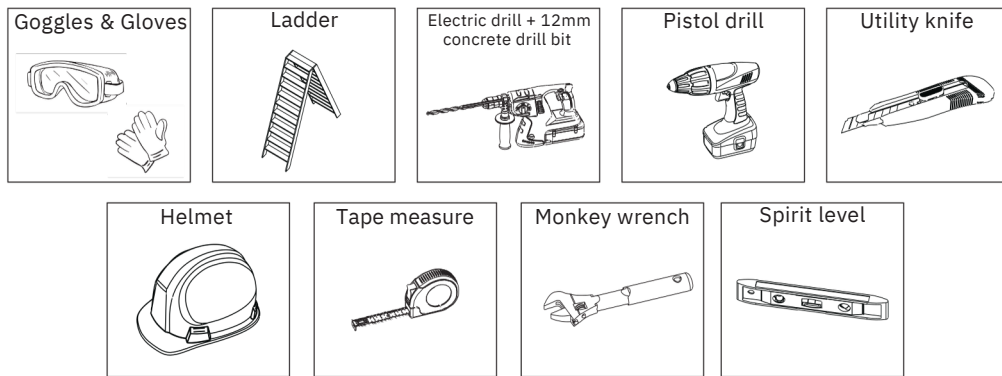

2D FOOTING MEASUREMENT (dimensions in mm)

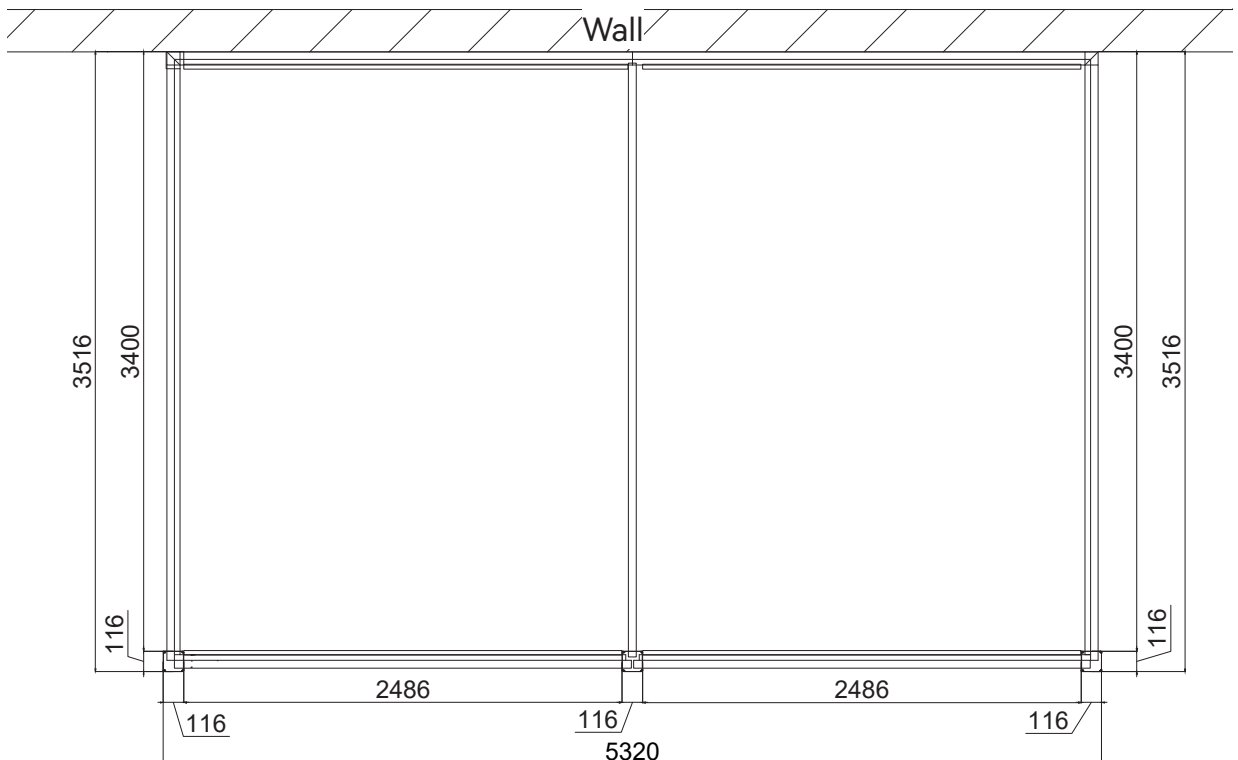

3D FOOTING MEASUREMENT (dimensions in mm)

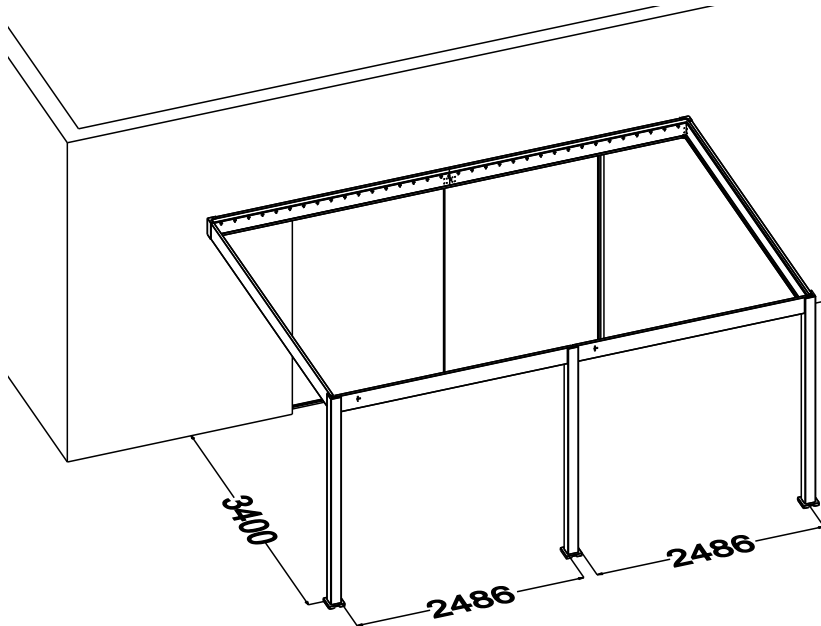

PRECAUTION OF USE

This product should not be used in extreme weather: storms, violent winds, hail, and snow. We guarantee the resistance of the pergola for winds up to 100 km/h and a maximum snow weight of 50kg/m². As in the case of strong winds or snow, we highly recommend leaving the louvers open. To maintain good working conditions of your louvers, please clear any snow on them. Our pergola can withstand heavy rain, but we cannot guarantee it will be 100% waterproof due to some extreme weather conditions. Exceptional climatic events may compromise the perfect sealing of the product. To avoid any damages and injuries, we do not recommend climbing on the roof or the structure of the pergola.

TIPS AND SAFETY INSTRUCTIONS

Depending on the location and surface area, construction may be subject to building permits. Make sure you have checked with your local authorities to obtain the needed information before the assembly.

Product assembly :

- At least 2/3 people required
- Remove protective film (around 1 hour needed)
- Do not keep children near the assembly area
- Beware of the risk of pinching
- Do not tighten the screws before assembling the whole product
- All assembly steps must be carefully followed
- Check the level of the structure on all sides
- Do not anchor the pergola before assembling the whole product

No changes can be made to the product. Products tampered with by the user are not covered by the warranty, thus being declared as void.

The location should be chosen carefully. It is recommended to avoid mounting your pergola on a rainy day, facing the prevailing winds, and under an overhanging tree.

The pergola must be mounted on a flat-level foundation. It is recommended to install it on a concrete slab or 25x25 cm concrete pads at each post. Please, anchor the pergola properly to the ground using expansion screw.

If you would like to mount your pergola near your house or a building, please check the presence of gutters for water drainage.

Should these instructions not be followed or only partially, the warranty will be voided by the seller.

MAINTENANCE

Regular maintenance is necessary to ensure its longevity and aesthetic appearance.

We recommend to :

- Clean your pergola once or twice a year with fresh water using a sponge or cloth.
- Do not use detergent or an abrasive material.
- Check the tightness of the screws regularly (at least once a year).
- Oil fastening regularly (at least once a year).
- Make sure that nothing hinders the water flow in the gutters (leaves, branches...).
- Remove any water that might stagnate around the legs of the pergola (lift the posts skirts).

WARRANTY

This warranty does not cover :

- Normal wear and tear inherent from the products.
- Loss or breakage of any part during unpacking or installation.
- Lack of care, neglect, vandalism, impact with foreign body, force, contact with a brasives material, product aesthetics, disassembly, rebuilding or relocation.
- Force majeure: hail, high winds, storms, snow, floods, lightning etc...
- Product tampered with by the user.

The warranty only takes in account the replacement of spare Diagram or the provided product, no refund will be issued.

All warranty claims must be made at the sales outlet (store or website) where the product has been purchased.


Diagram LISTS (PER CARTON)

Before proceeding with the assembly of your louvered pergola, it is necessary to check that all Diagram listed are supplied and not damaged. Any missing part must be reported within 10 days of delivery.



You can either go through your local outlet store or make the request directly on our website.

Do not discard the packaging without ensuring that the product is functioning properly.





There is a Product Tracking Number in the inner side of the carton(see below diagram). For better and efficient after-sales in the future, when tear down the carton box, please take a photo of the Tracking Number and save the photo.

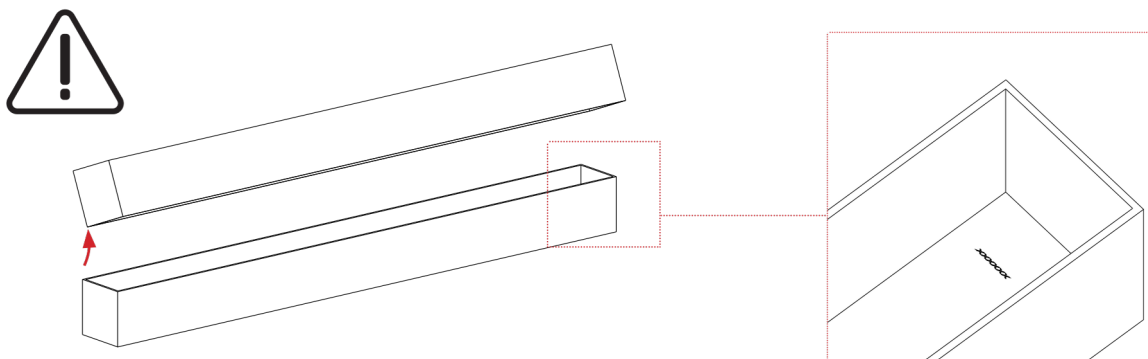



CARTON 1/6

No.	Profile	Diagram	Size	QTY
AO			116X116 L=2550mm	1
AO-2			116X116 L=2550mm	1
AO-3			116X116 L=2550mm	1

NR.	Diagram	ILOŚĆ
IO		3
JO		3



NR.	Diagram	ILOŚĆ
KO		2
LO		32
LO-1		34
EO-1		1
EO-2		1
EO-3		2
EO-4		2
EO-5		1
MO		66
MO-1		66

NR.	Diagram	ILOŚĆ
TO	 10×80	12
XO-1	 6×35	12


NR.	Diagram	ILOŚĆ
XO-2	 6×20	34
NO		2
OO-1		2
OO-2		2
PO		2
YO	 6×45	6
RO		18
SO		68
TO-1	 8×100	12
UO-1	 plastic nut	34

CARTON 1/6




NR.	Diagram	ILOŚĆ
WO	  4x16 PH2	136
WO-1	 5x19	36
XO	  6x40 4mm	66
QO	  6mm	18

NR.	Diagram	ILOŚĆ
ZO-1	 4mm	1
ZO-2	 4mm	1
ZO-3	 6mm	1
ZO-4	 6mm	1

NR.	Diagram	ILOŚĆ
WO-2	  4x19 PH2	2
XO-3	  6x16 4mm	2
VO		168
UO	 lock nut	100

NR.	Diagram	ILOŚĆ
ZO-5	 10mm	1
ZO-6	 PH2	1
ZO-7	 10mm	1
ZO-8		1

CARTON 2/6

No.	Profile	Diagram	Size	QTY
BO-3			75X195 L=2589mm	2
BO-4			75X195 L=2640mm	1
BO-5			75X195 L=2640mm	1
CO-3			75X195 L=3449mm	1
CO-4			75X195 L=3449mm	1

CARTON 2/6

No.	Profile	Diagram	Size	QTY
EO			64X111 L=3366mm	1
FO			27X8 L=2442mm	2
HO			L=1300mm	2

CARTON 3/6

No.	Profile	Diagram	Size	QTY
GO			166X38 L=3366mm	9

CARTON 4/6

No.	Profile	Diagram	Size	QTY
GO			166X38 L=3366mm	9

CARTON 5/6

No.	Profile	Diagram	Size	QTY
GO			166X38 L=3366mm	9

CARTON 6/6


No.	Profile	Diagram	Size	QTY
GO			166X38 L=3366mm	7


Before proceeding with the assembly of your louvered pergola, it is necessary to check that all parts listed are supplied and not damaged.

Any missing part must be reported within 10 days of delivery.

Do not discard the packaging without ensuring that the product is functioning properly.

ASSEMBLING DIAGRAM

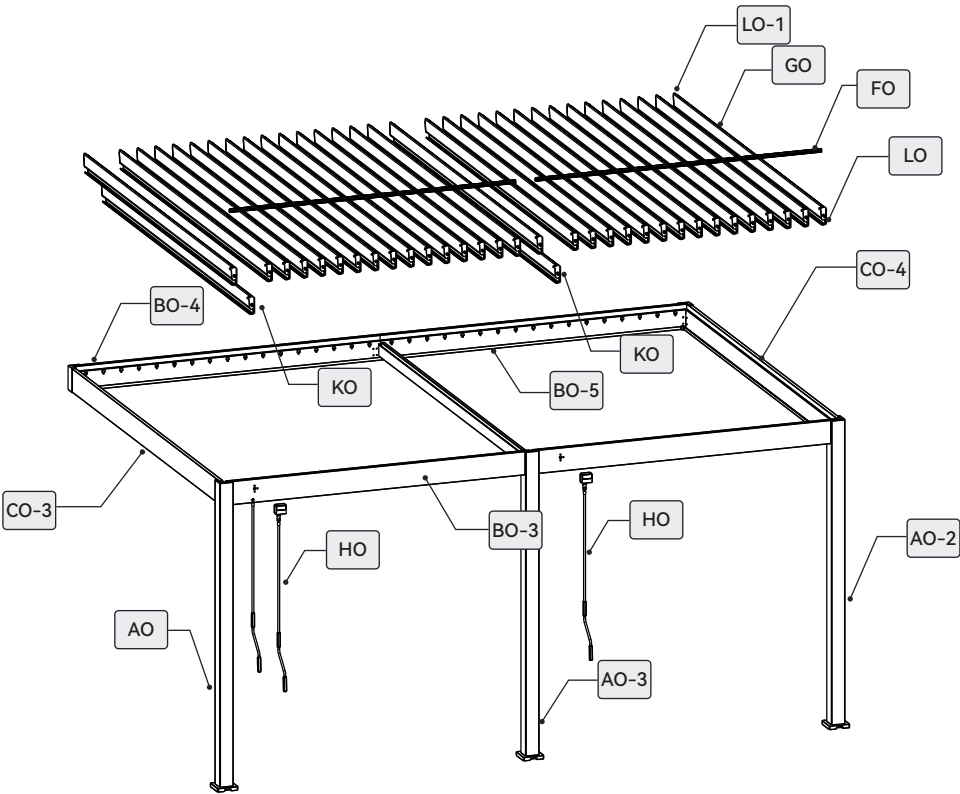


AO		1
AO-2		1





IO		2
JO		2


XO-1		6x35	4mm	8
------	---	------	-----	---

ZO-1		4mm
ZO-2		4mm

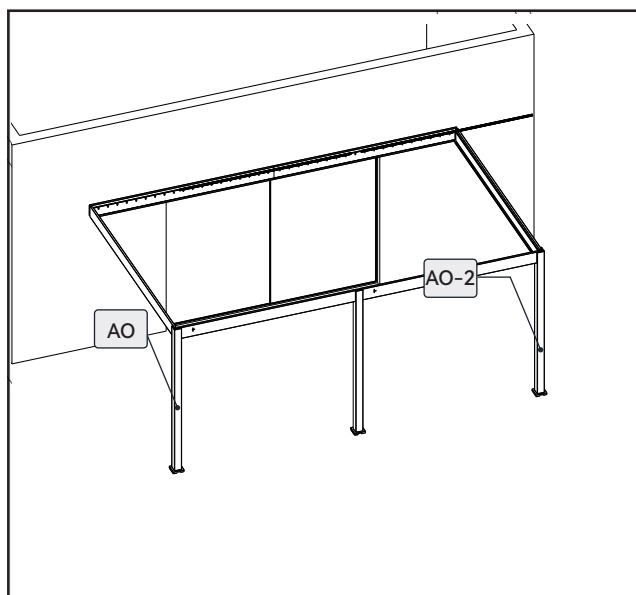

Post installation diagram

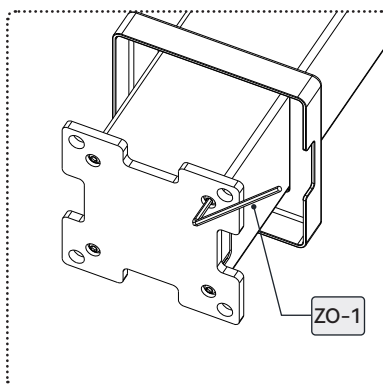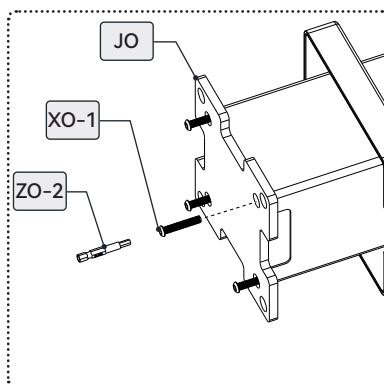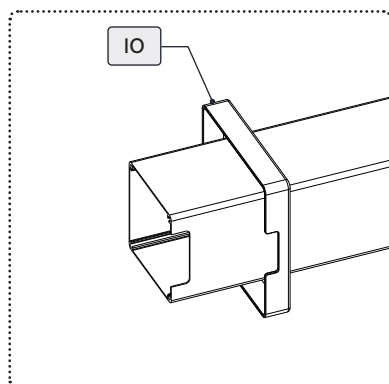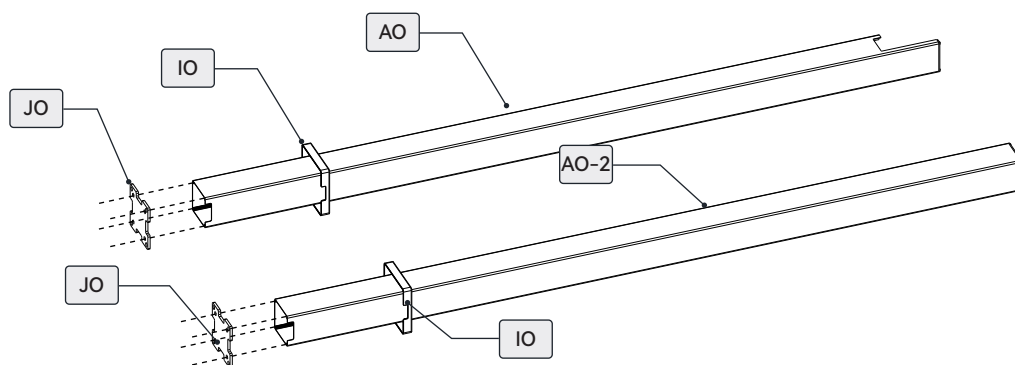


AO-3		1
------	---	---



IO		1
JO		1

XO-1		4
------	---	---

ZO-1		4mm
ZO-2		4mm

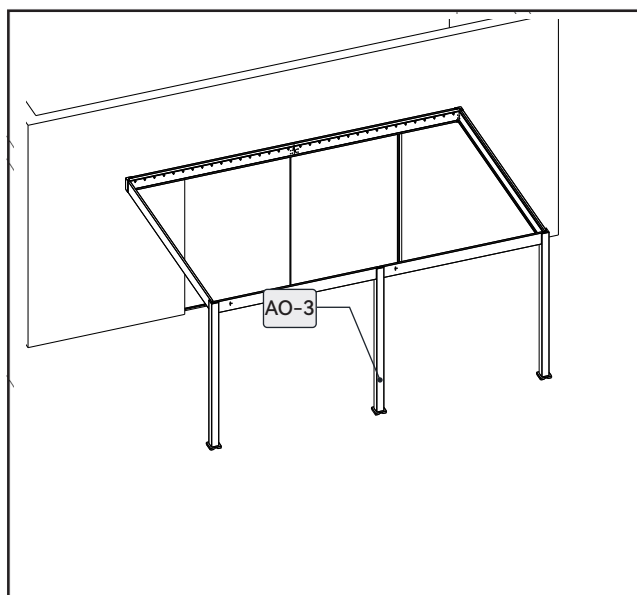

Post installation diagram

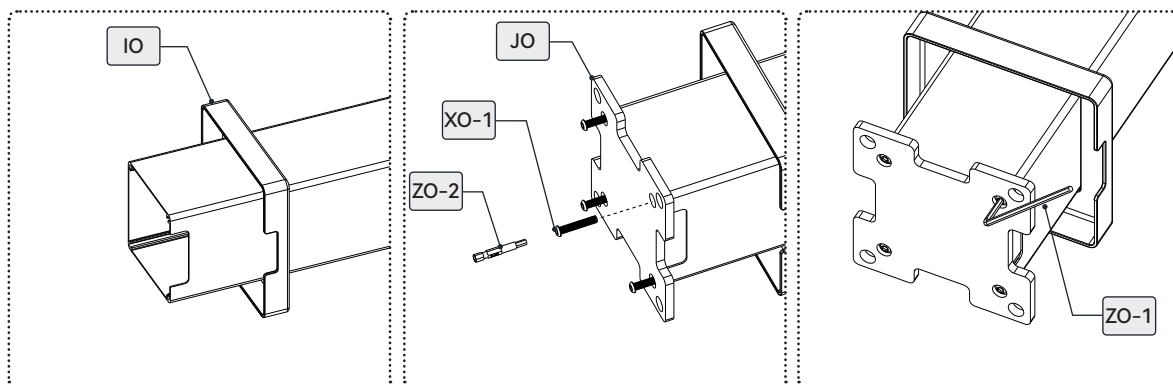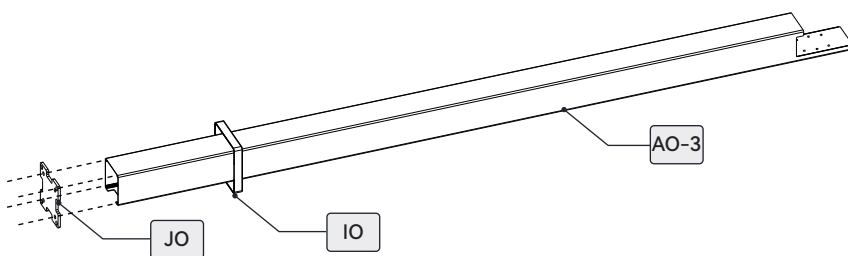


BO-4		1
BO-5		1


EO-4		2
EO-5		1
TO-1	 8x100	12



EO-3		2
WO-1	 5x19  8mm	20






ZO-7	 8mm	
------	--	--



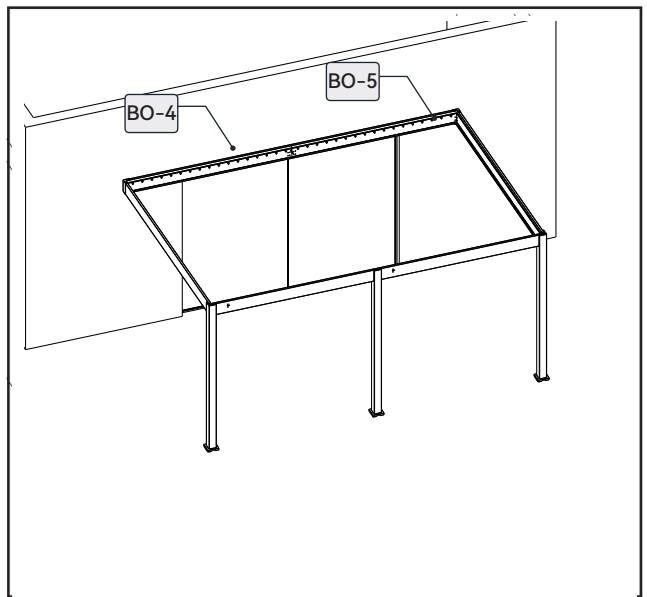



Connect beams to columns

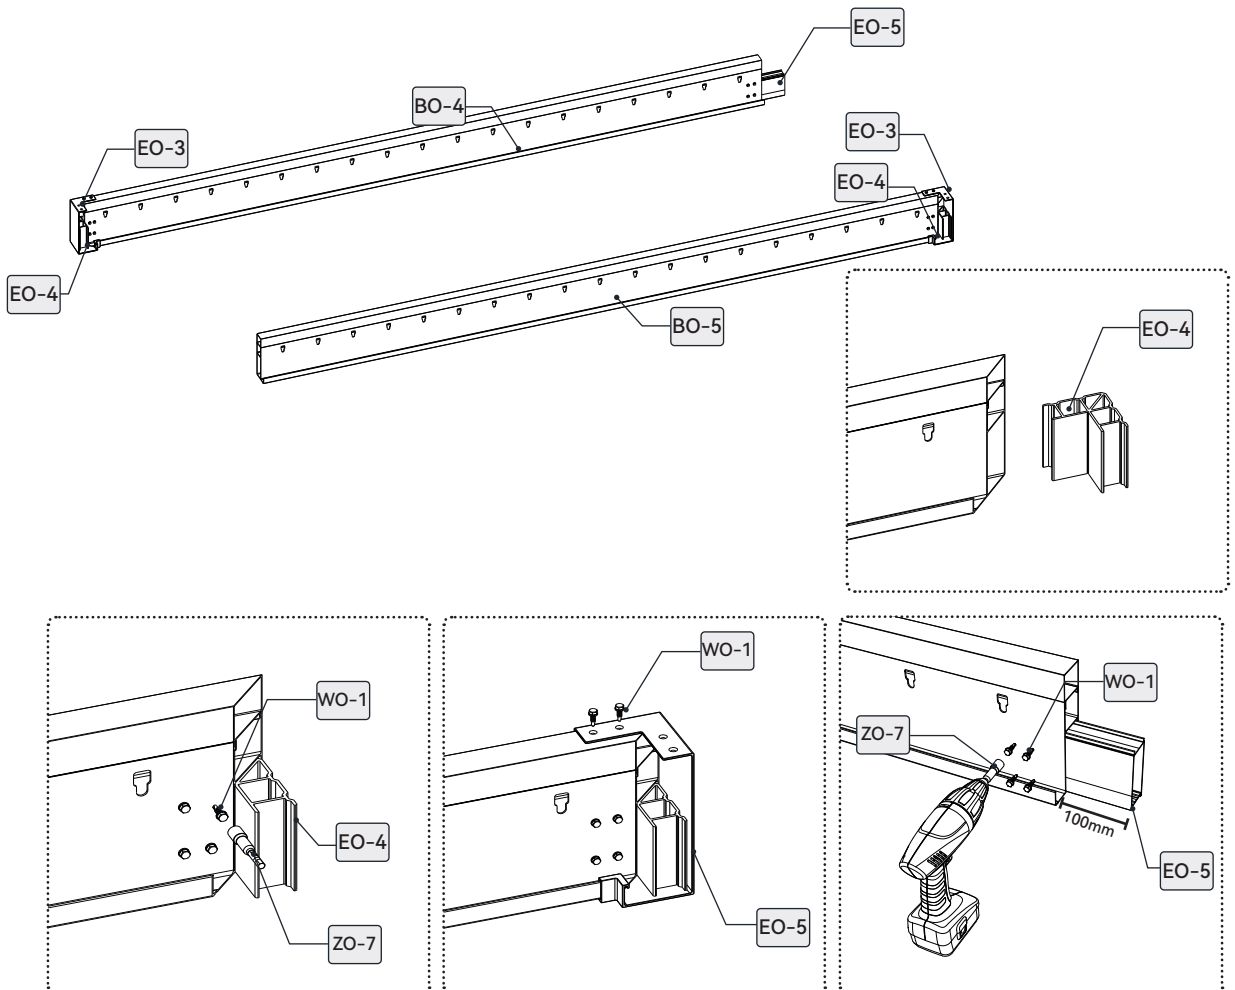


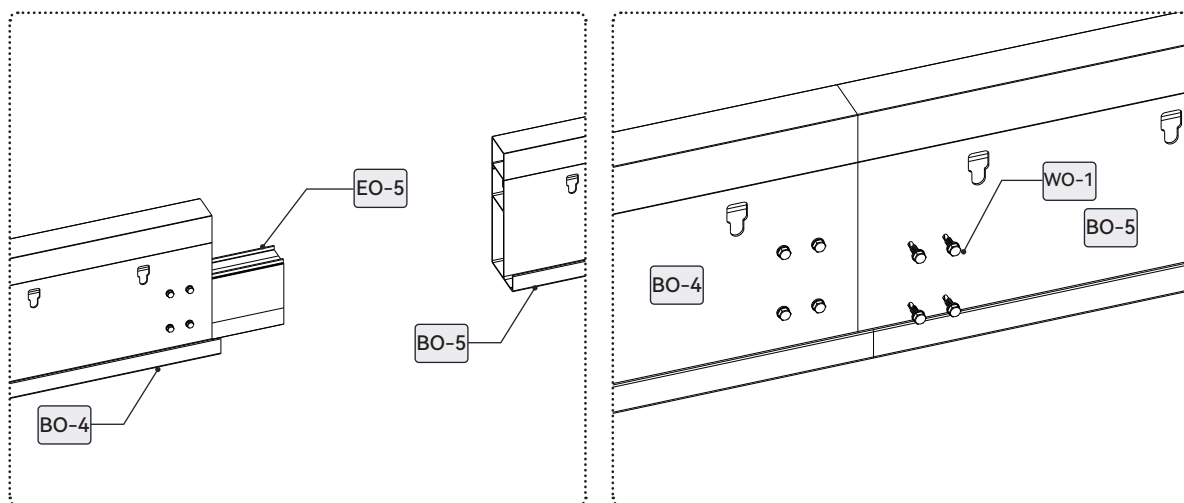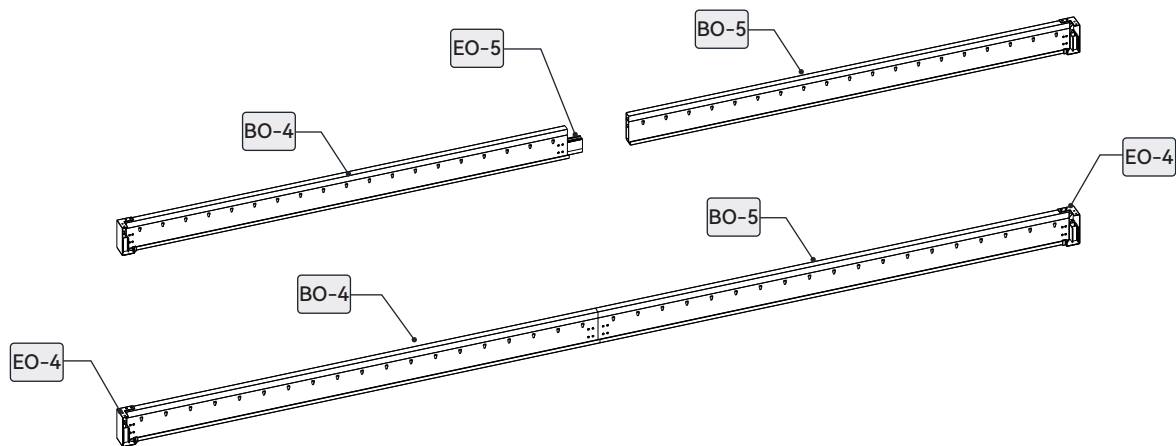

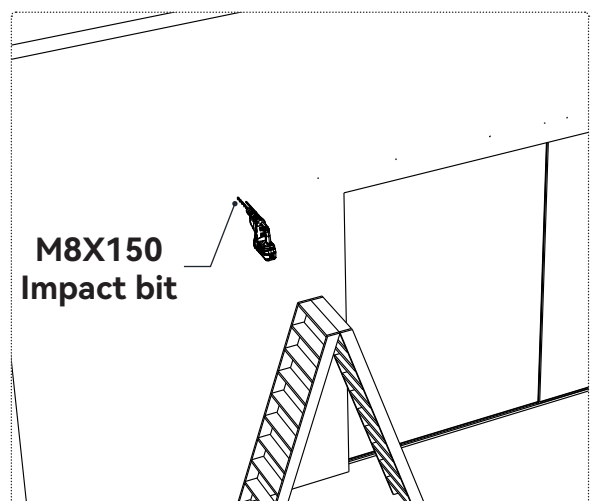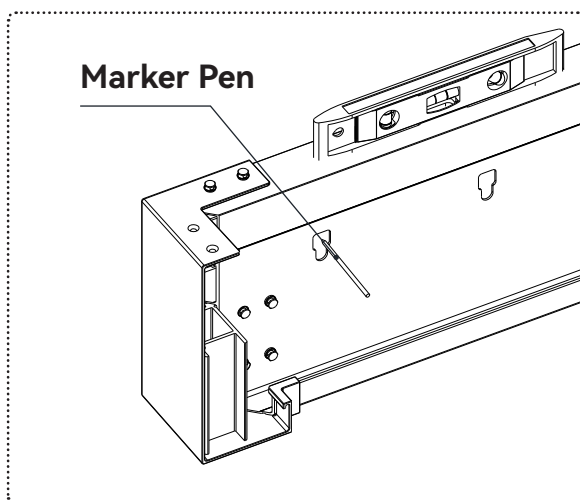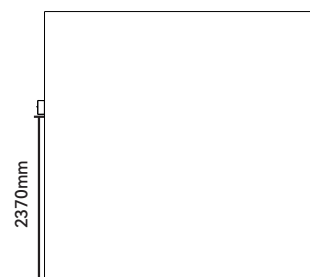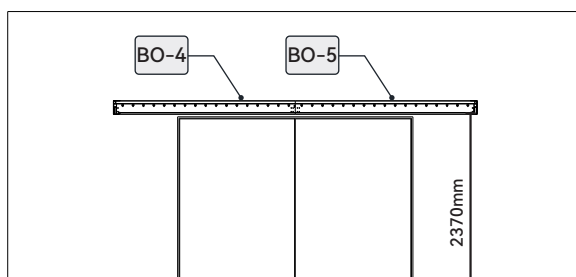
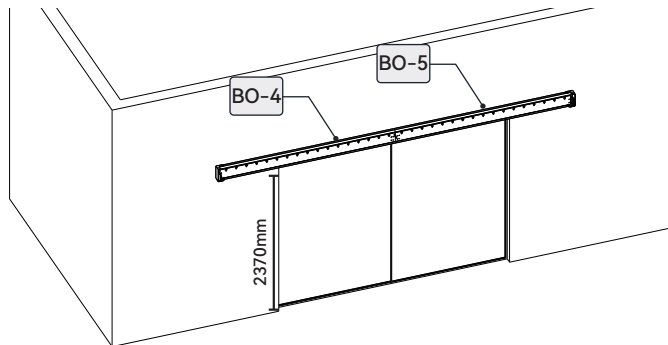


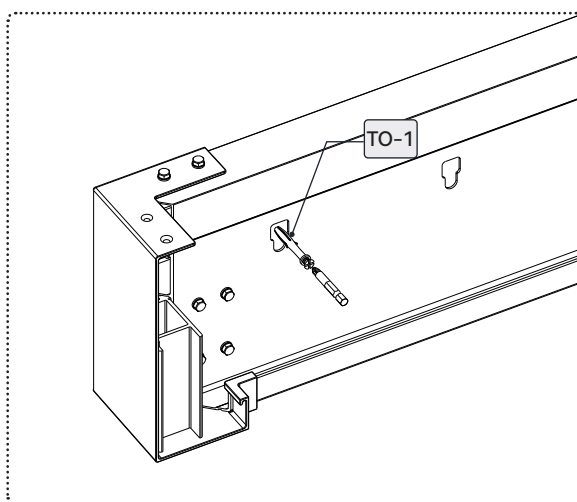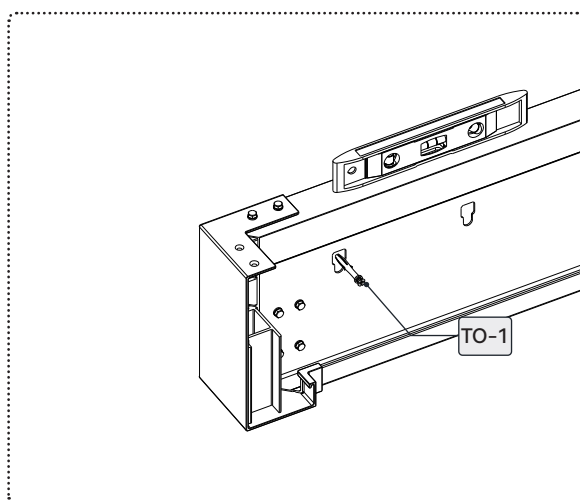
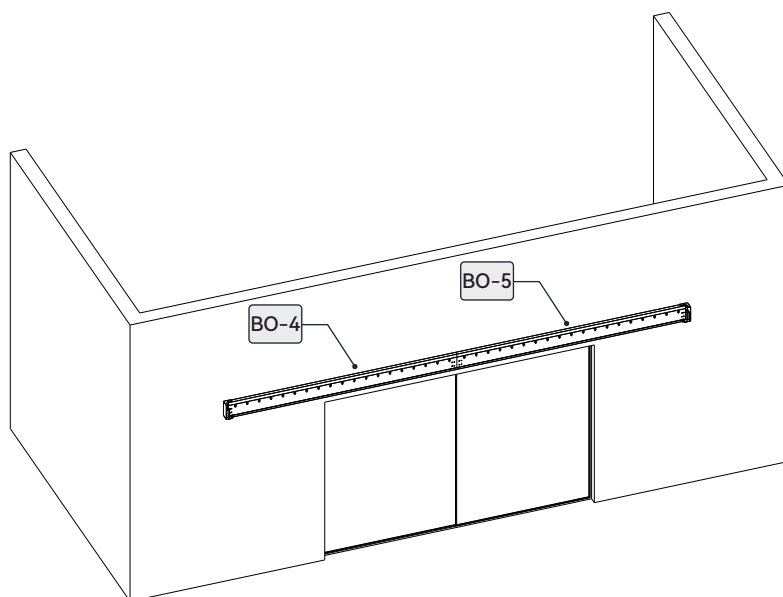


CO-3		1
CO-4		1
QO	  6mm	6
WO-1	 5x19  8mm	12
ZO-3	 6mm	
ZO-4	 6mm	

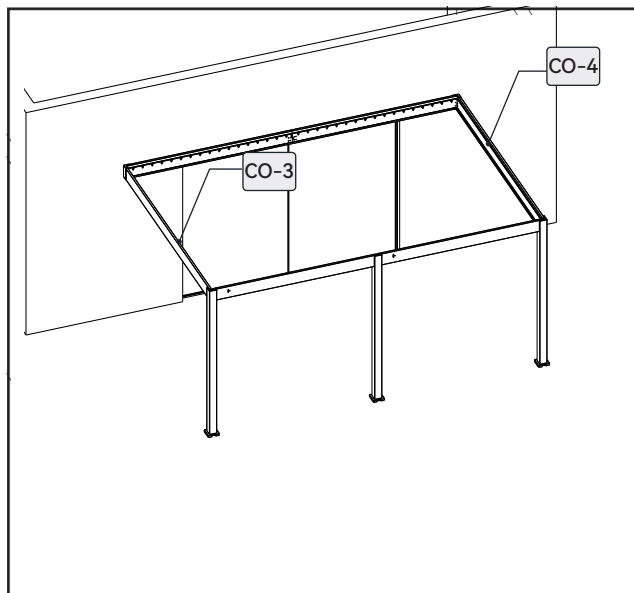


Connect beams to columns



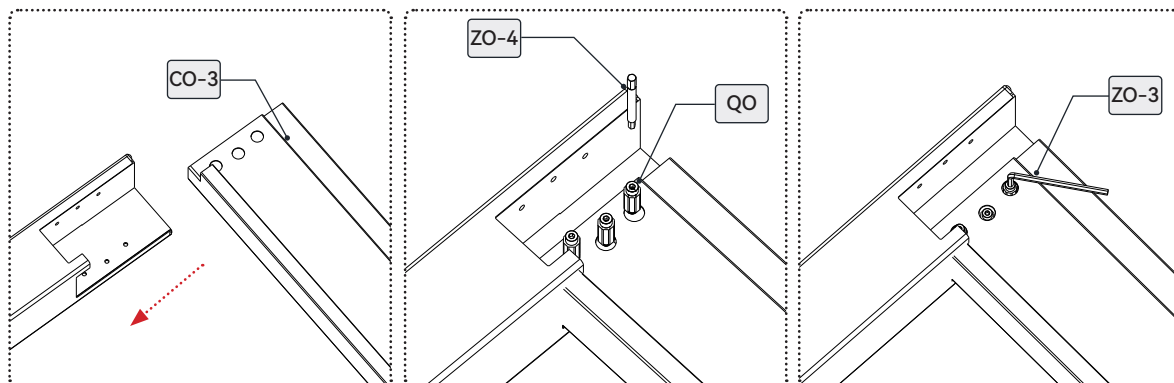
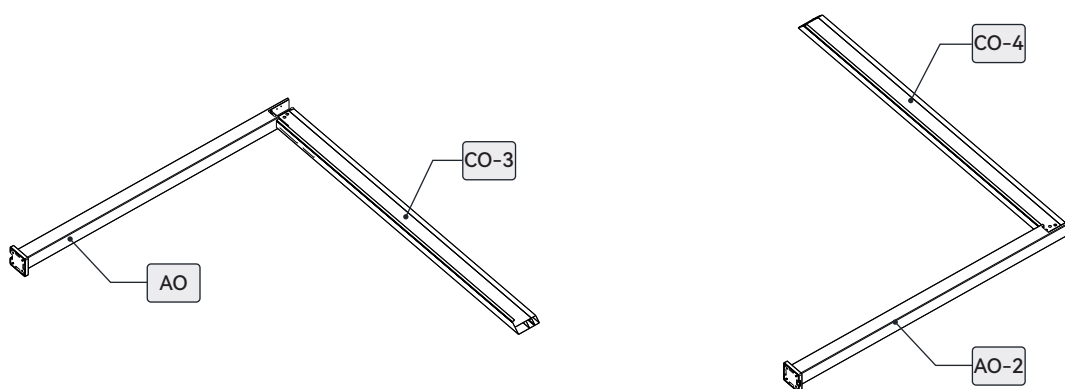


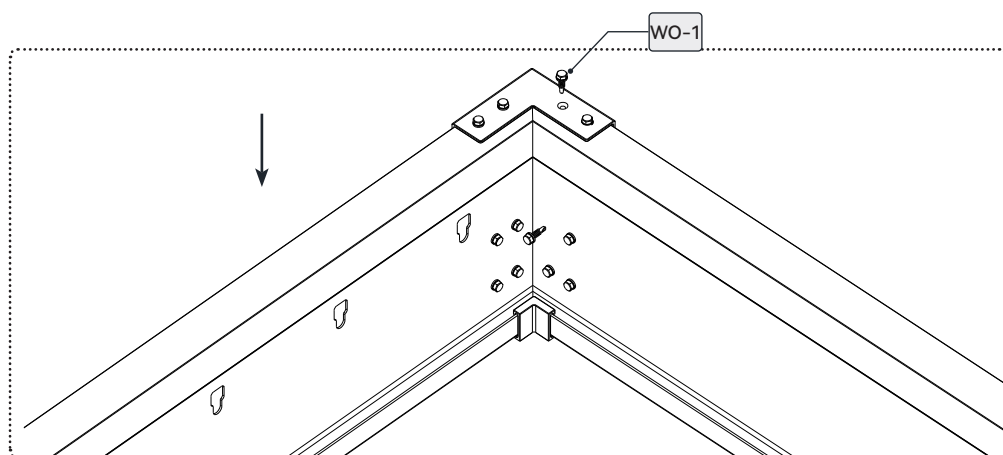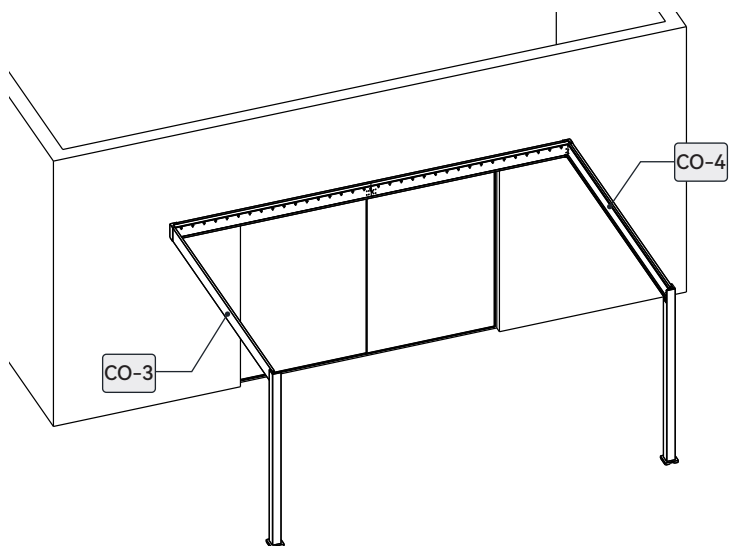

BO-3		2
QO	 	12
ZO-3	 6mm	
ZO-4	 6mm	

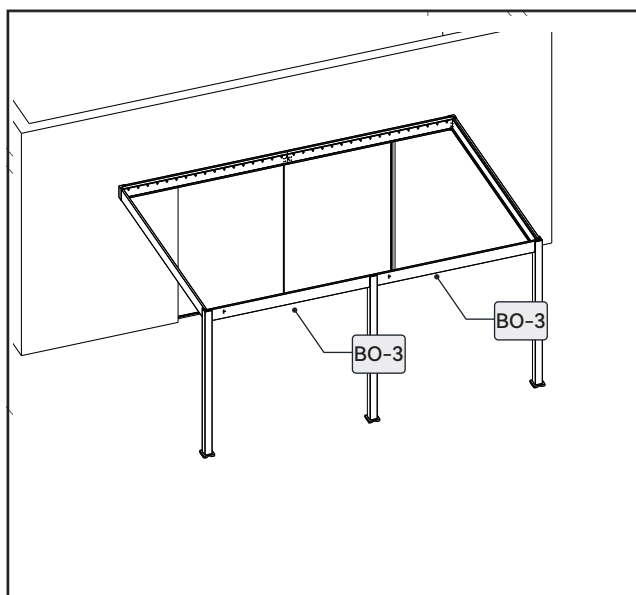


Connect beams to columns

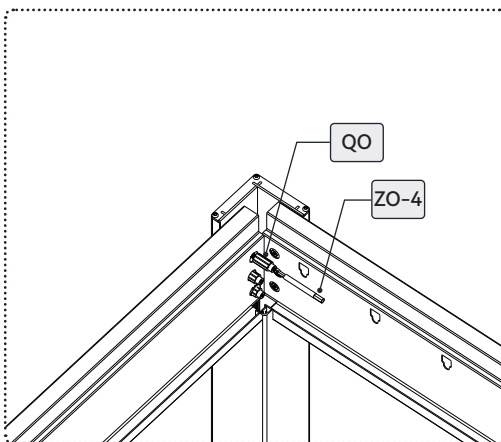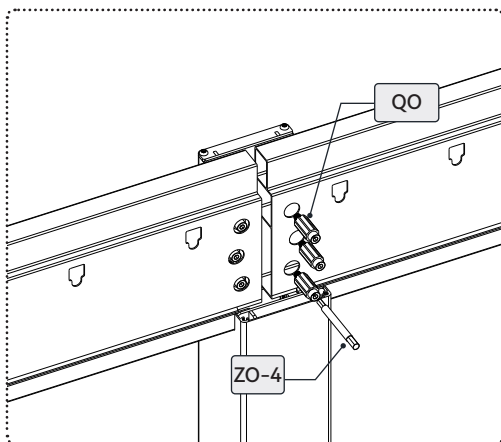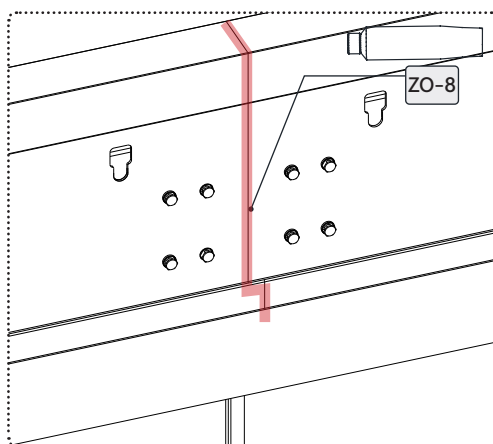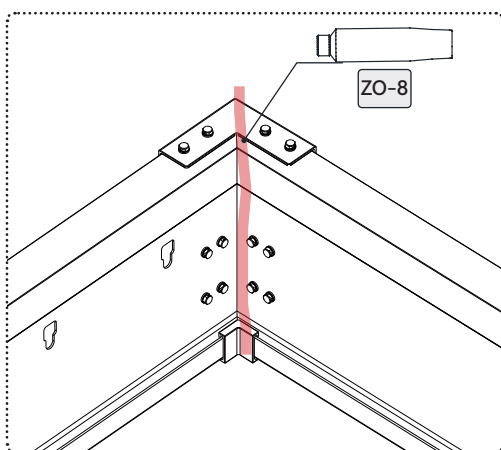





EO		1
----	--	---






EO-1		1	WO-1			4
EO-2		1	WO-2			2
XO-3		2				

ZO-7		
------	---	--

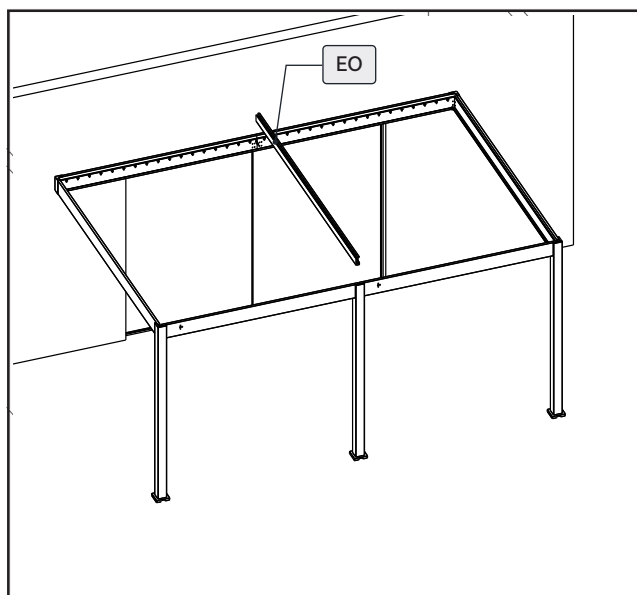

Connect beams to columns

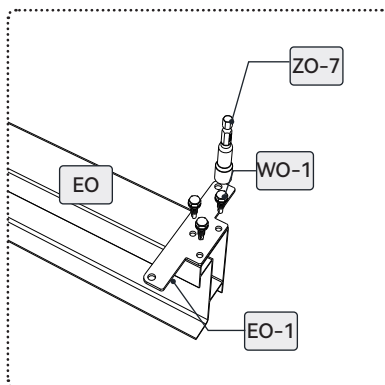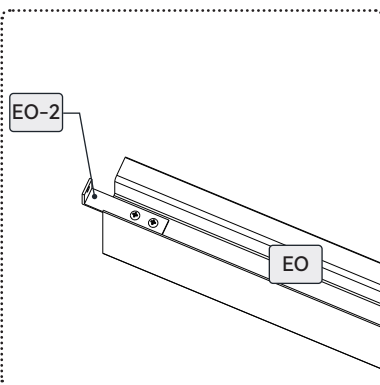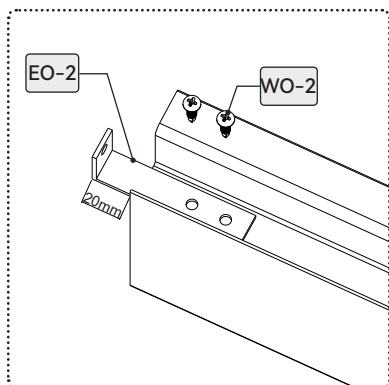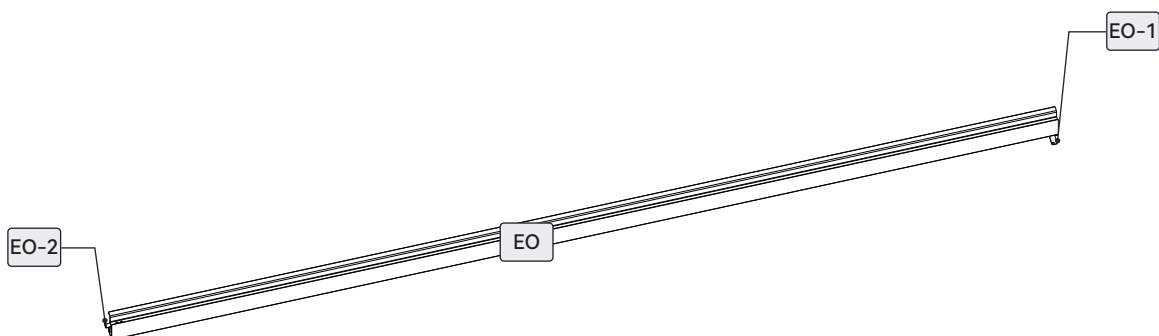

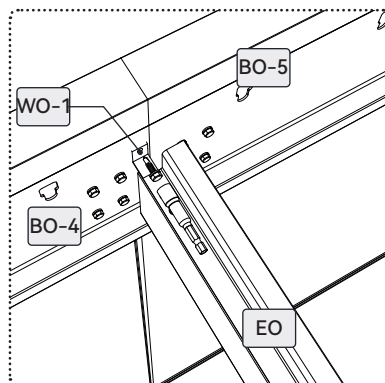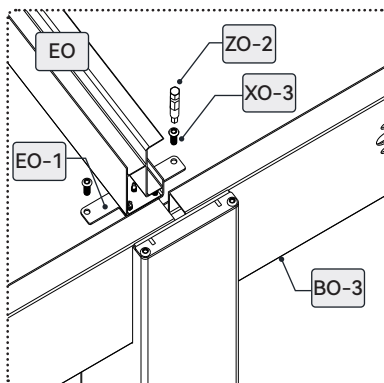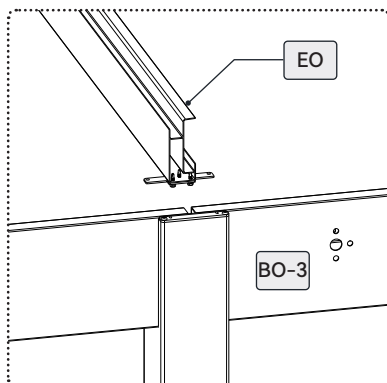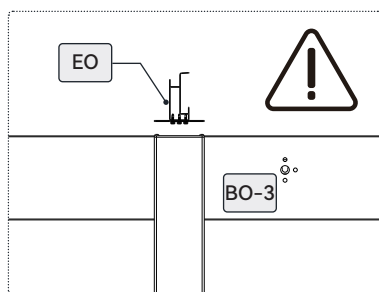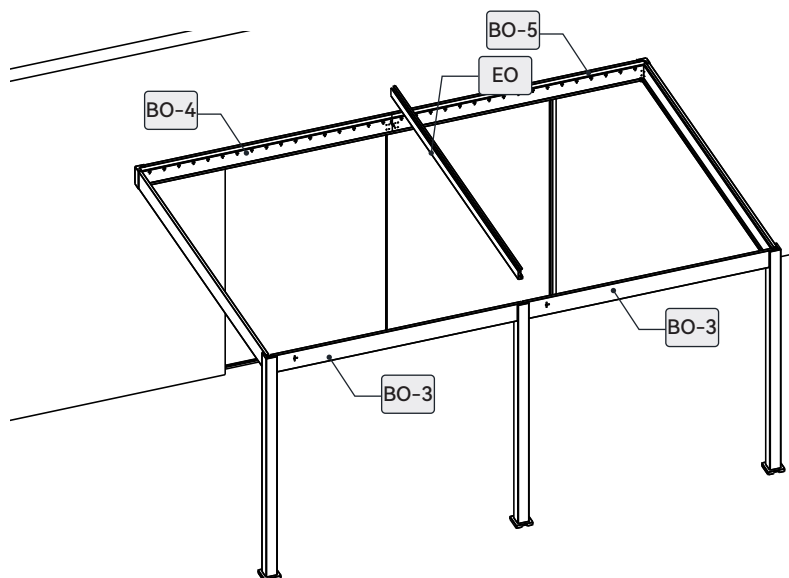

KO		2
LO		32
LO-1		34


MO		66
MO-1		66
XO		66

UO		66
VO		66

ZO-1		4mm
ZO-2		4mm
ZO-5		10mm


Louver sealing plate

X32

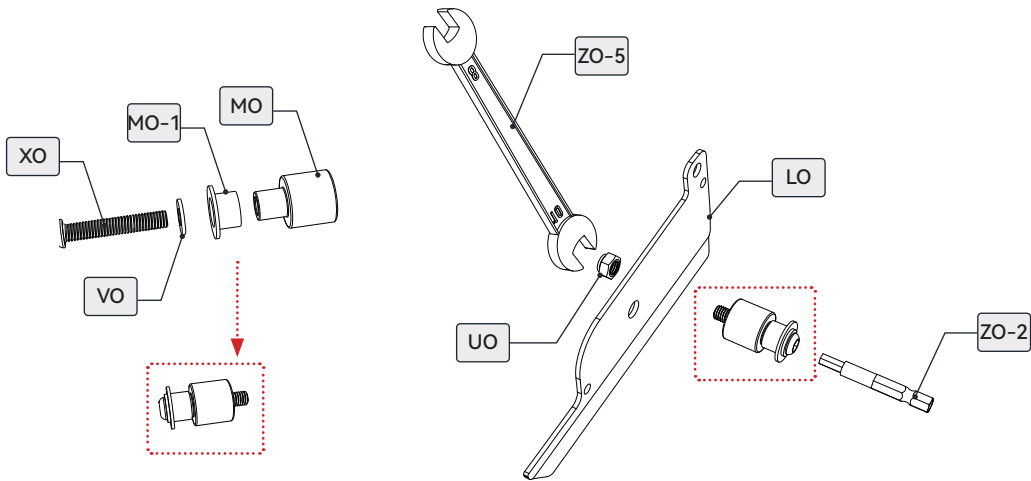


Louver sealing plate

X34

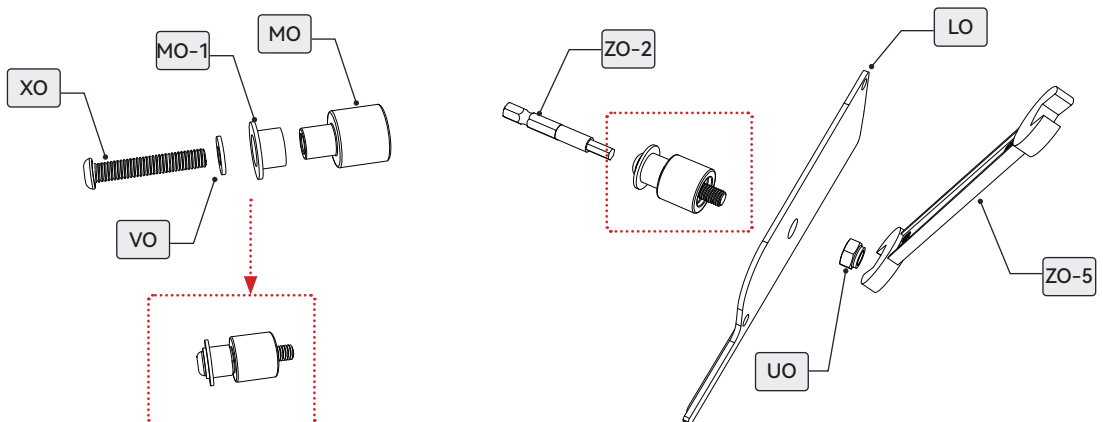


GO			34
WO			136
ZO-6			PH2


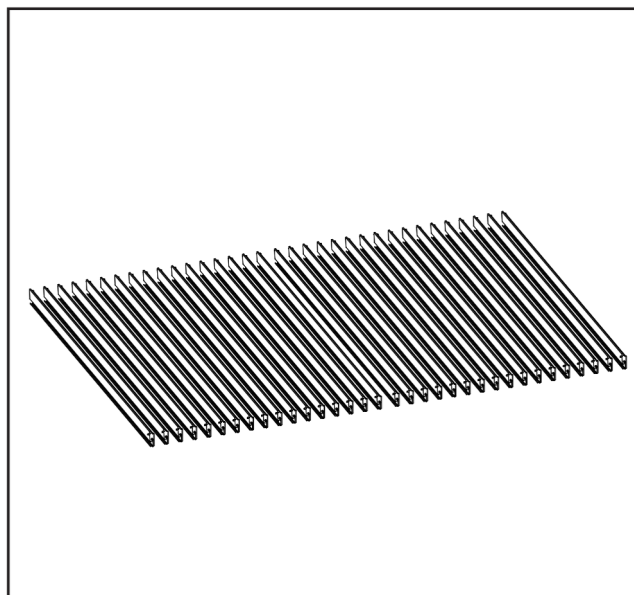



louver connection

X2

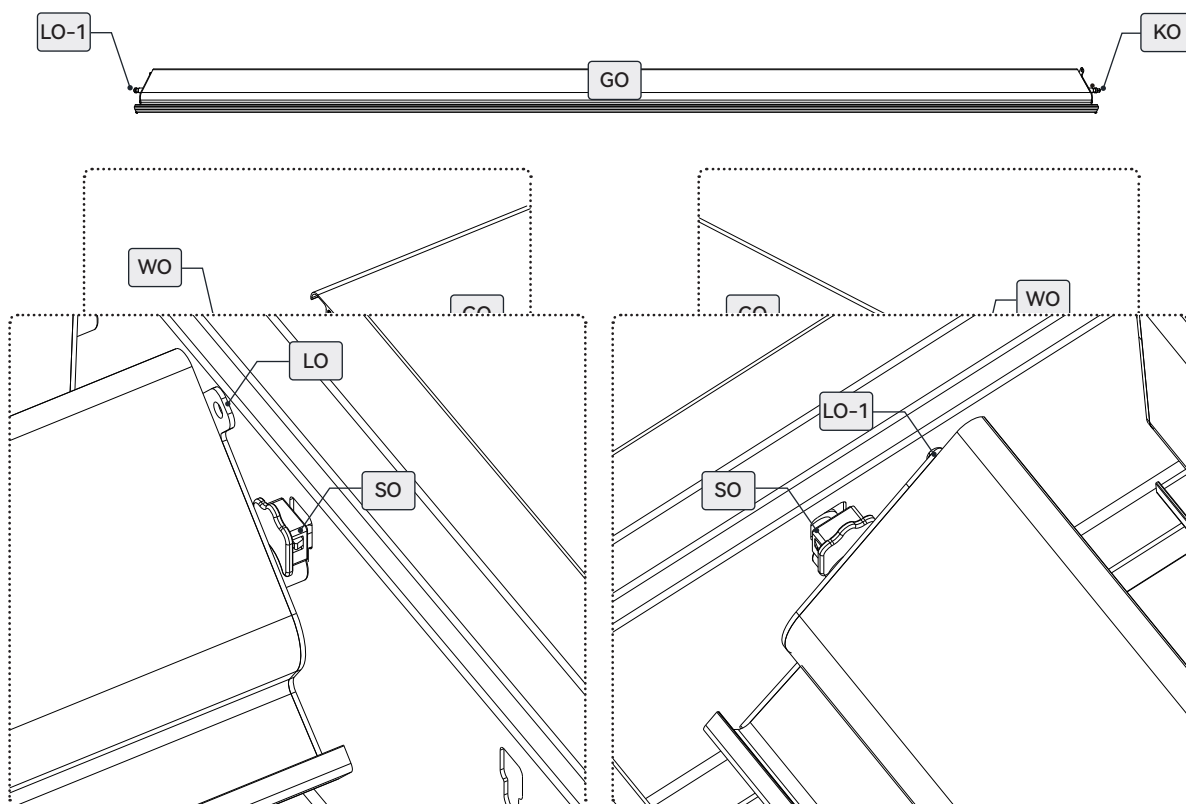




X32

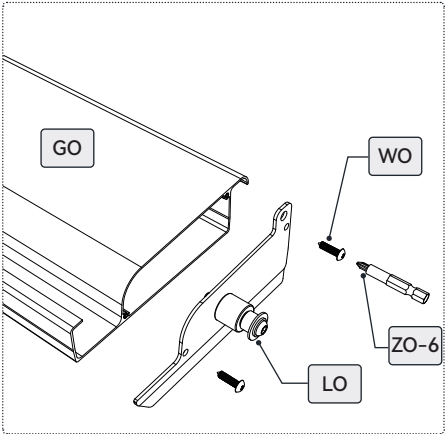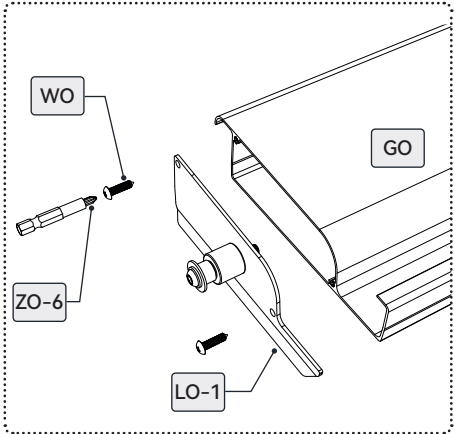


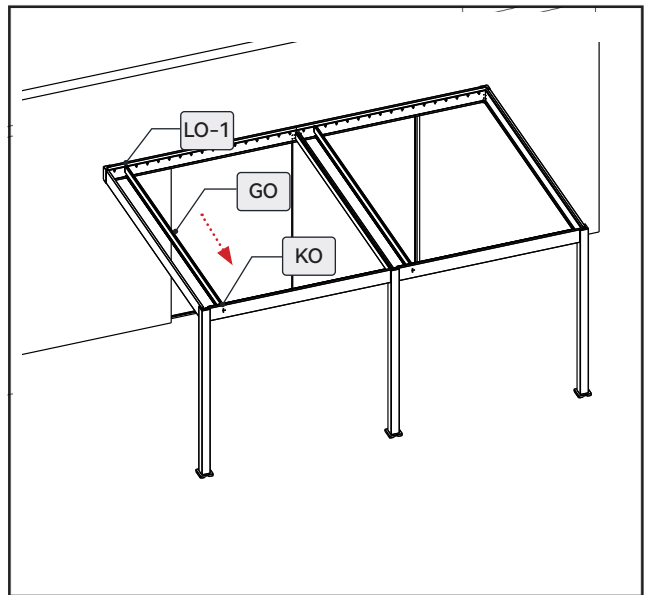




Fasten rubber plugs on both ends of the louvers

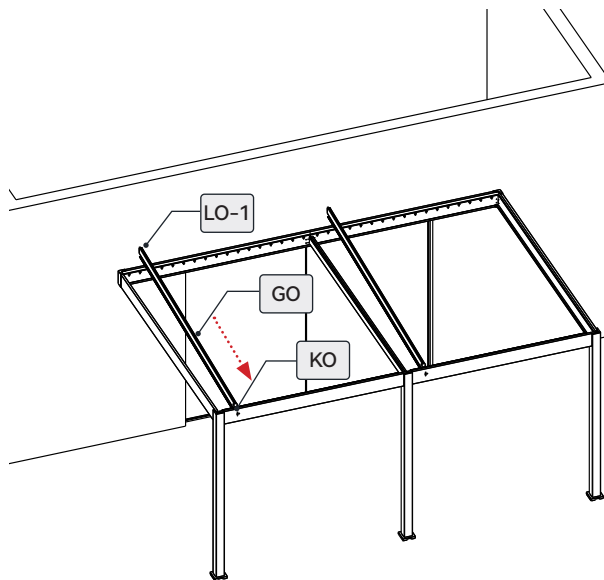

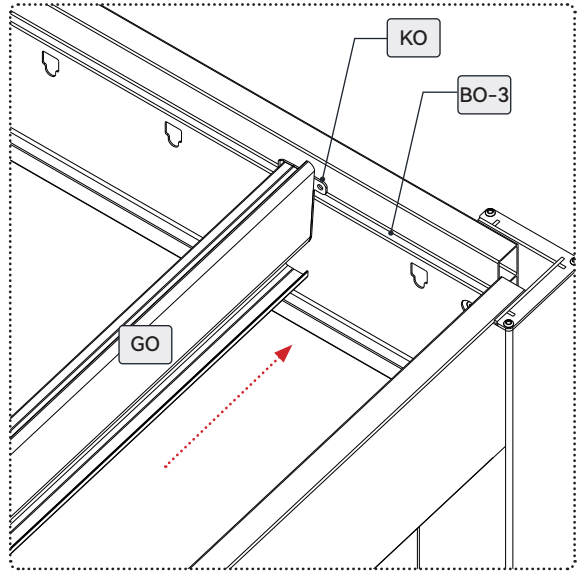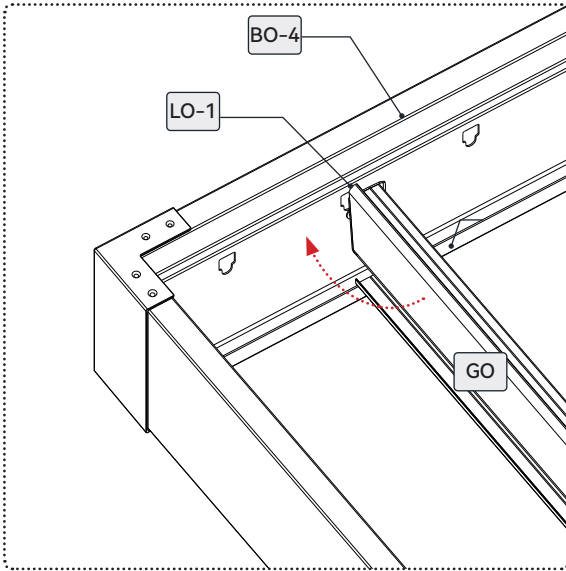

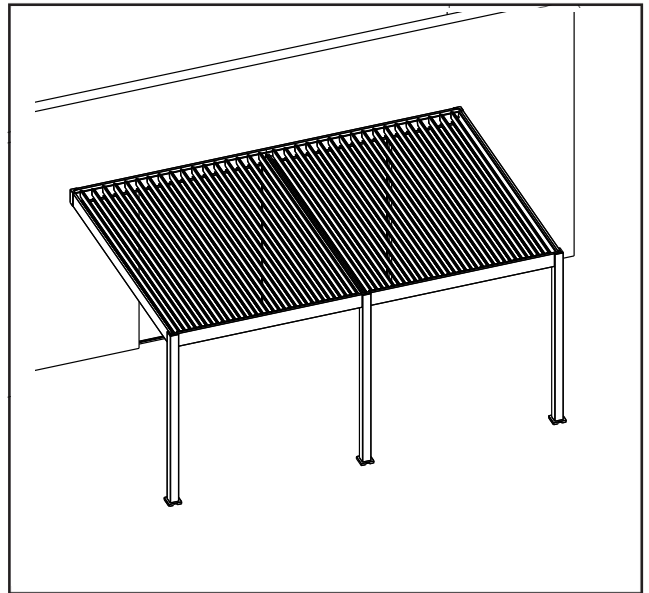


Put in the other louvers and seal the end caps

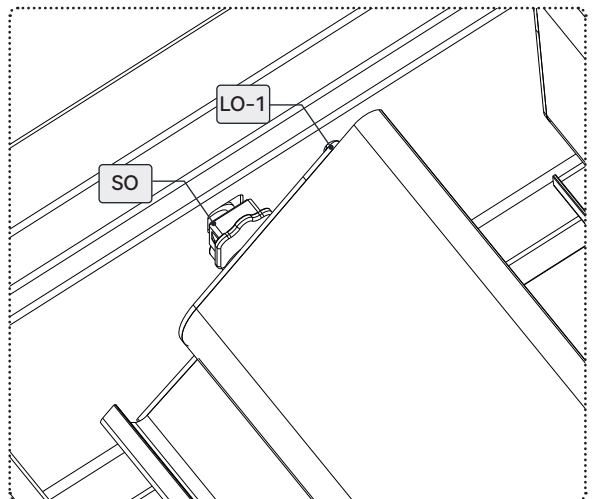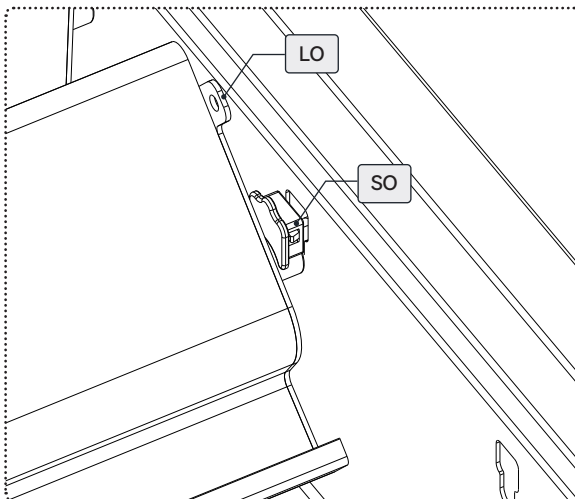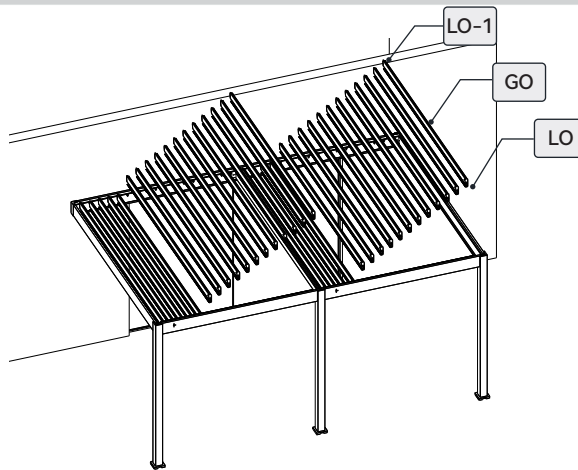

OO-1		2
OO-2		2
YO		6

PO		2
NO		2

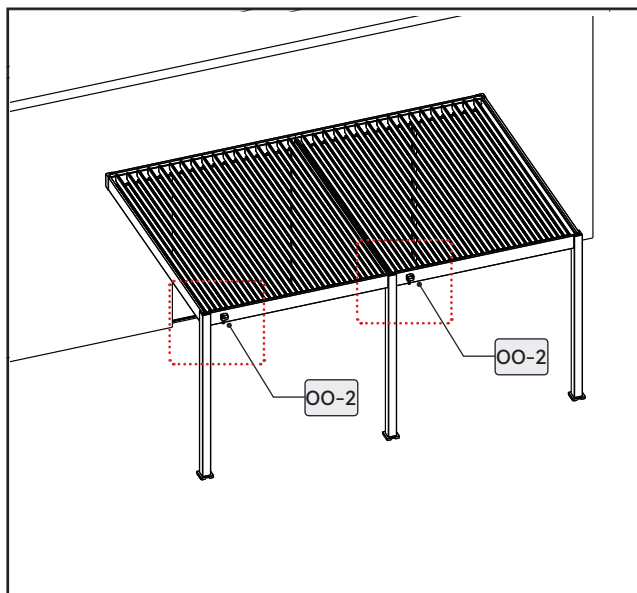

Complete the connection of the main shaft louvers

