


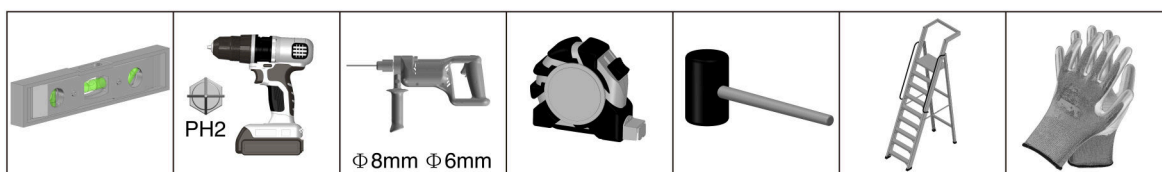
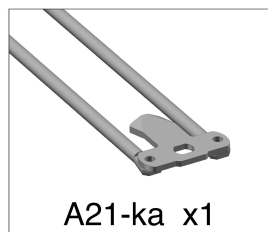
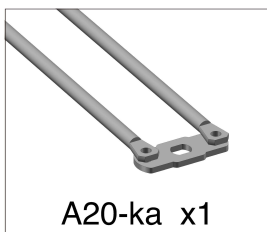
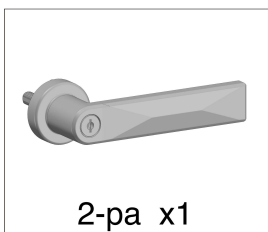
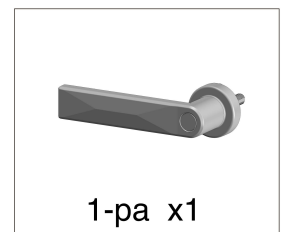
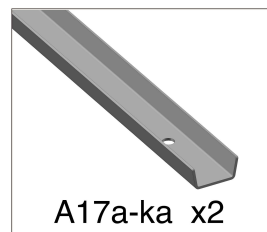
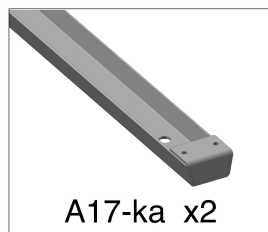
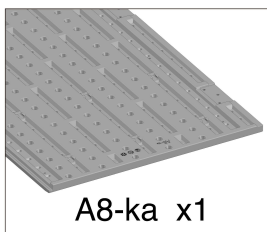
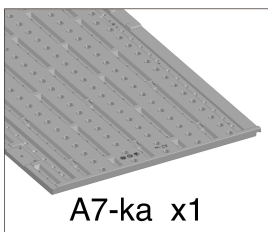
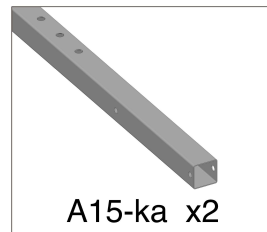
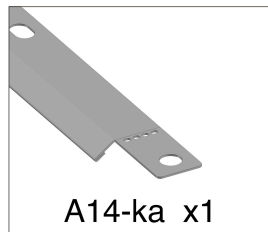
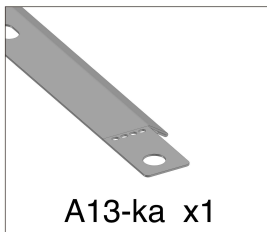
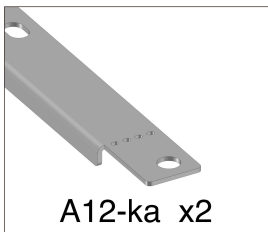
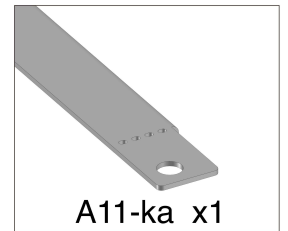
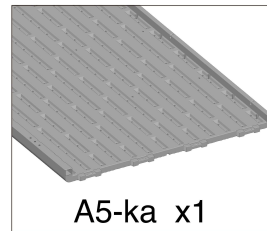
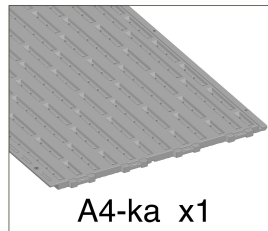
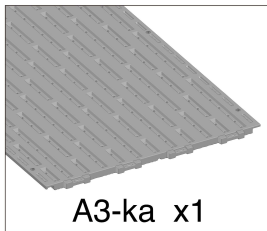
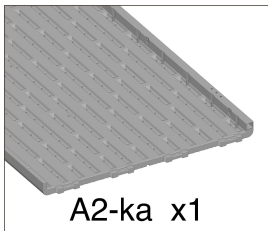
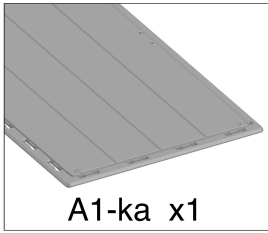
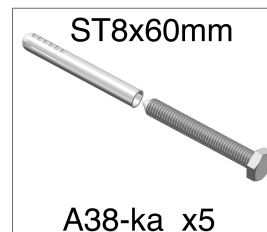
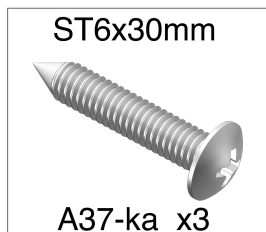
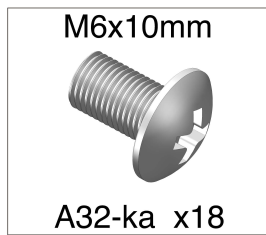
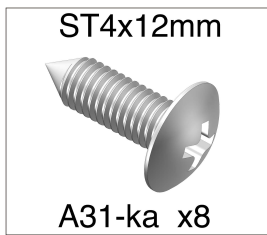
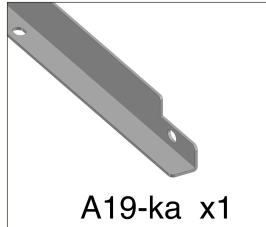
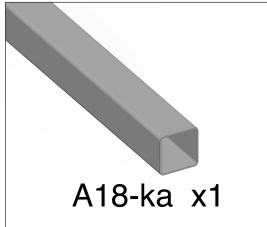
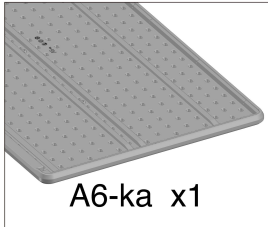
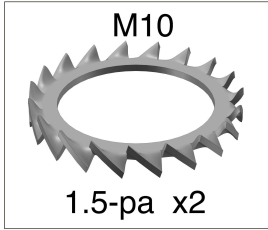
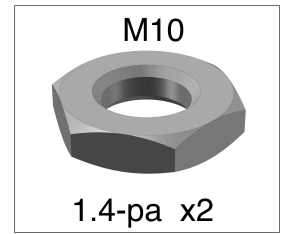
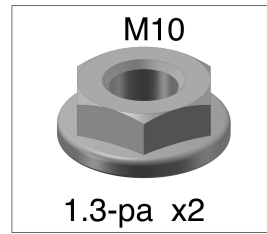



## DAKOTA 4.7x2.5 Szafa/Tool cabinet

Instrukcja montażu/Assembly instructions

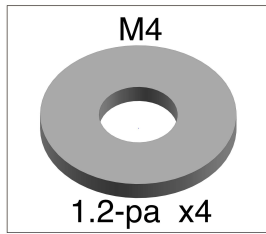


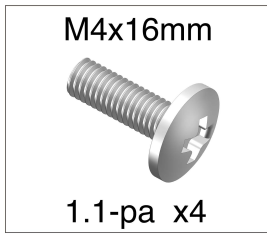



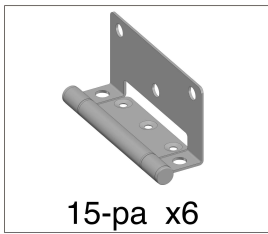







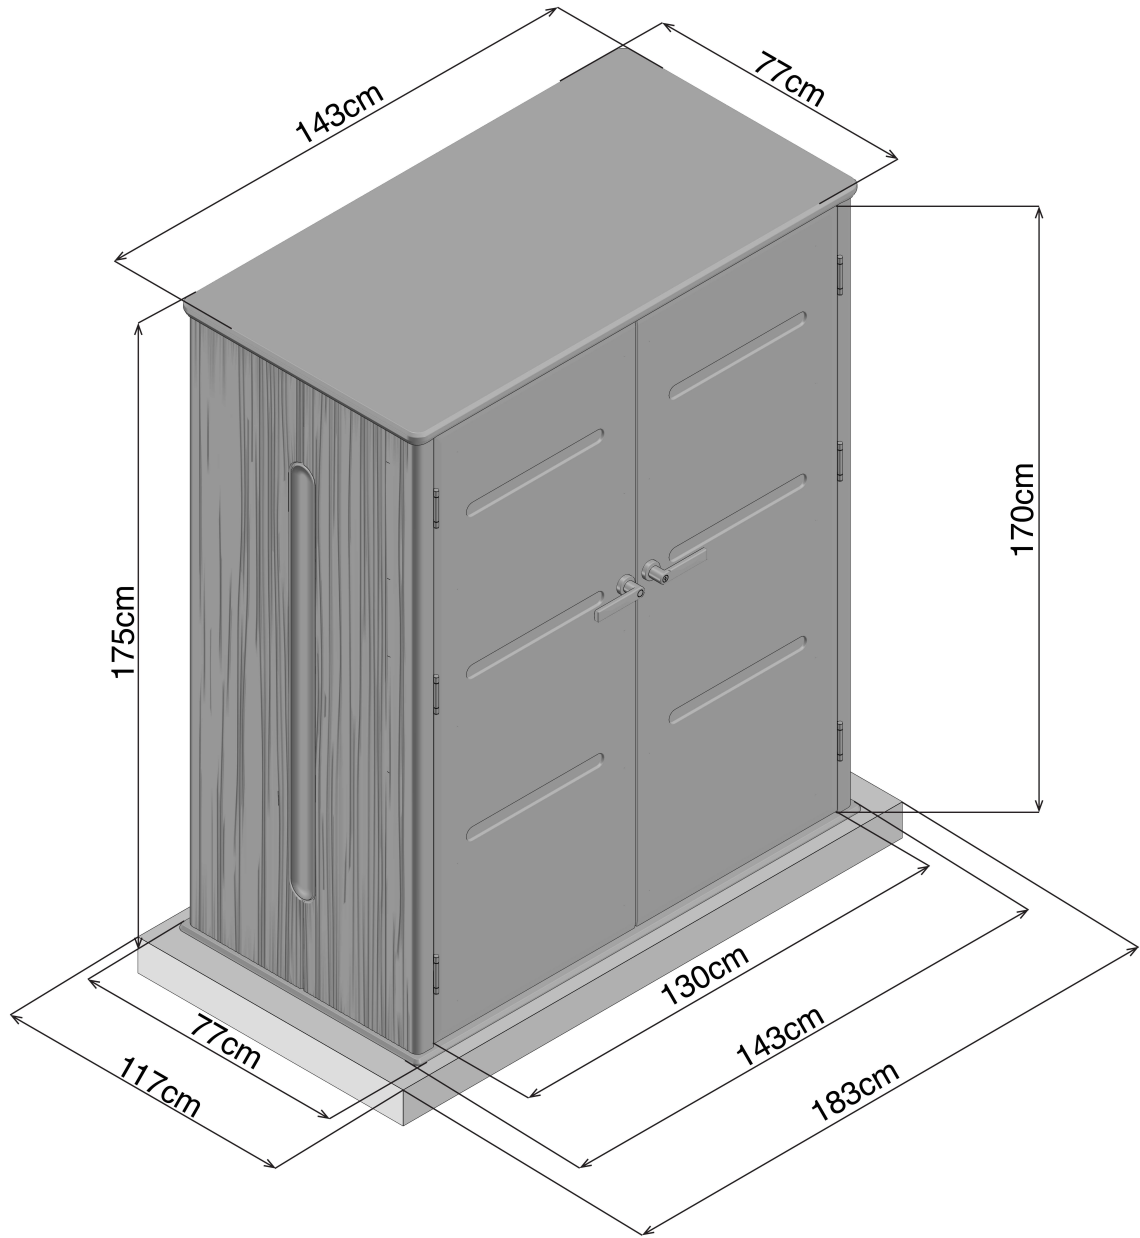


1


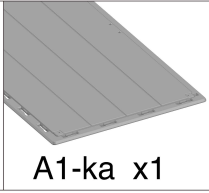










A1-ka x1





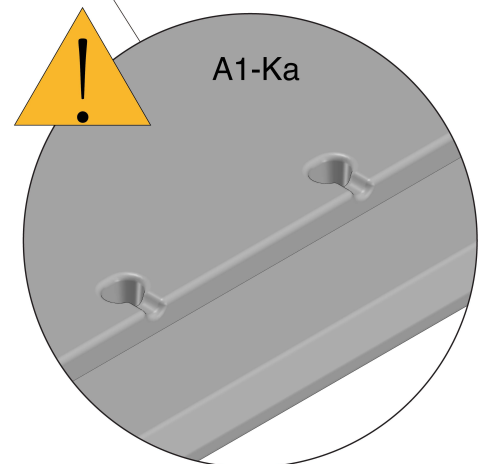
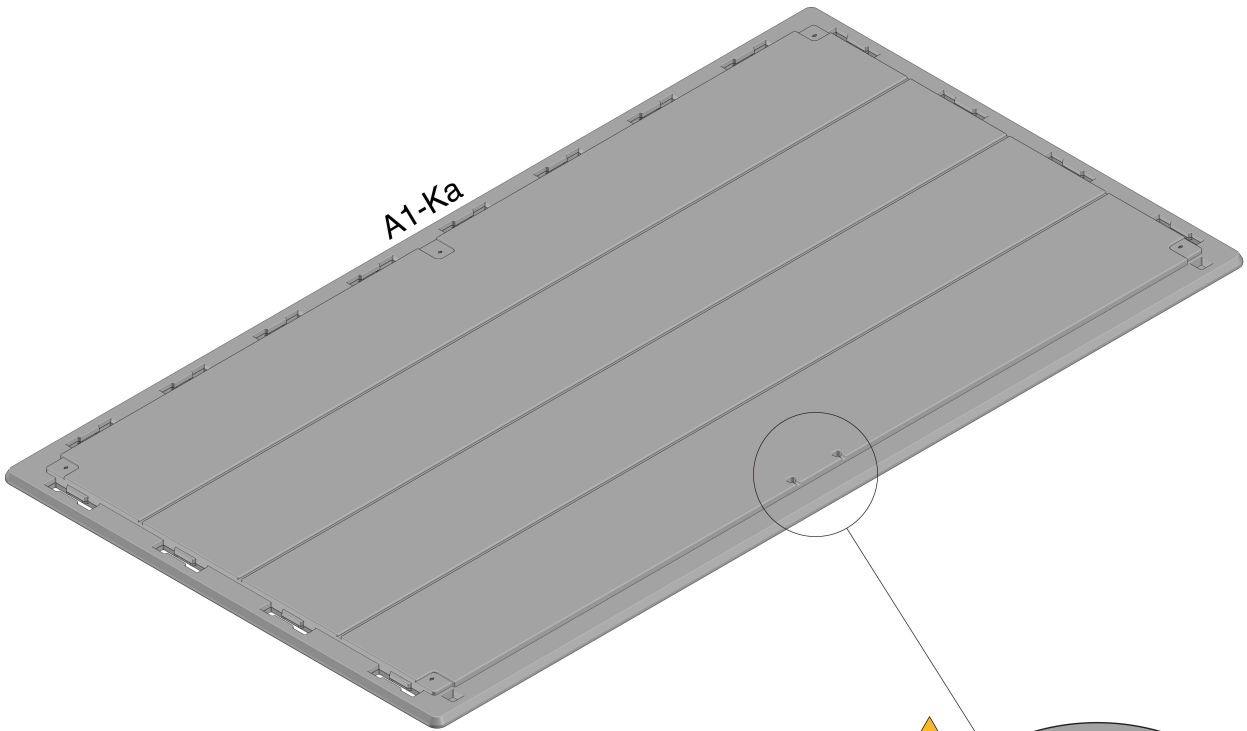
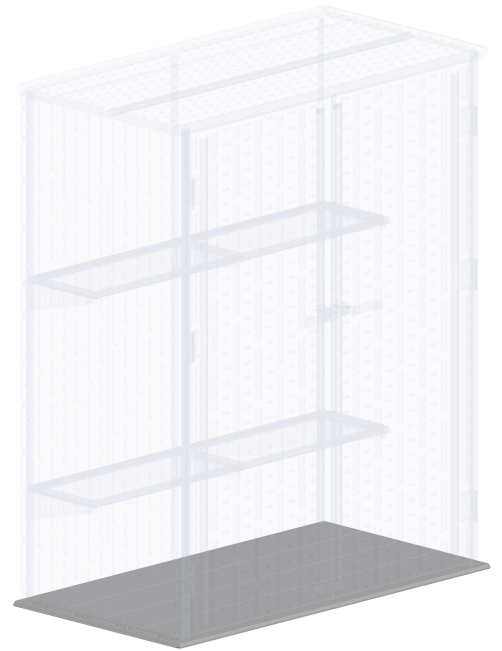


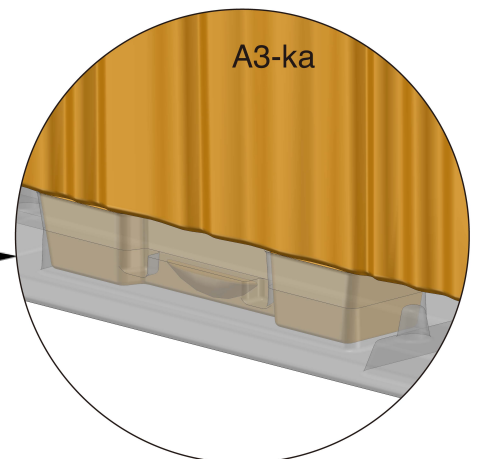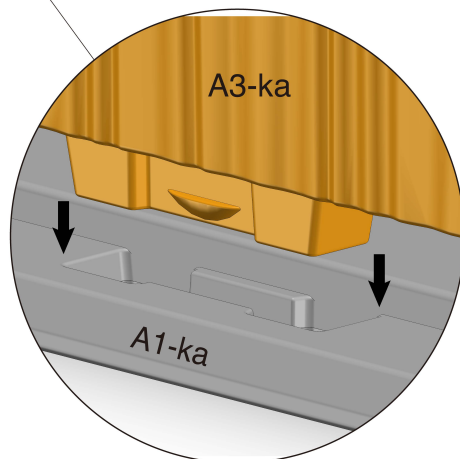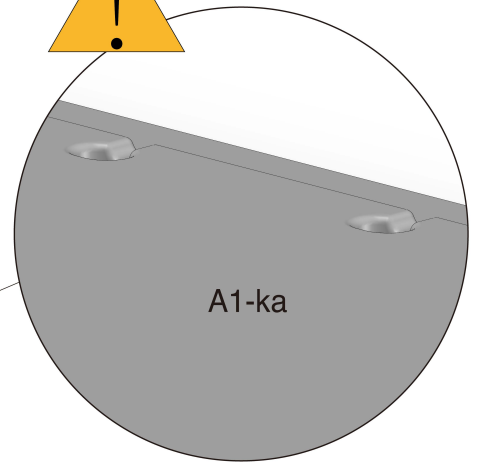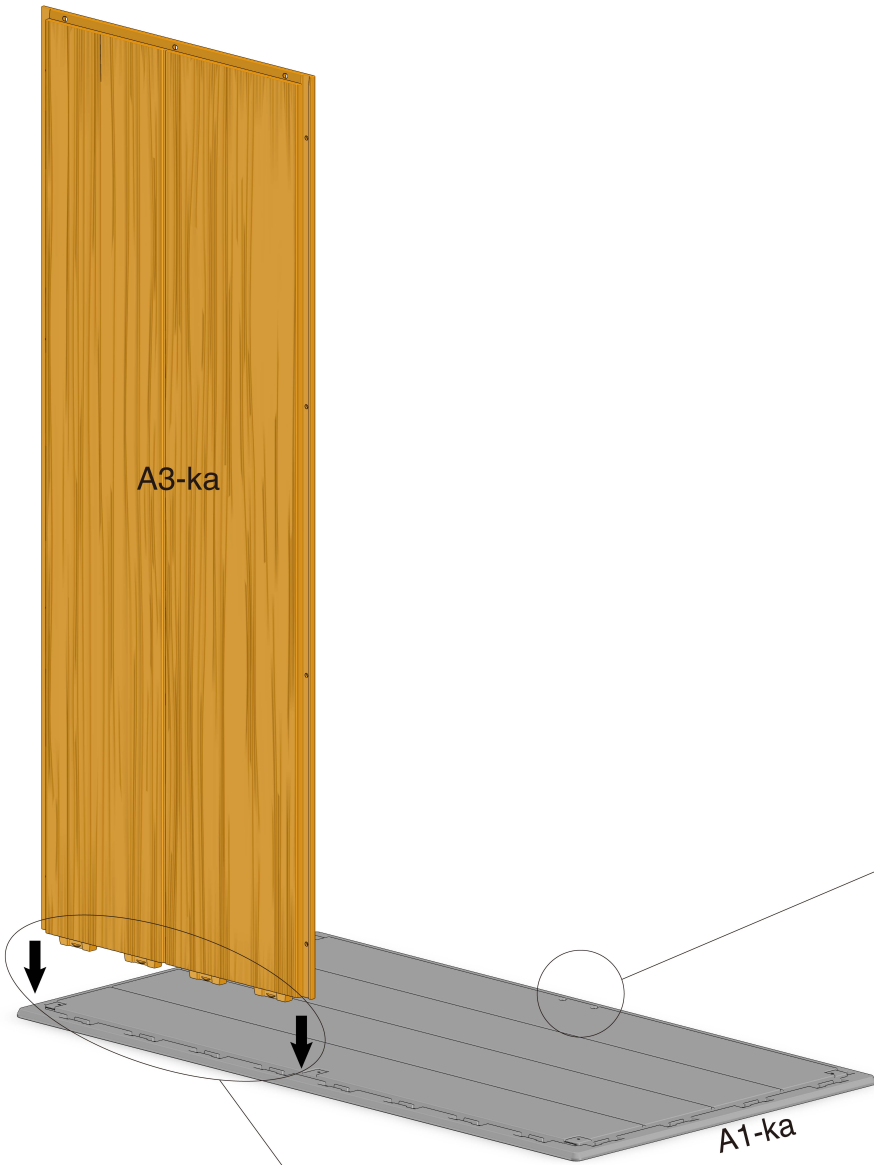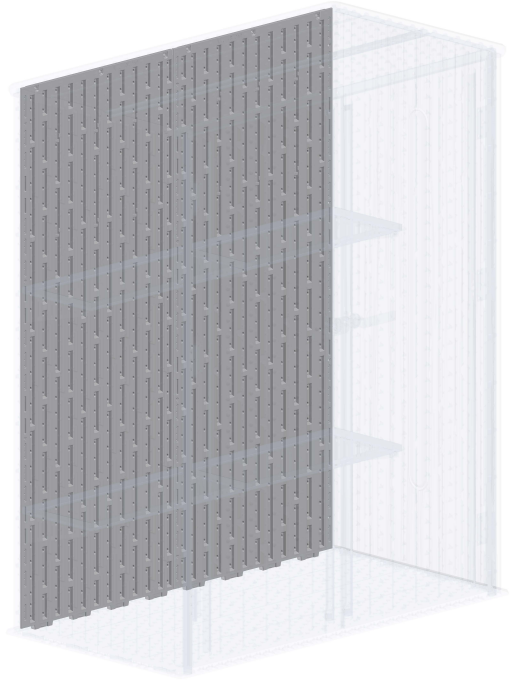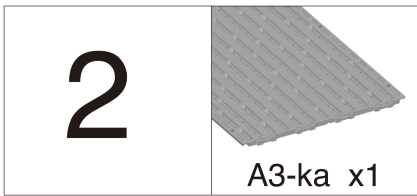

3

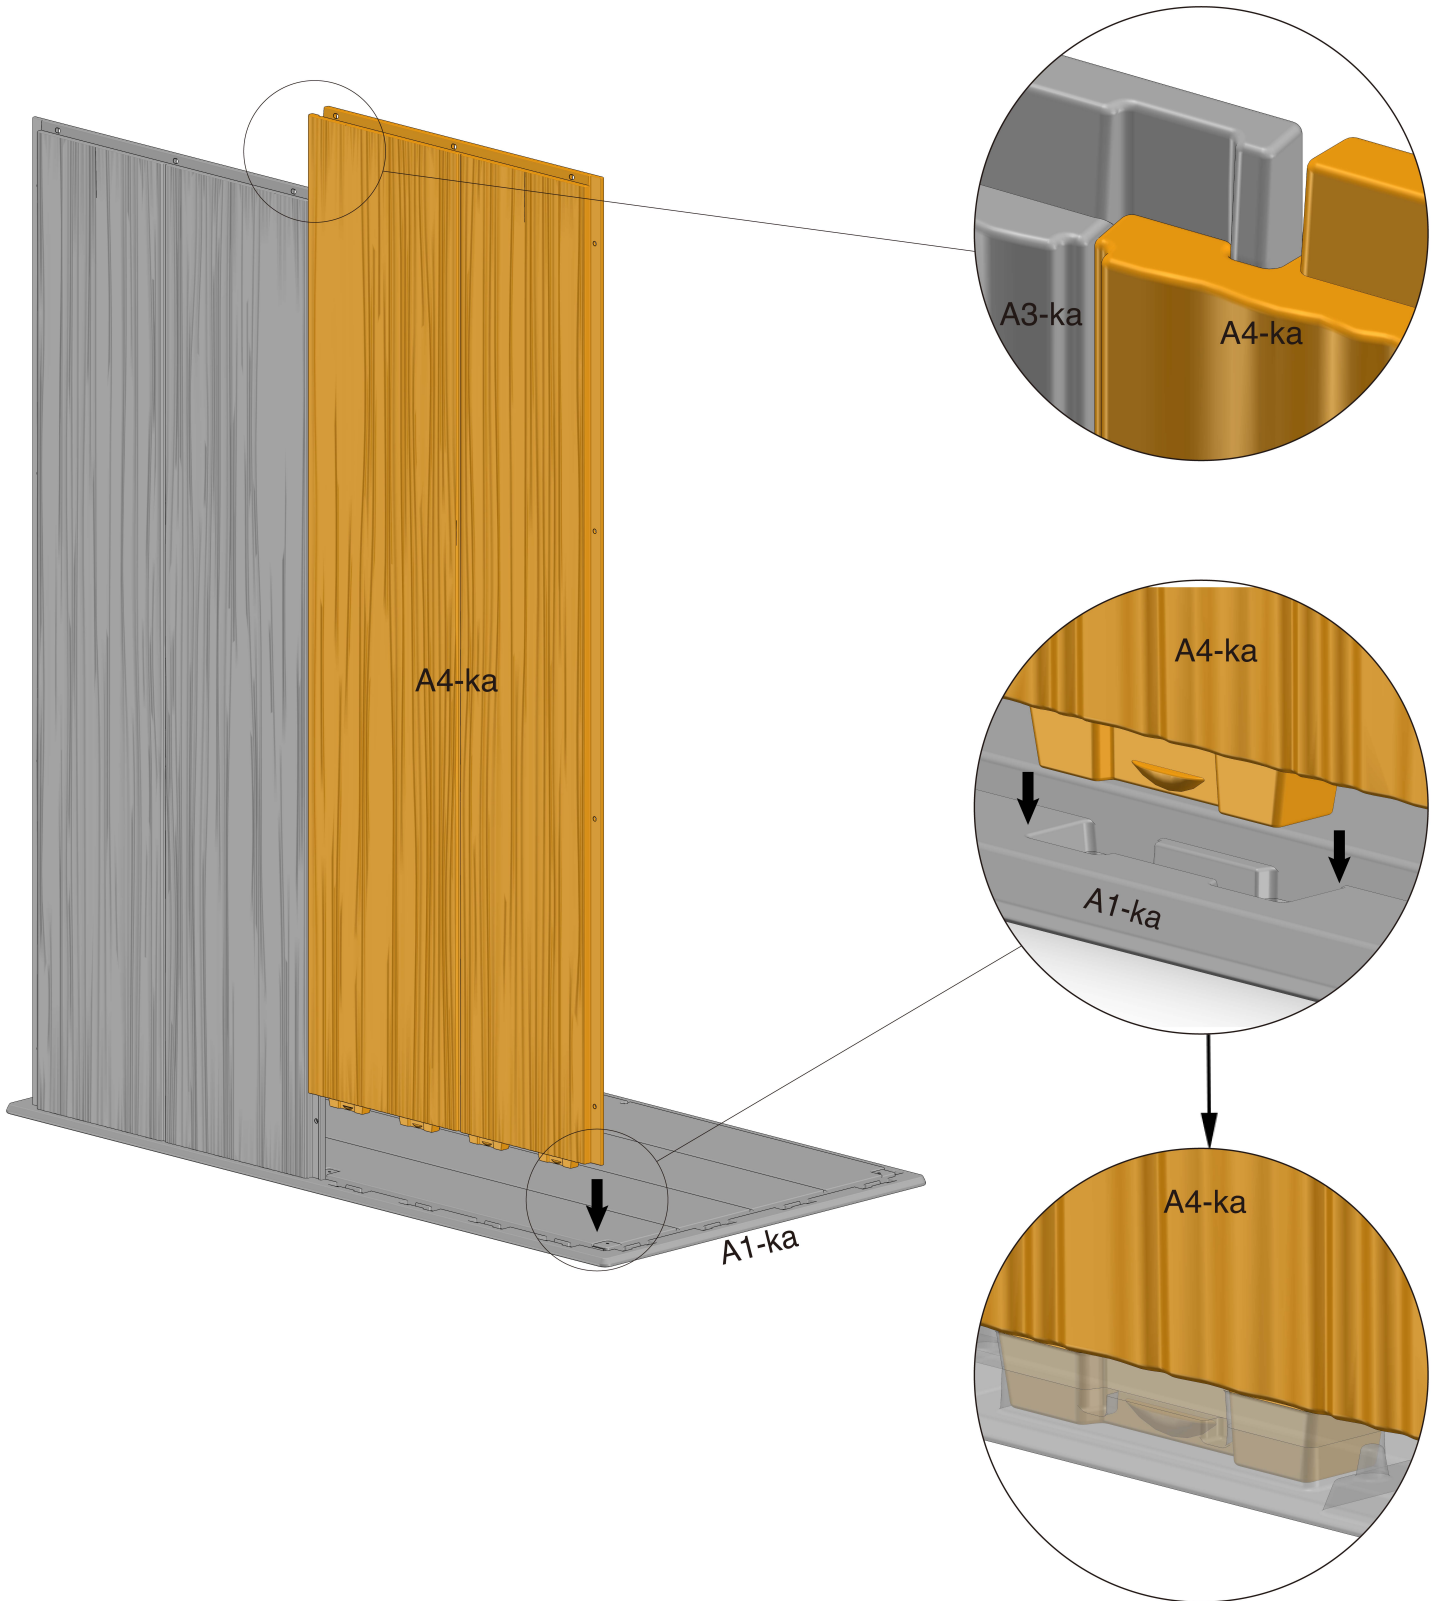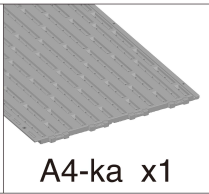

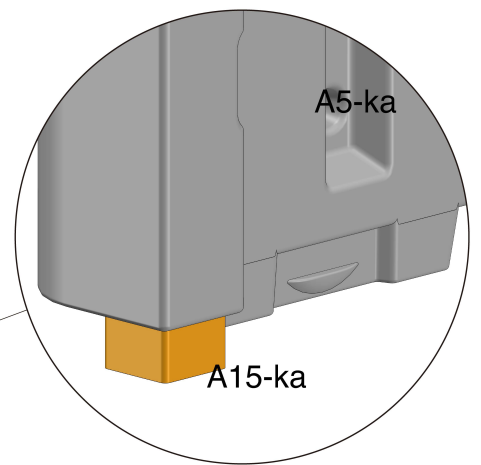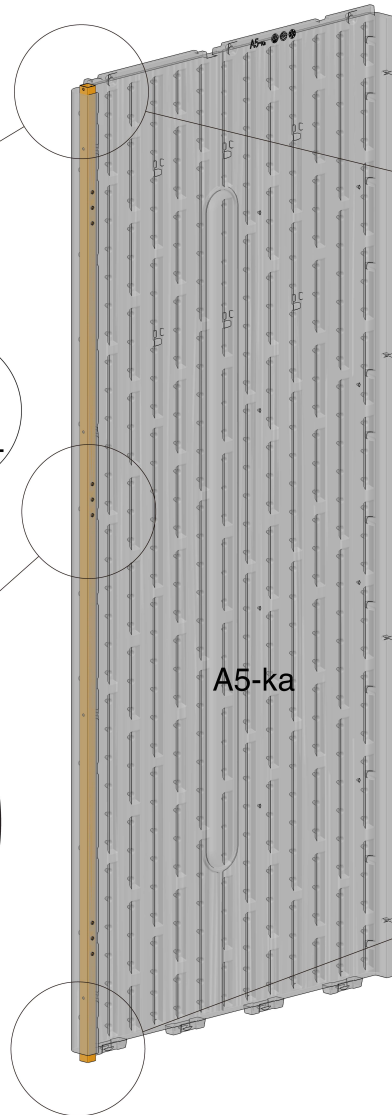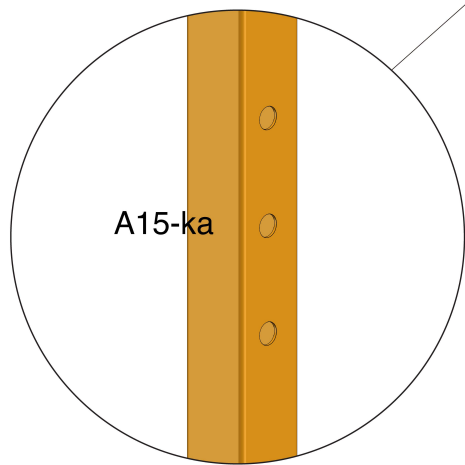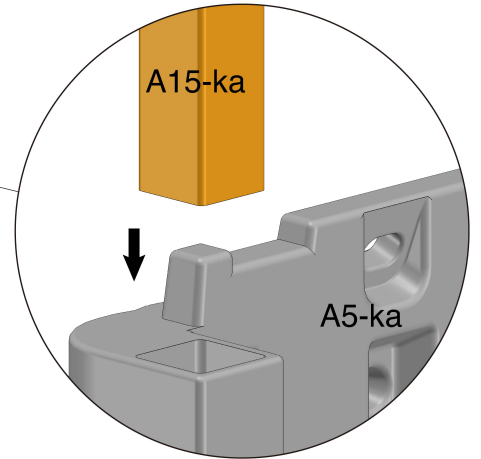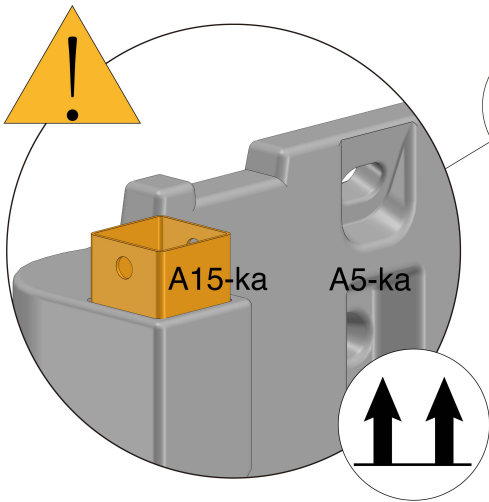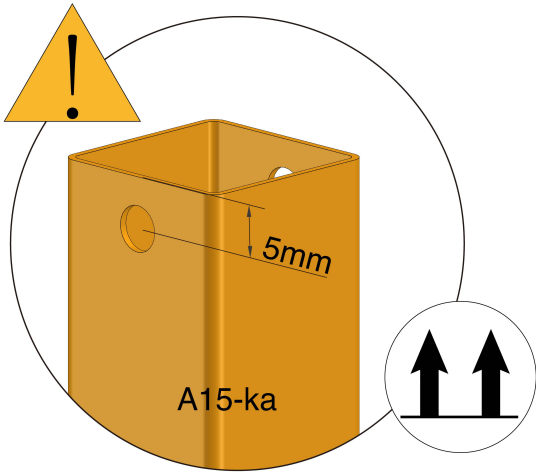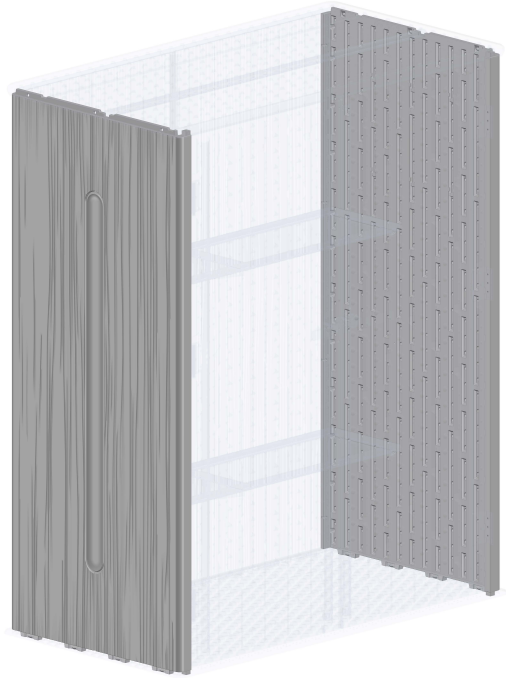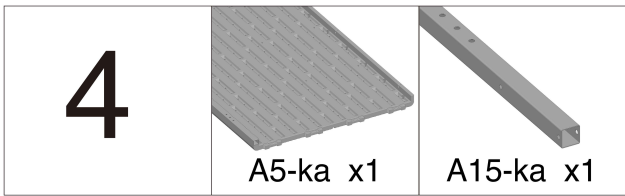

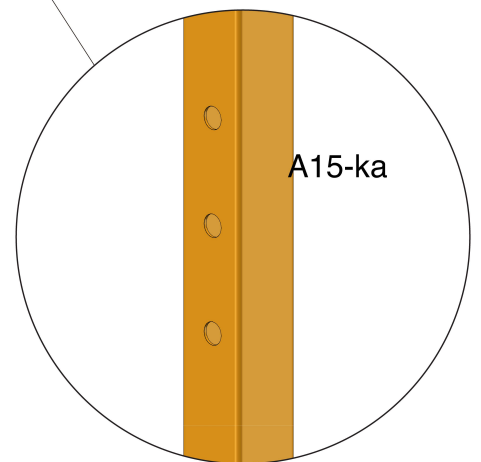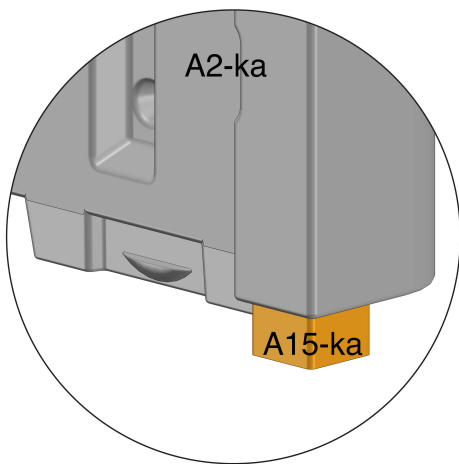
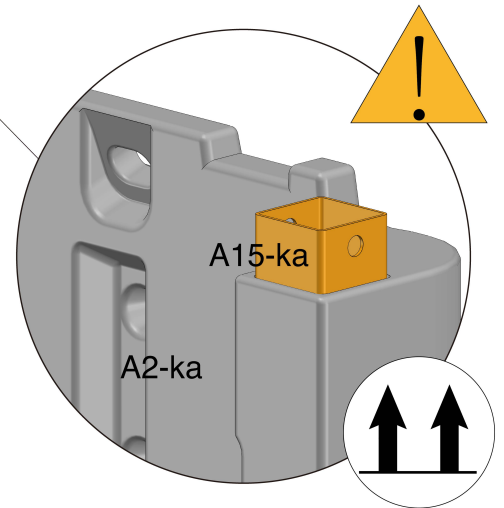
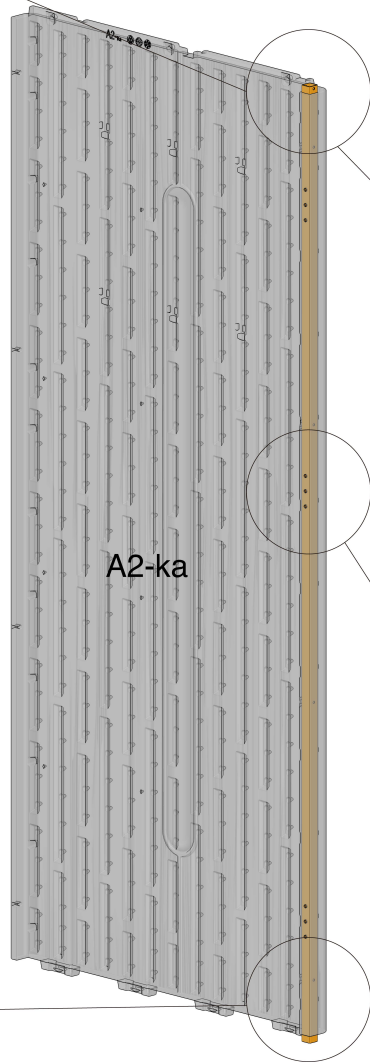
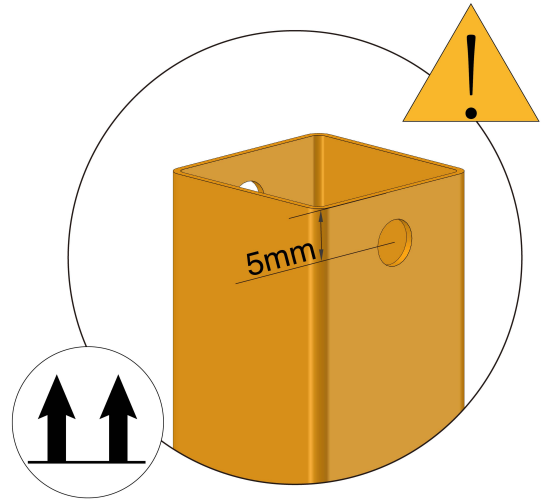
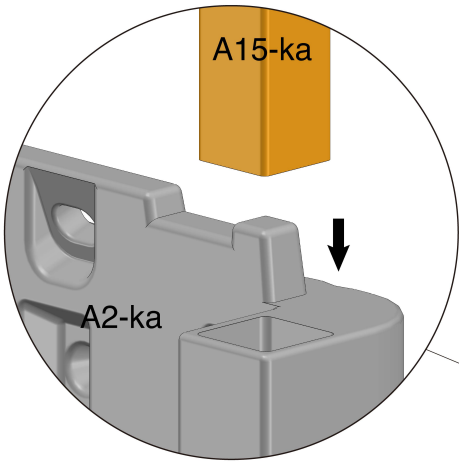
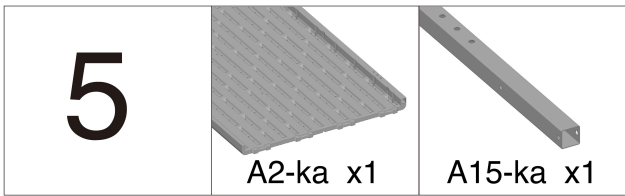








6



7



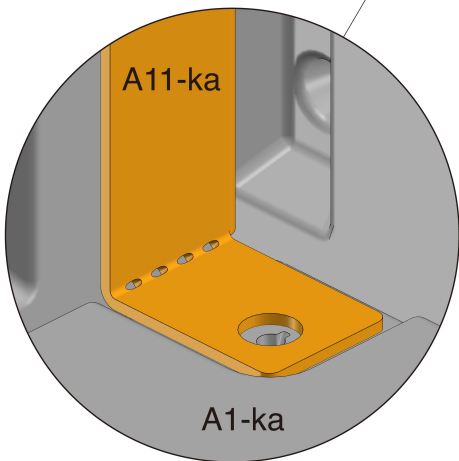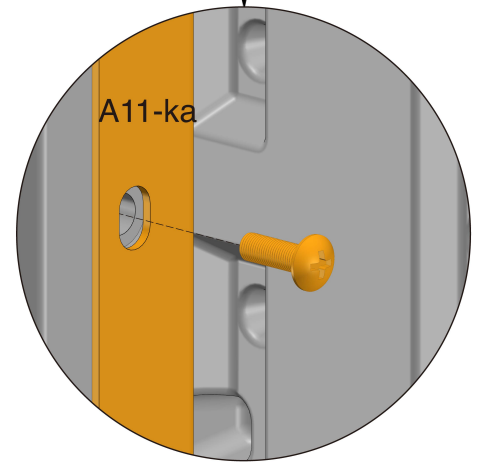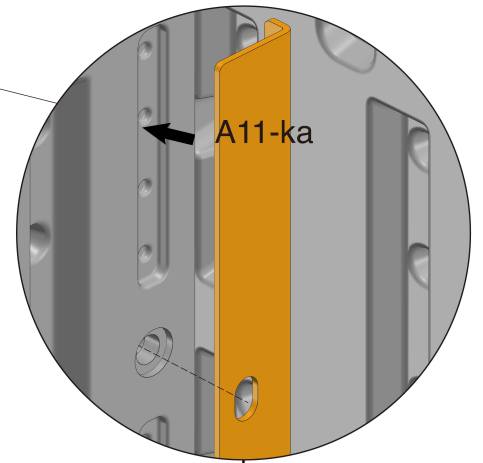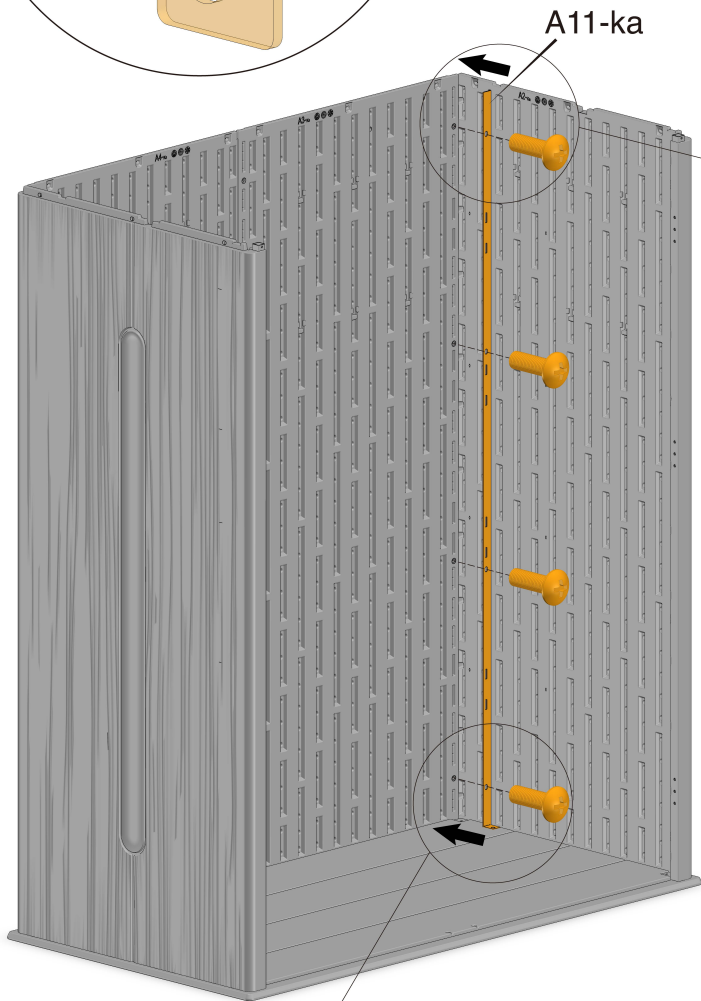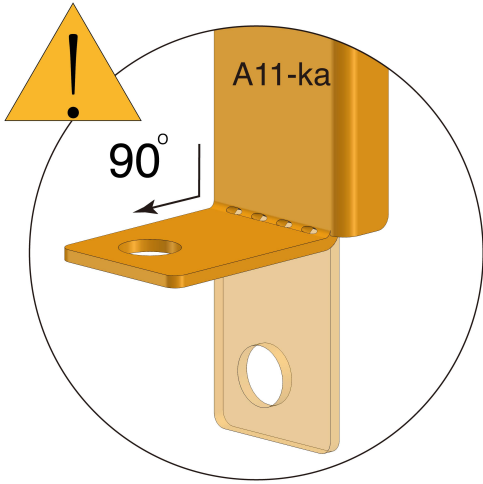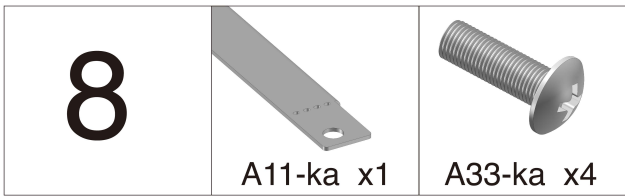


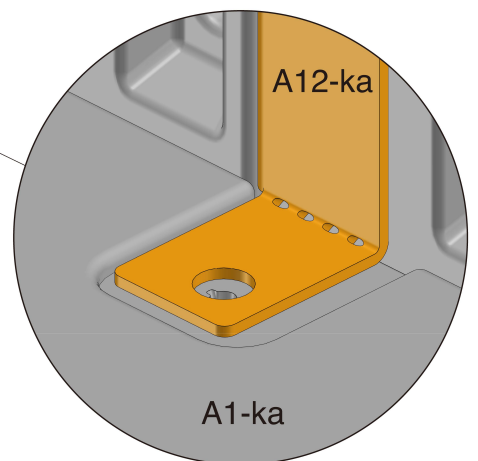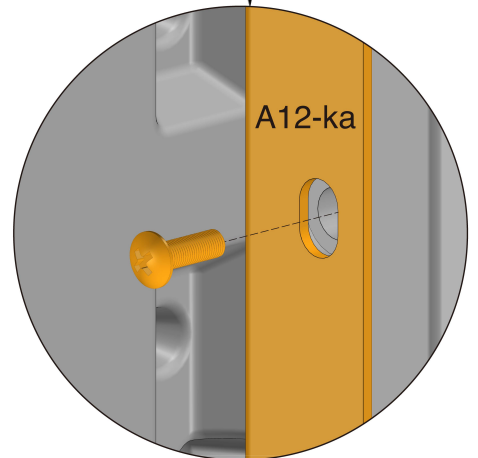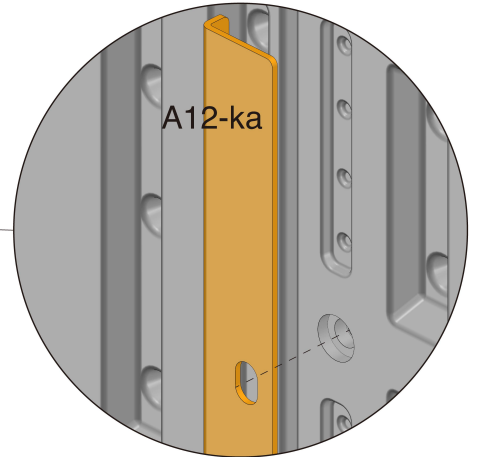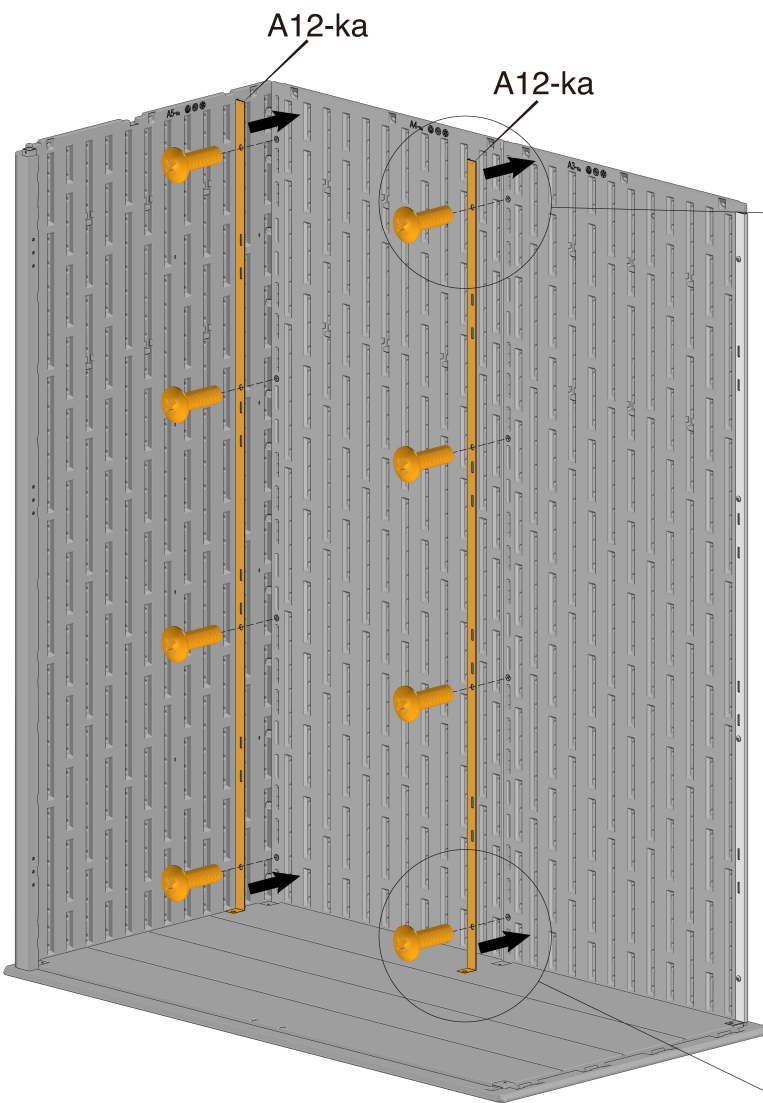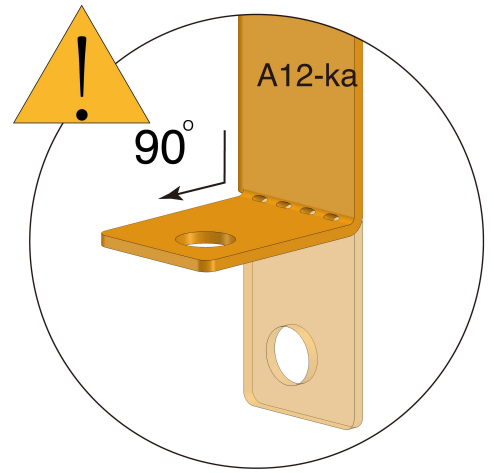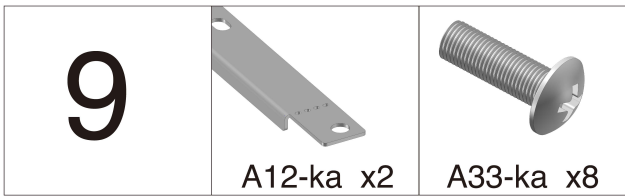





# 10




15-pa x6

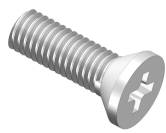

A30-ka x18

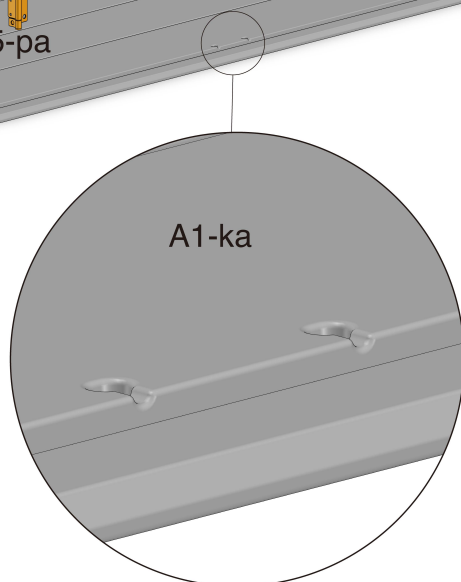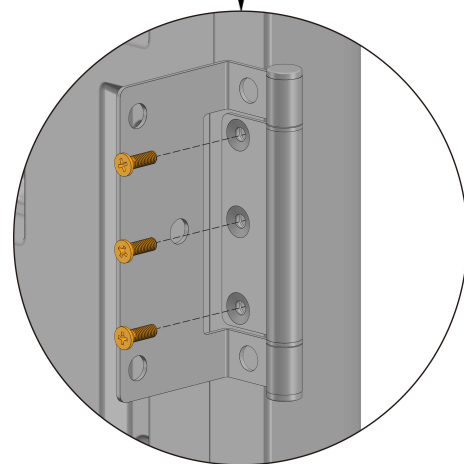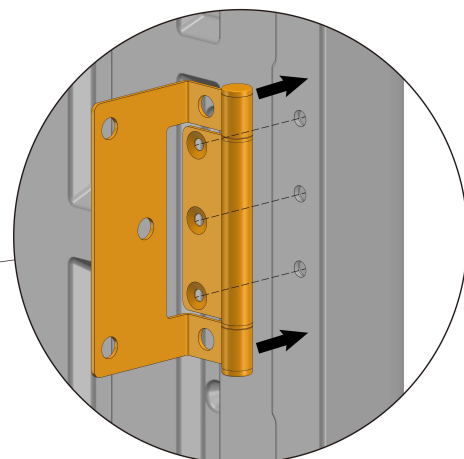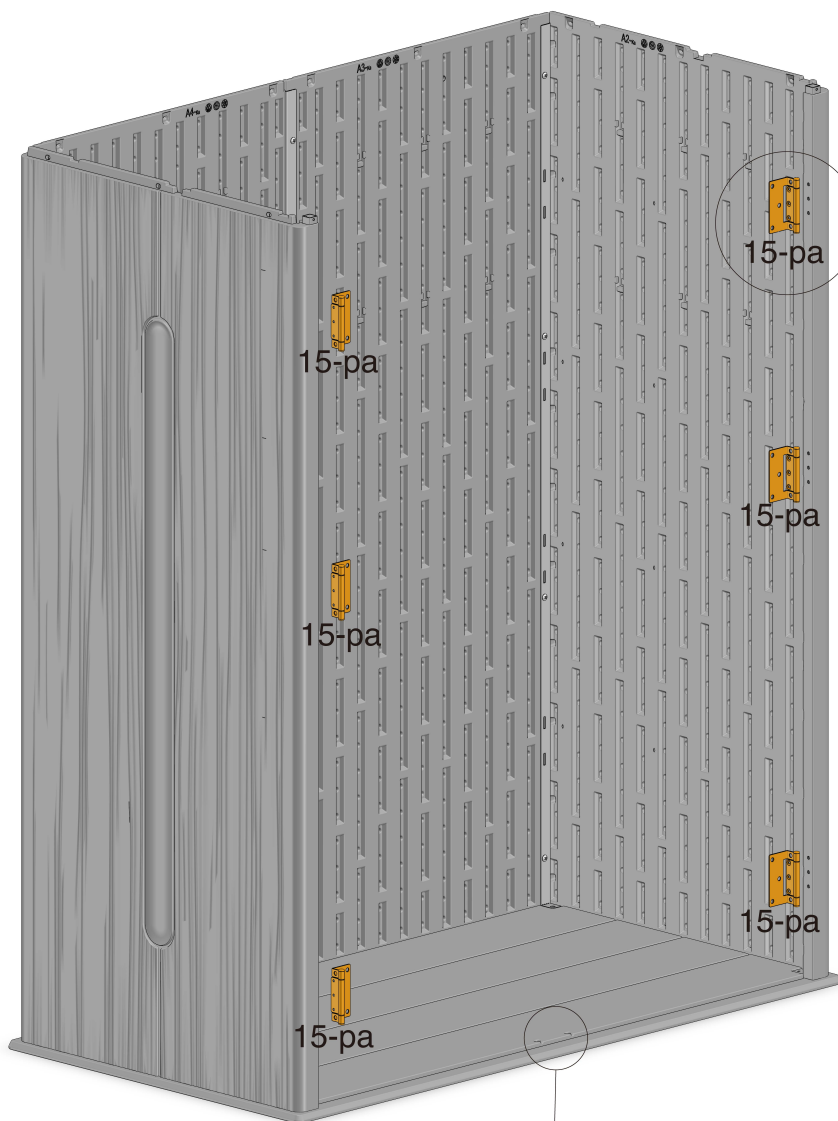






# 11

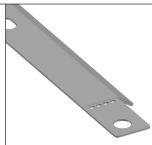


A13-ka x1



A35-ka x4

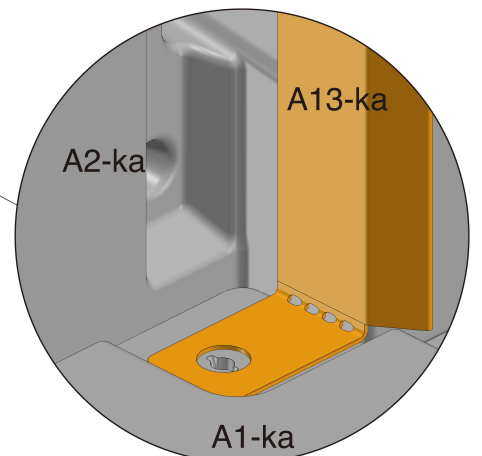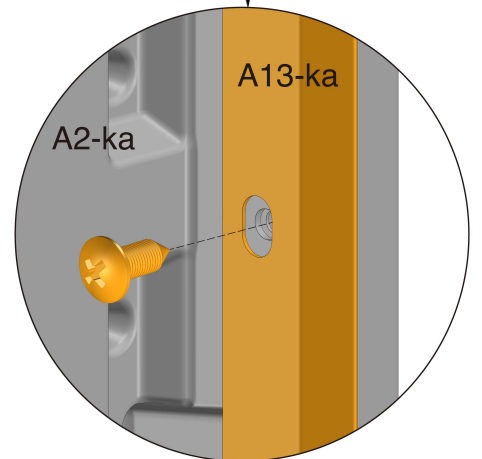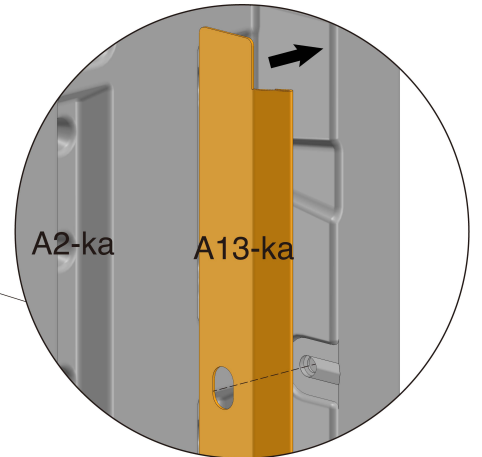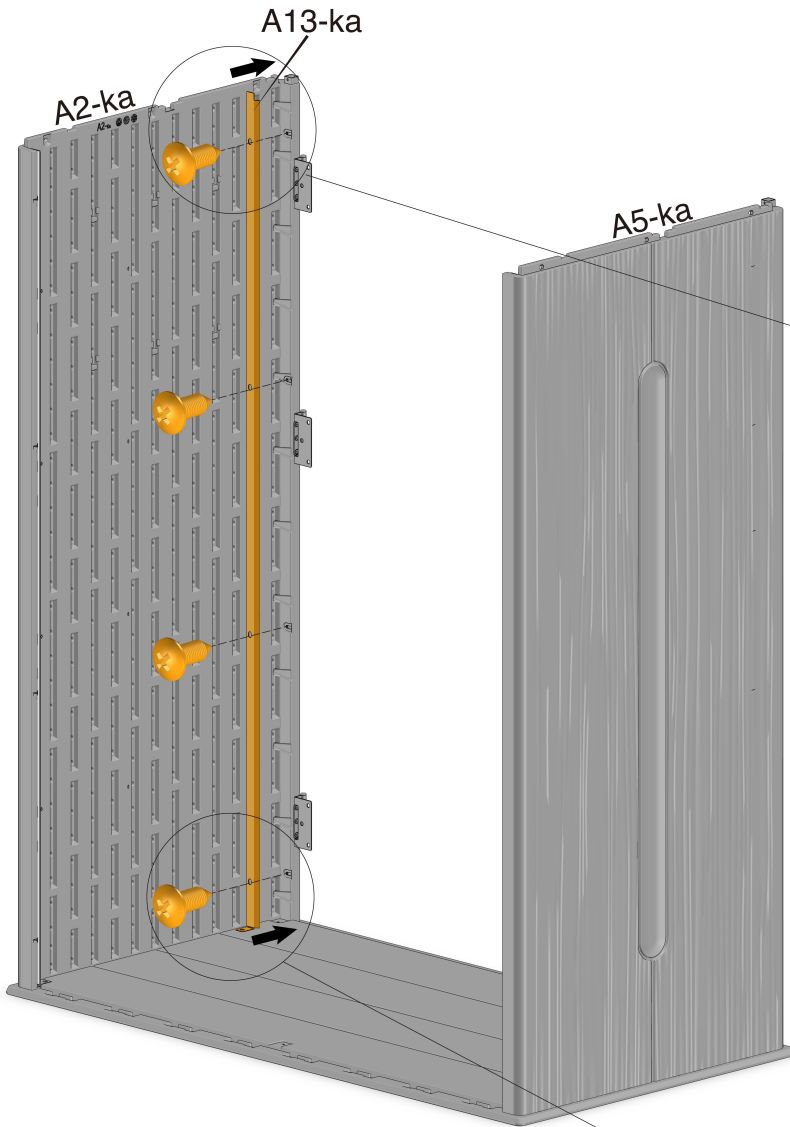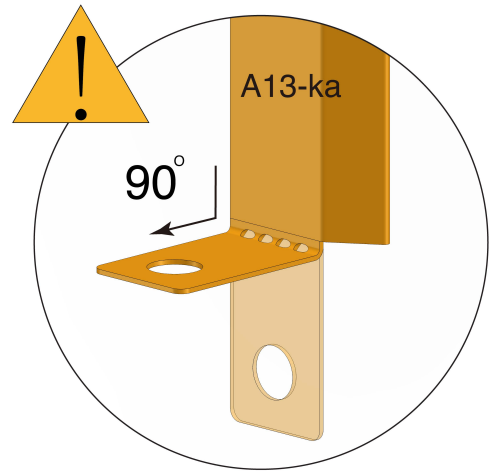





# 12

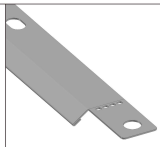


A14-ka x1




A35-ka x4

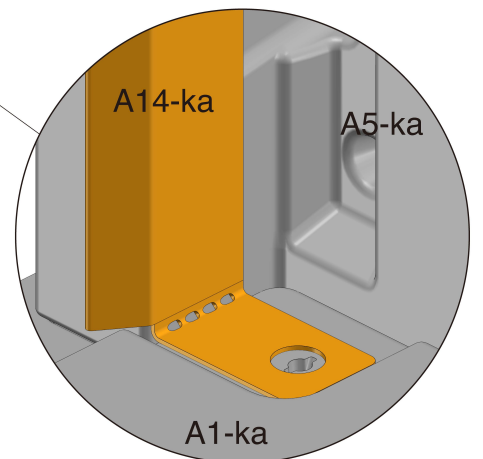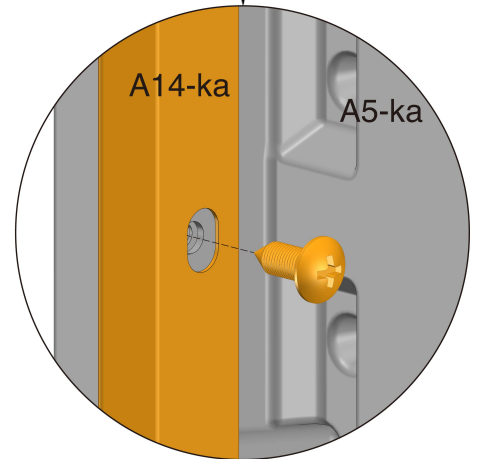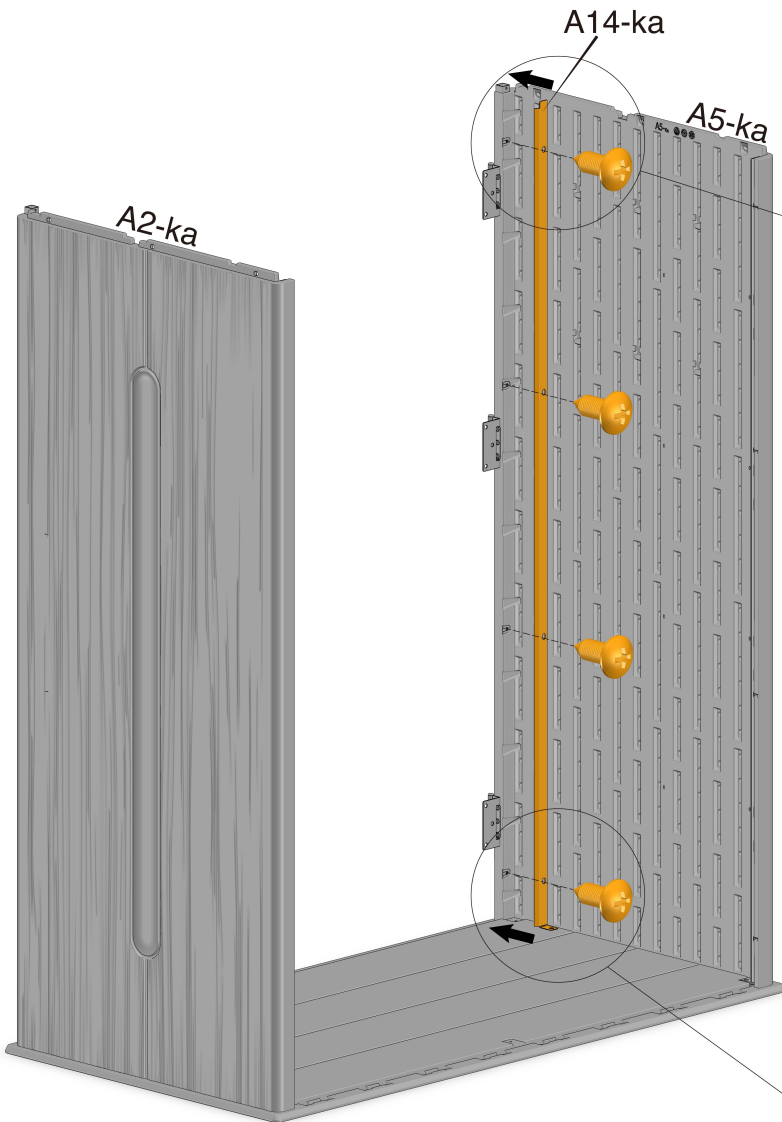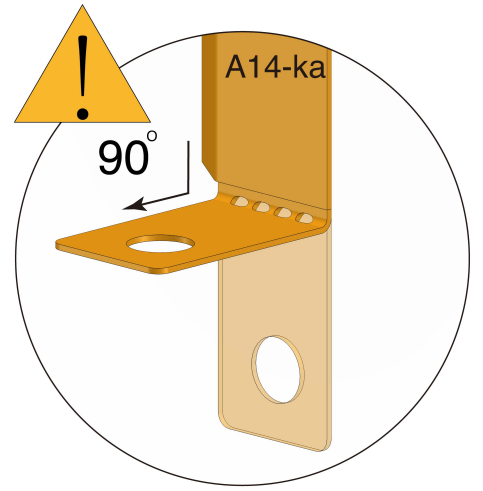

# 13

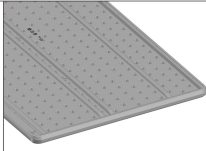







A6-ka x1

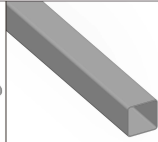


A18-ka x1




A37-ka x3

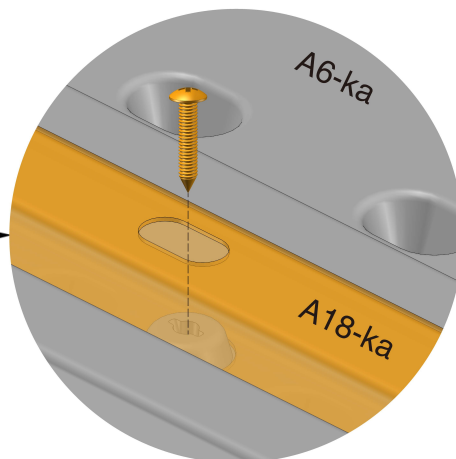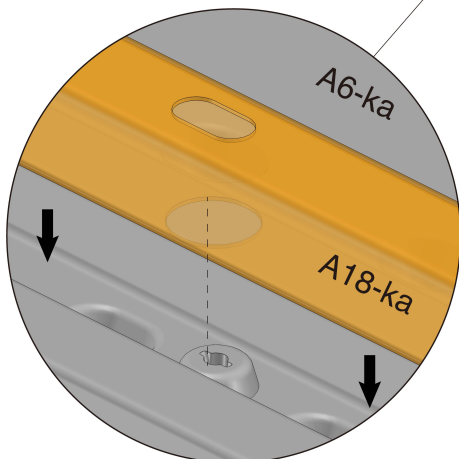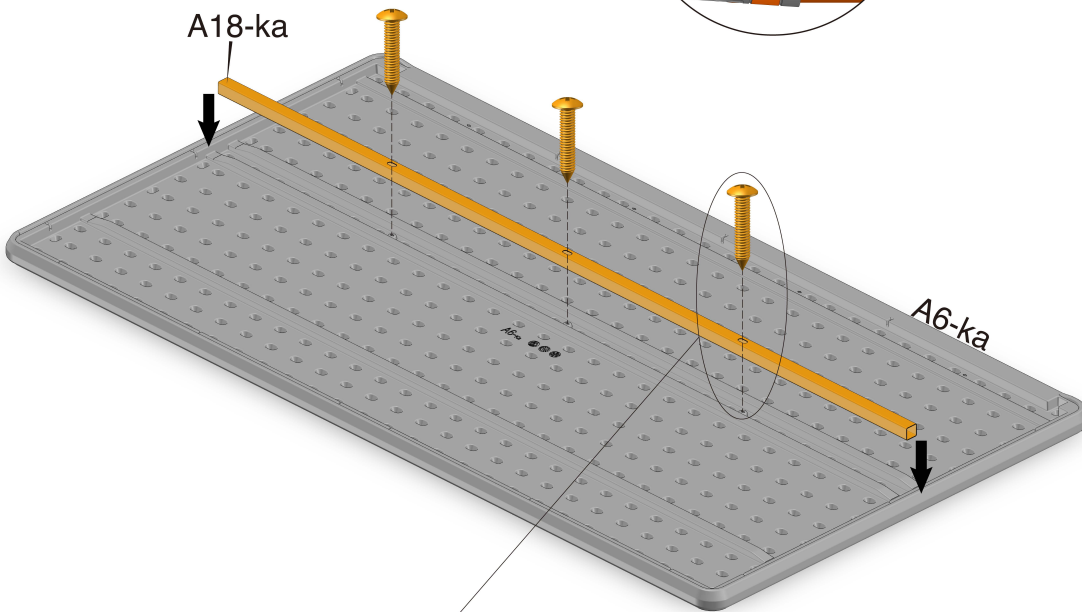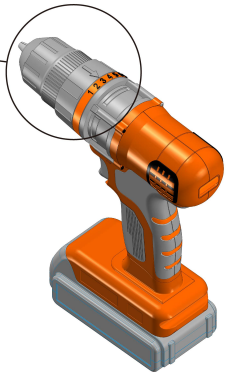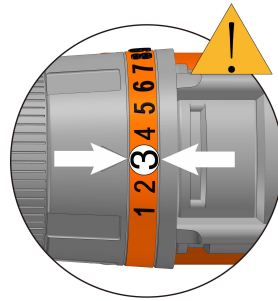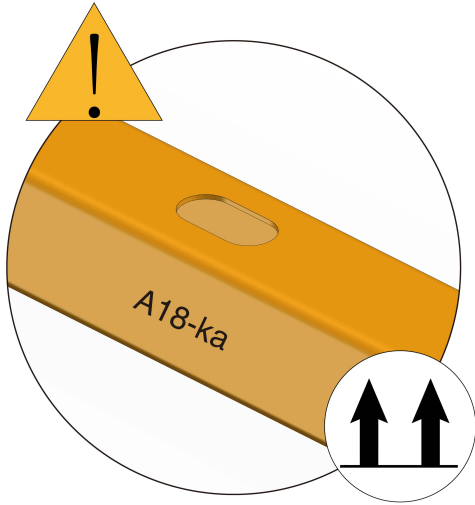


14

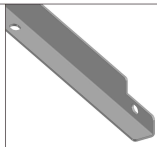

A19-ka x1









A34-ka x7

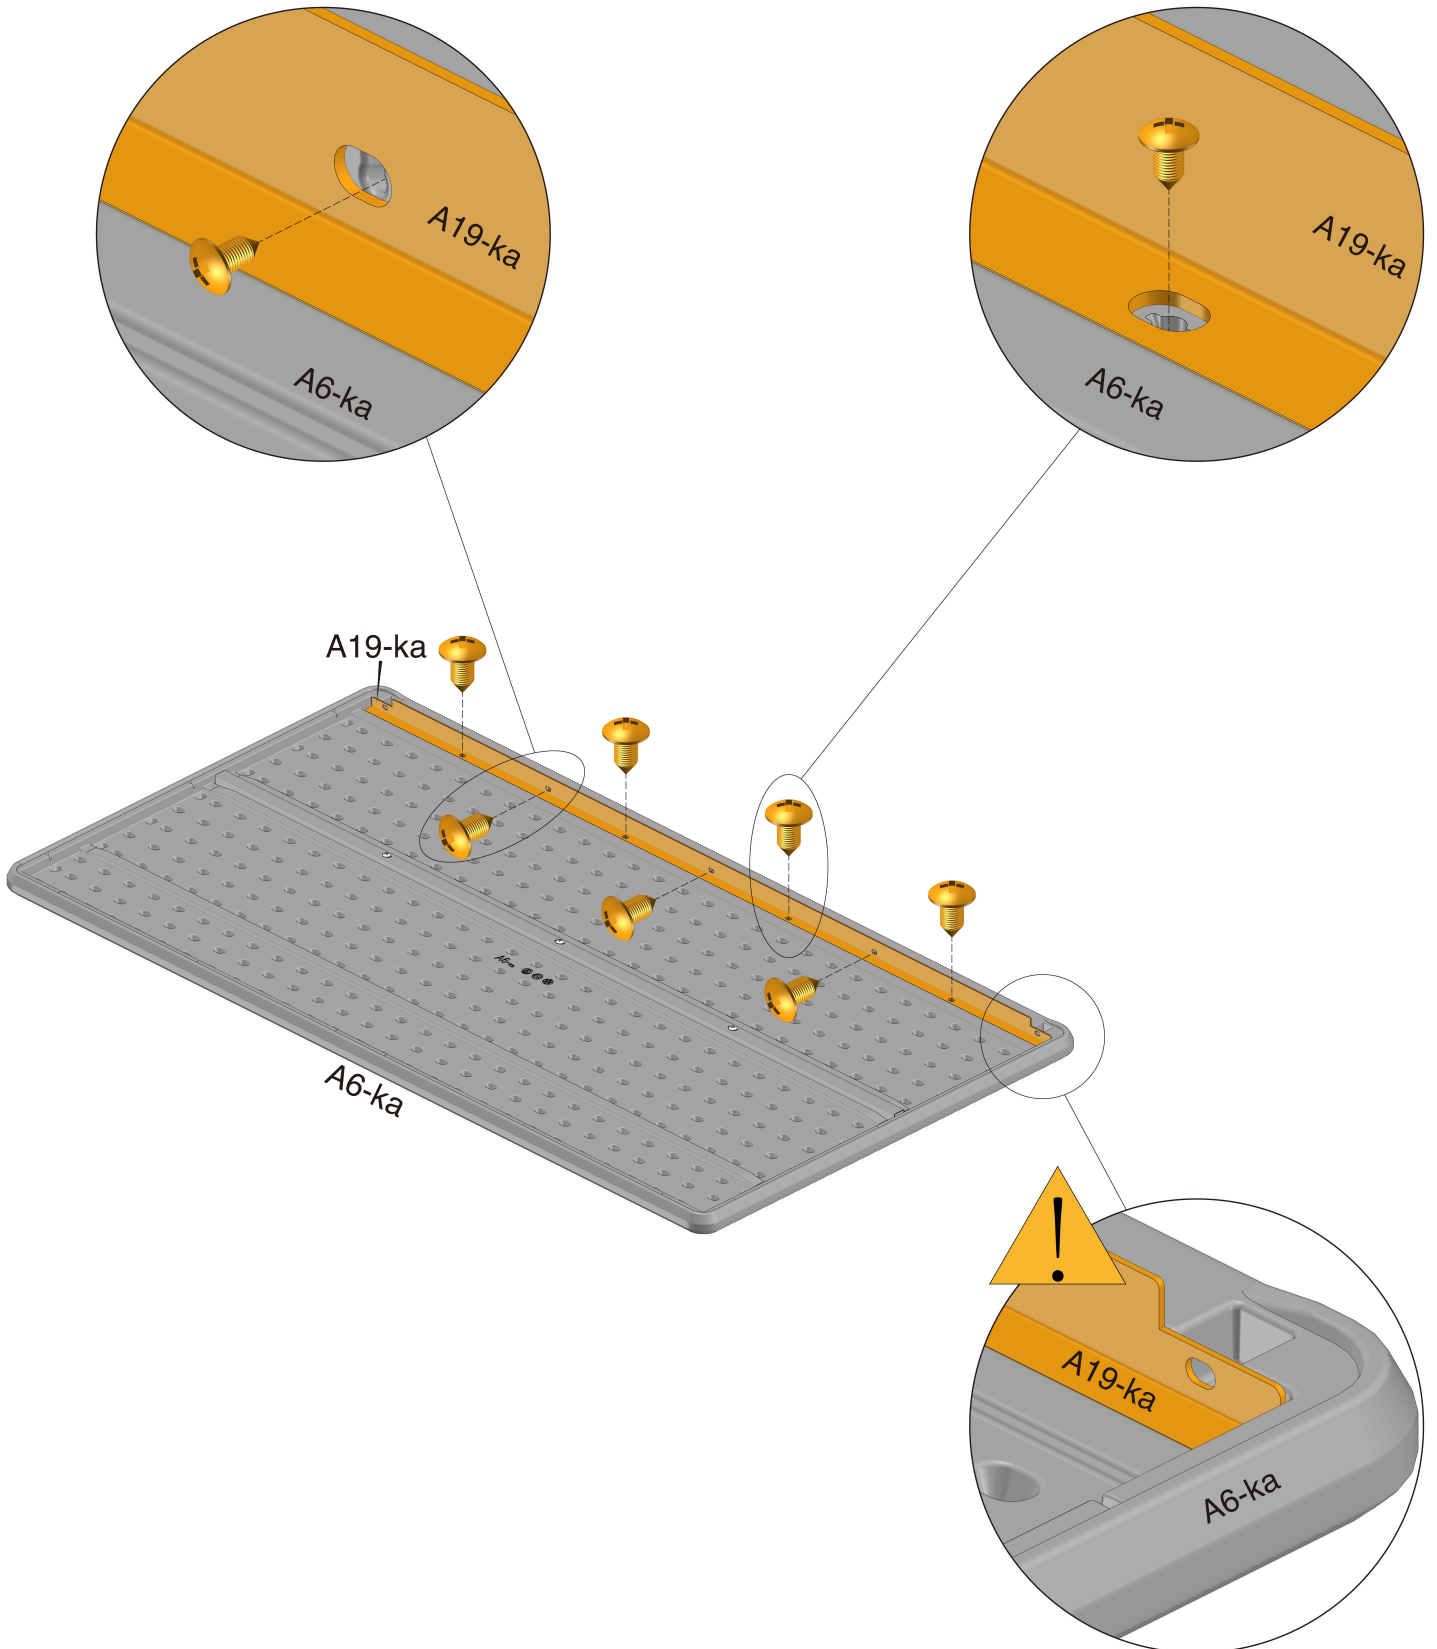

# 15







A35-ka x2

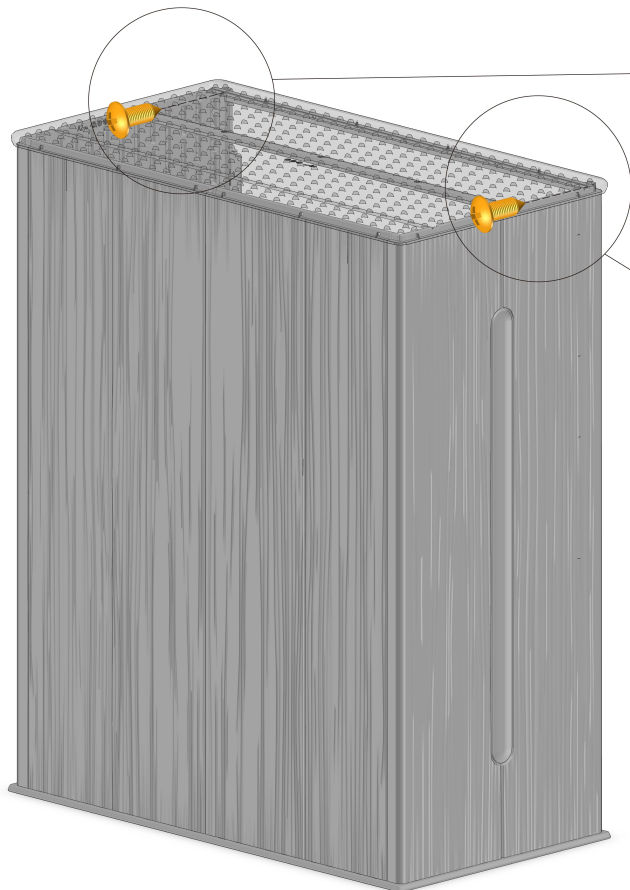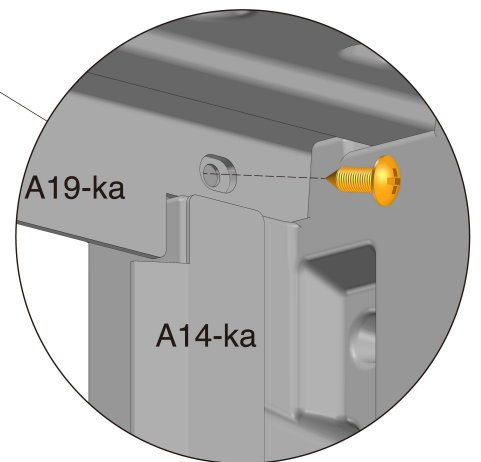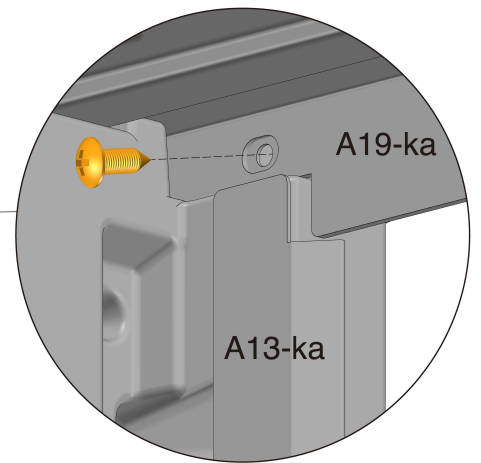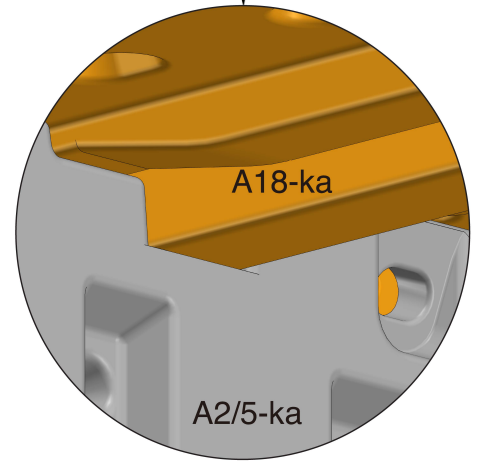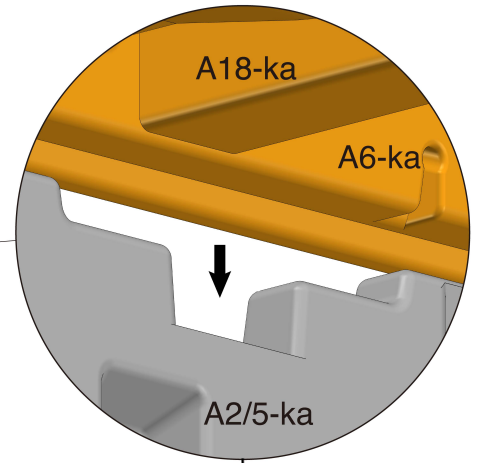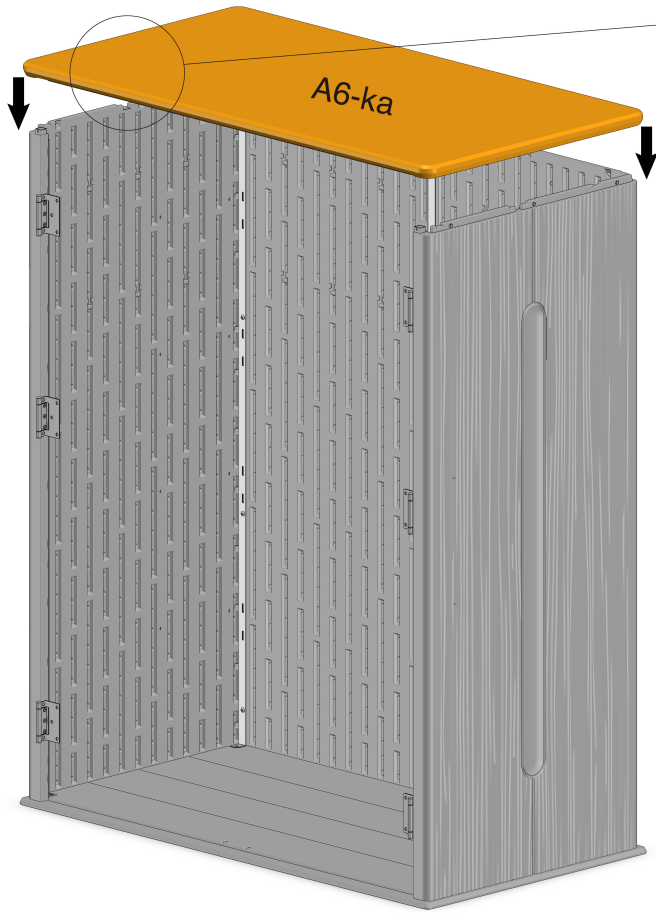









# 16




A36-ka x12

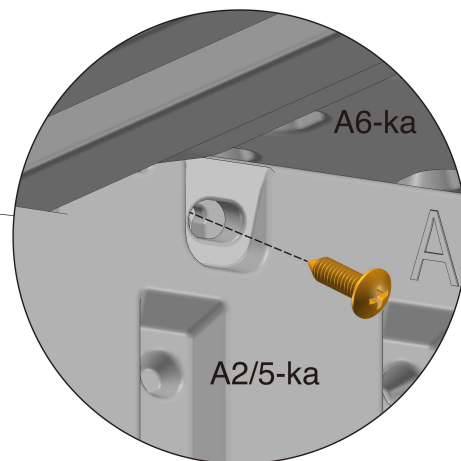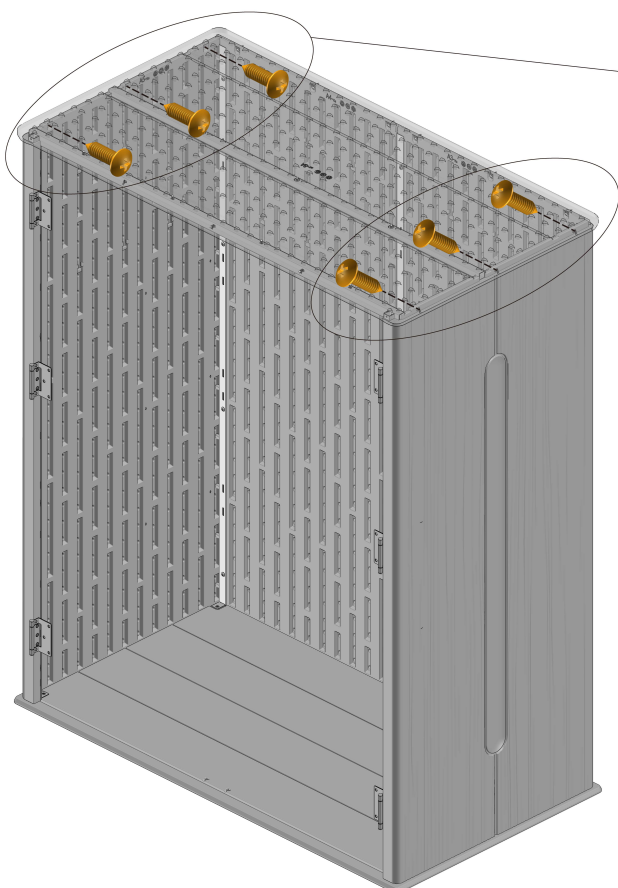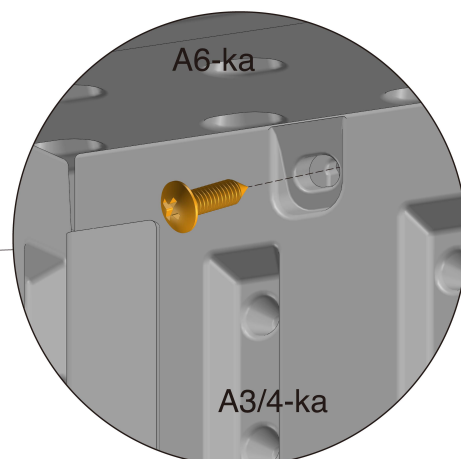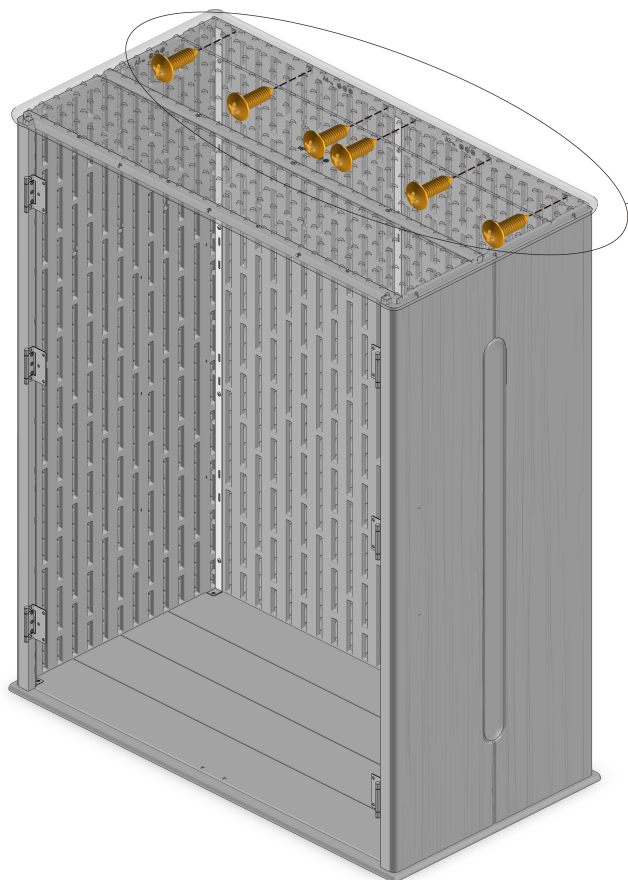


# 17

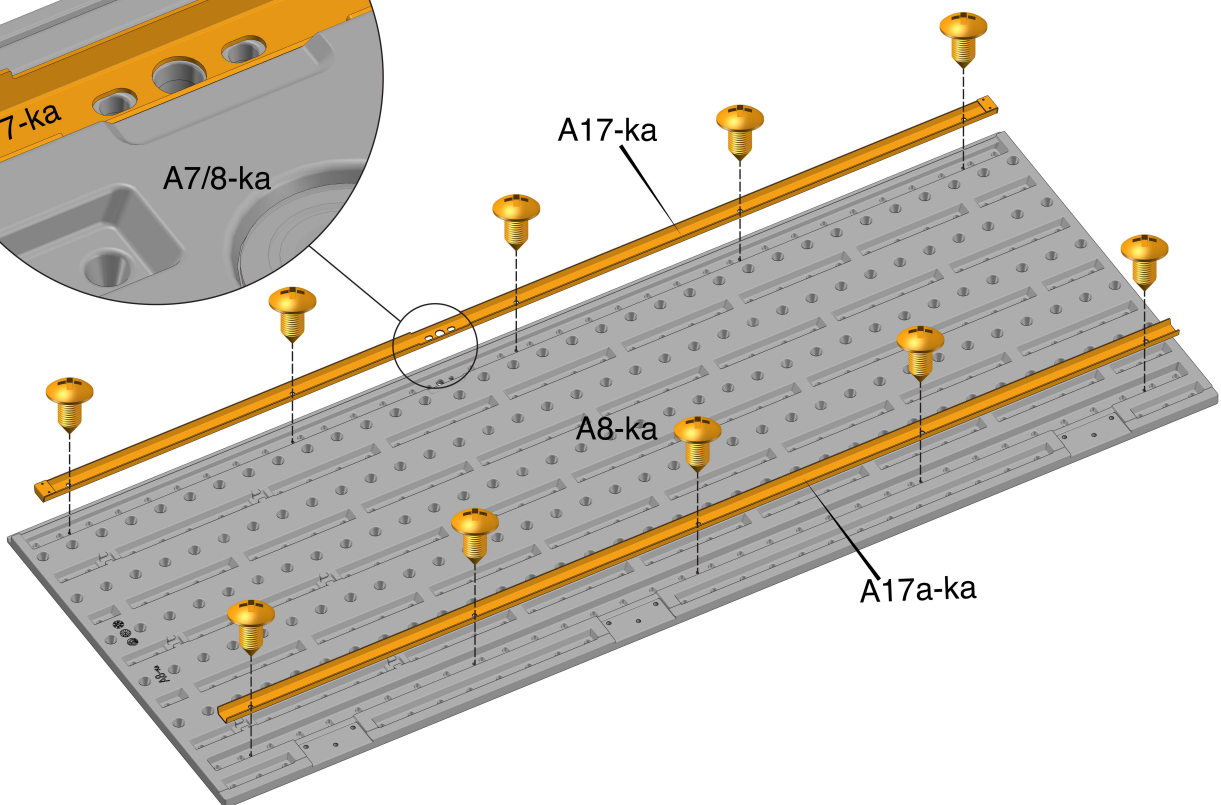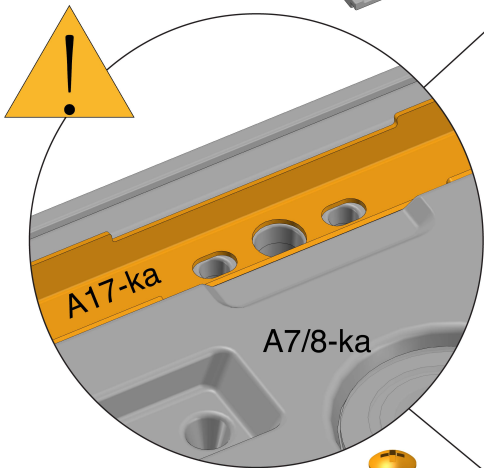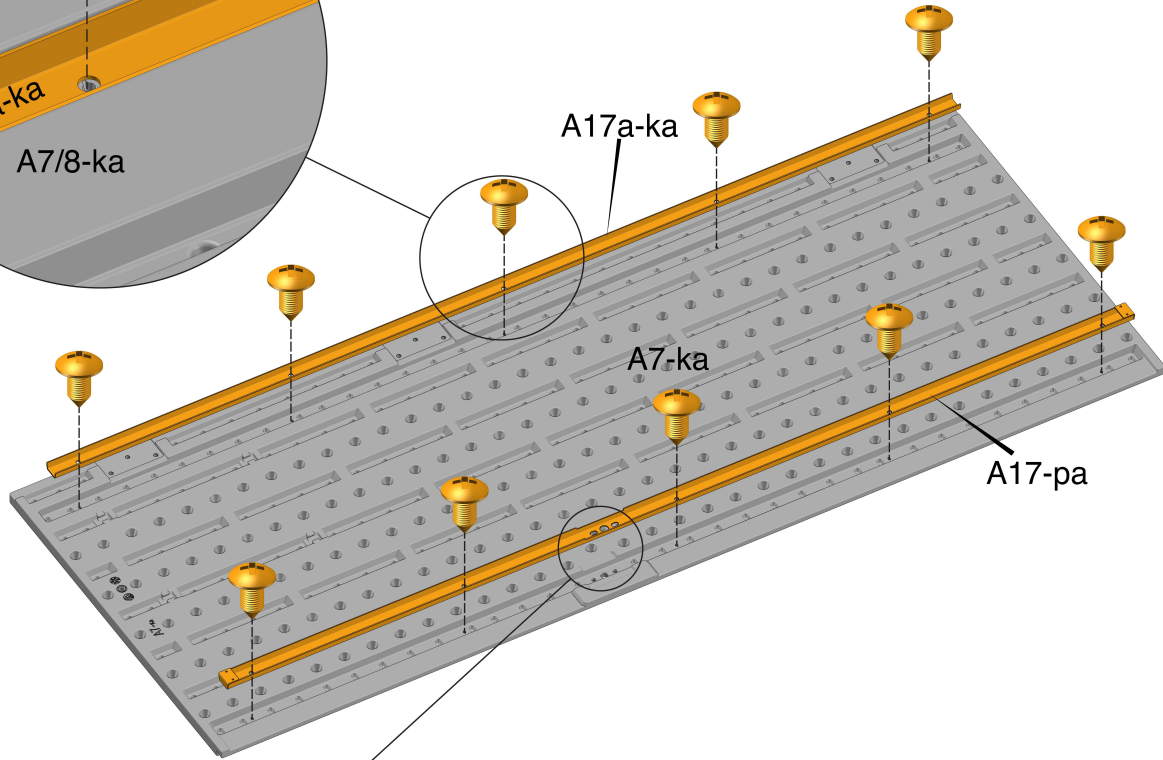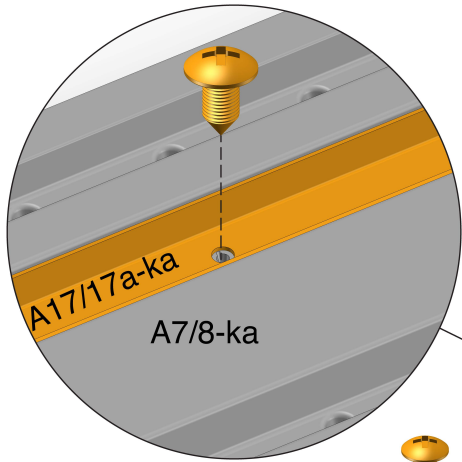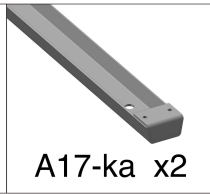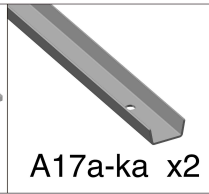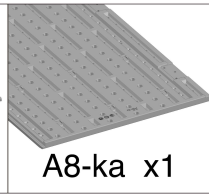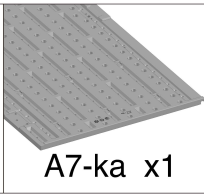

# 18

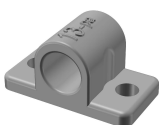


13-pa x2

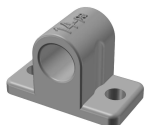


14-pa x2



A31-ka x8

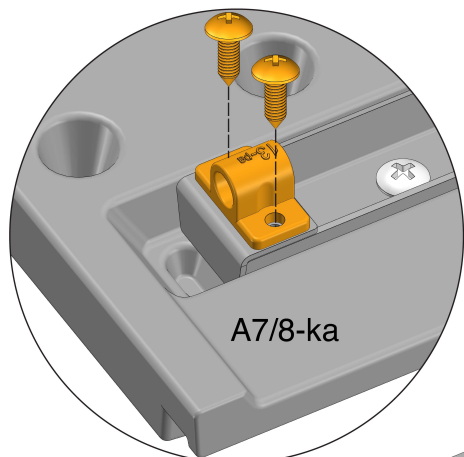


A7/8-ka

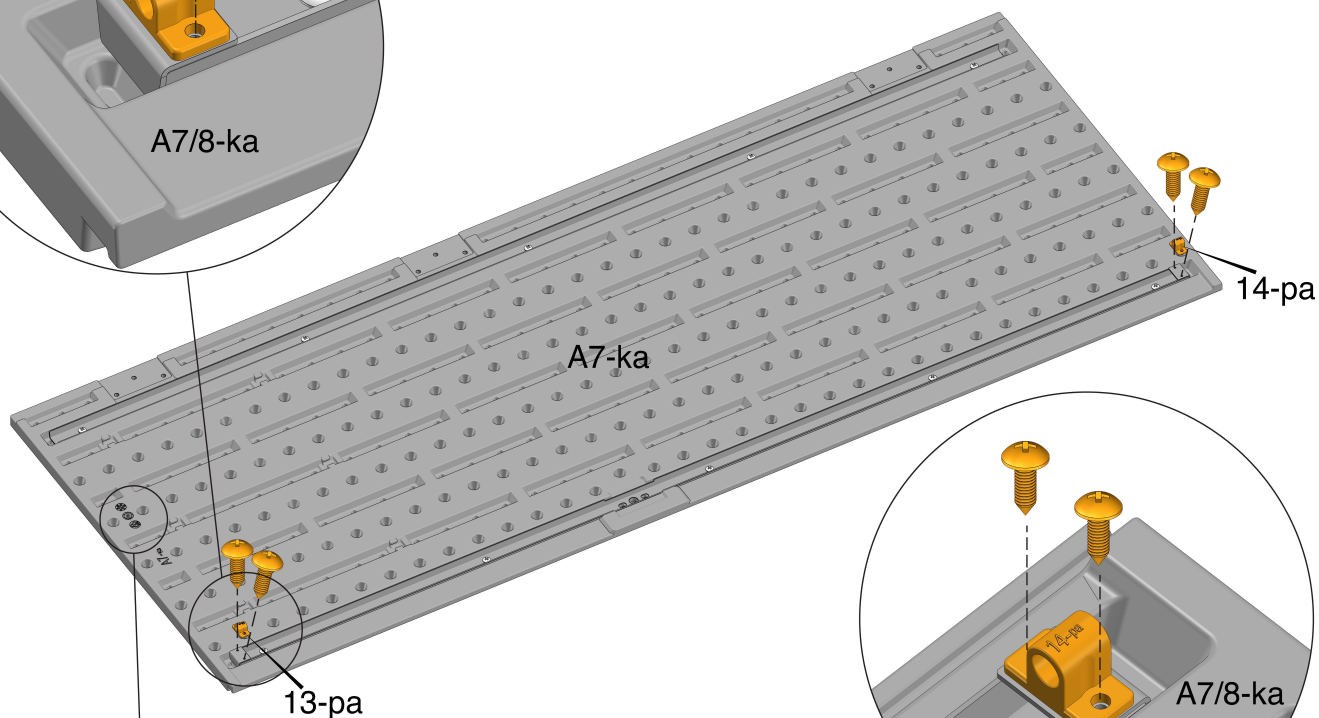


A7-ka

14-pa


13-pa

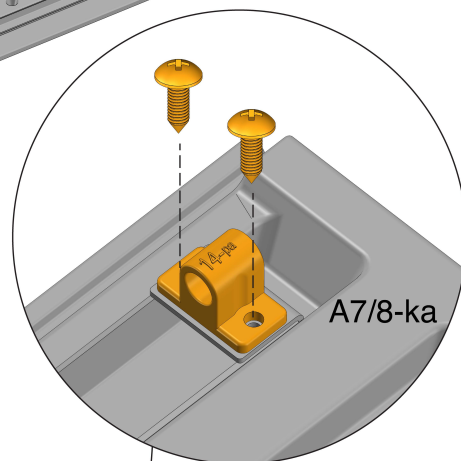


A7/8-ka

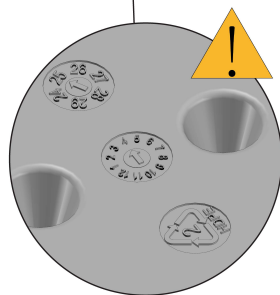

14-pa

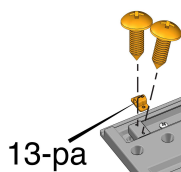


13-pa



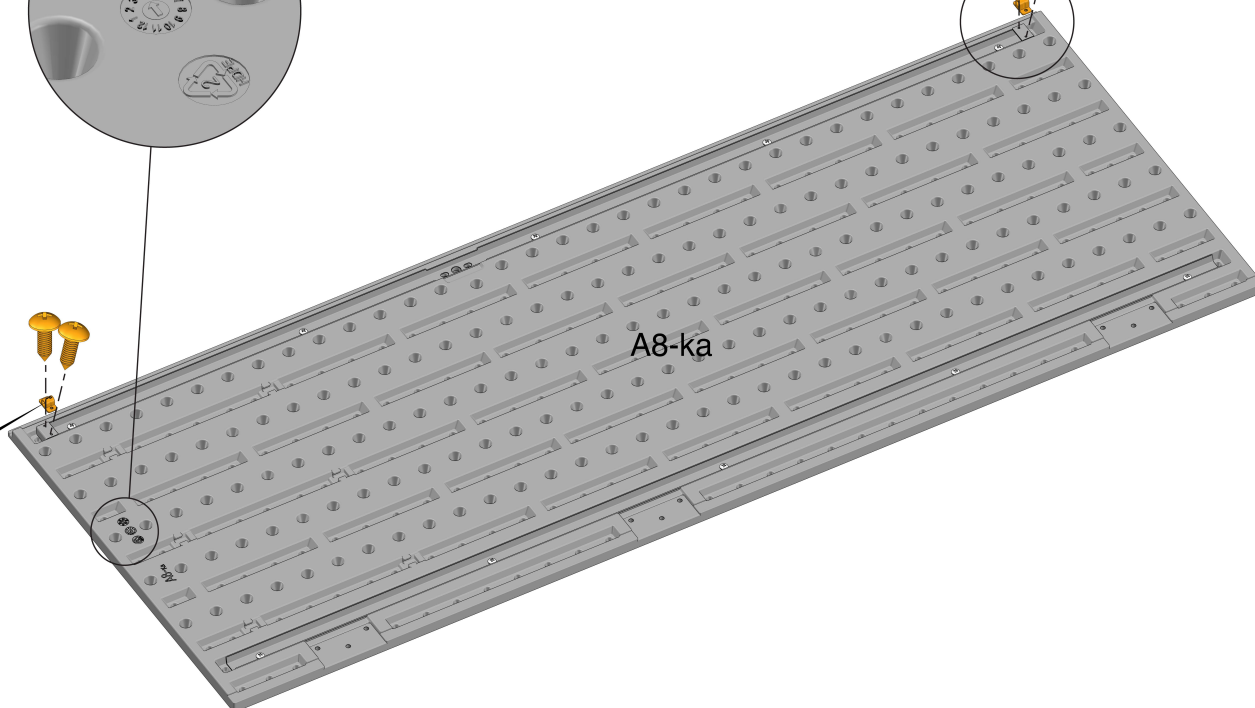


A8-ka

# 19




A32-ka x9

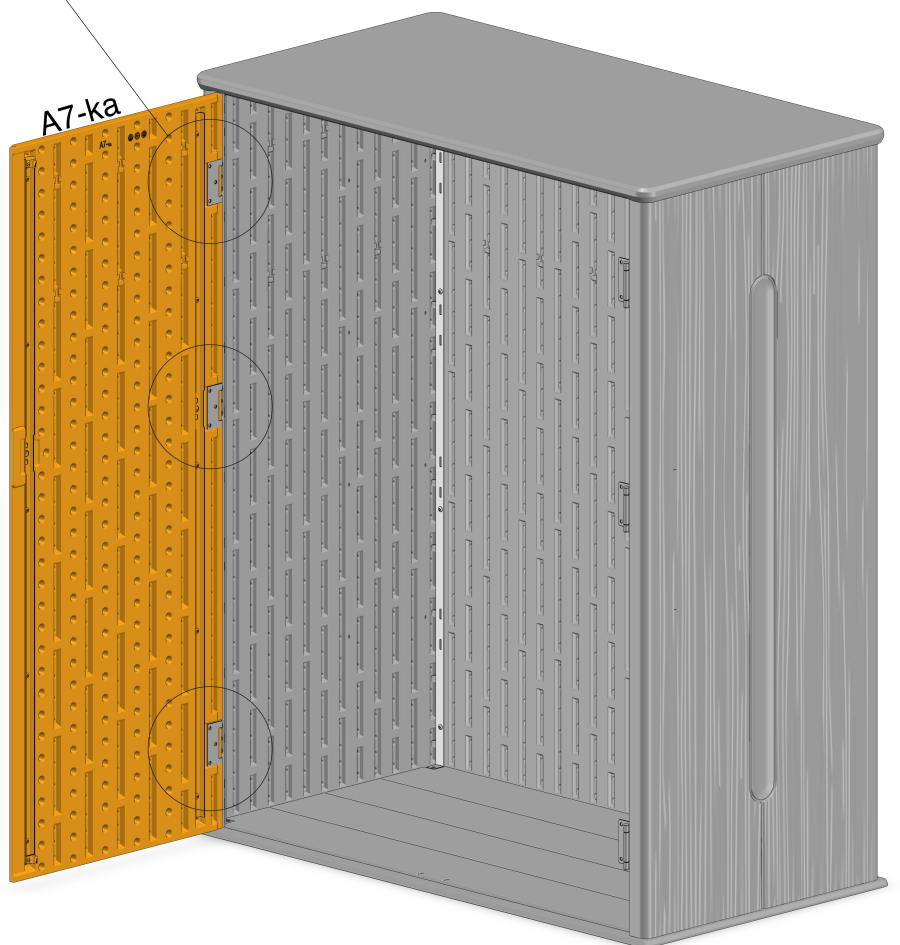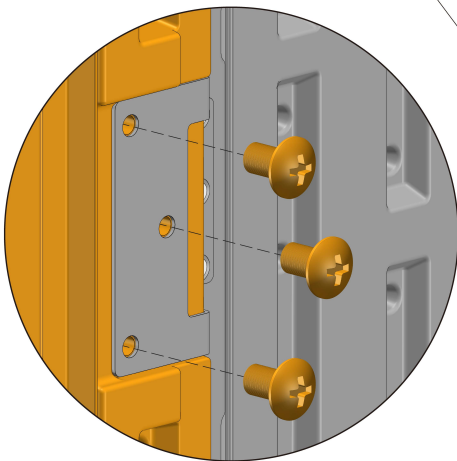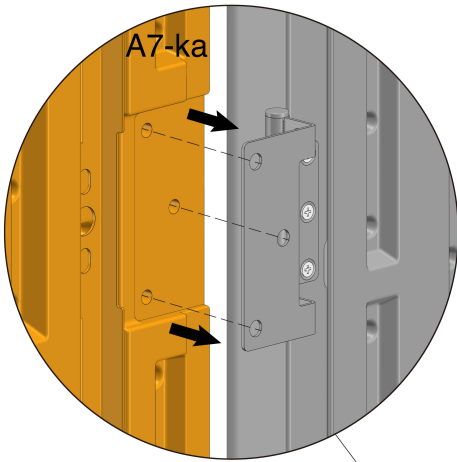

20




1-pa x1




1.1-pa x2



1.2-pa x1



1.3-pa x1









1.4-pa x1







1.5-pa x1



A20-ka x1

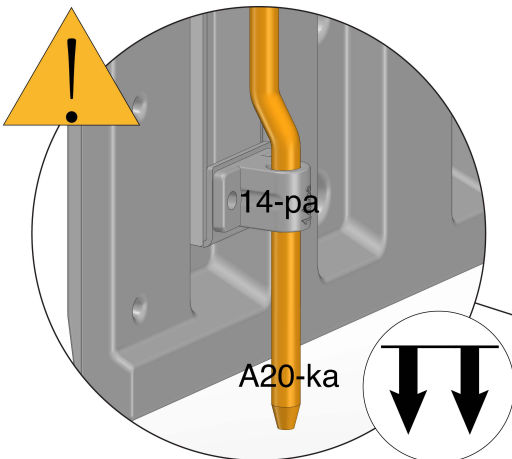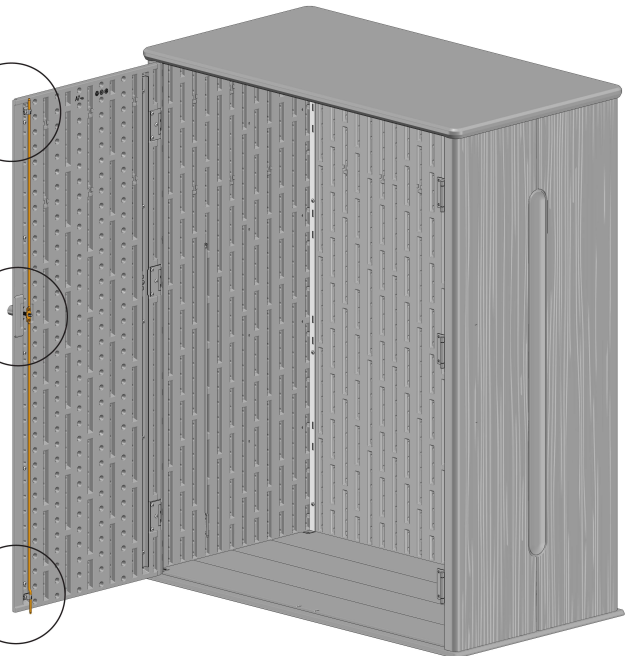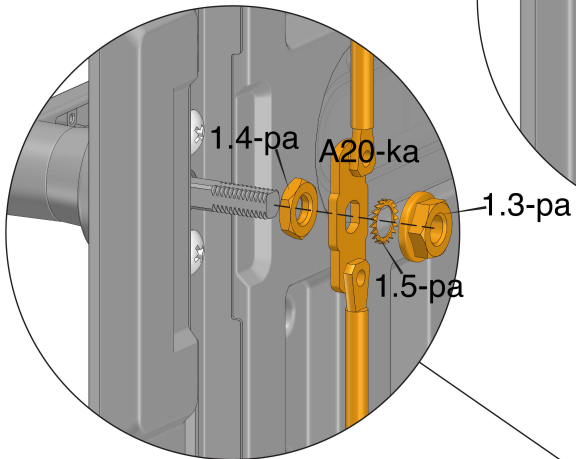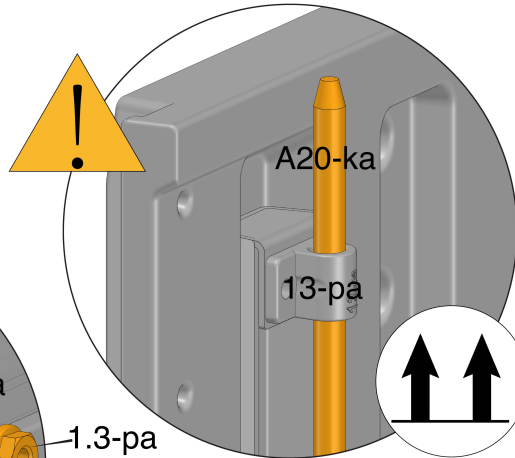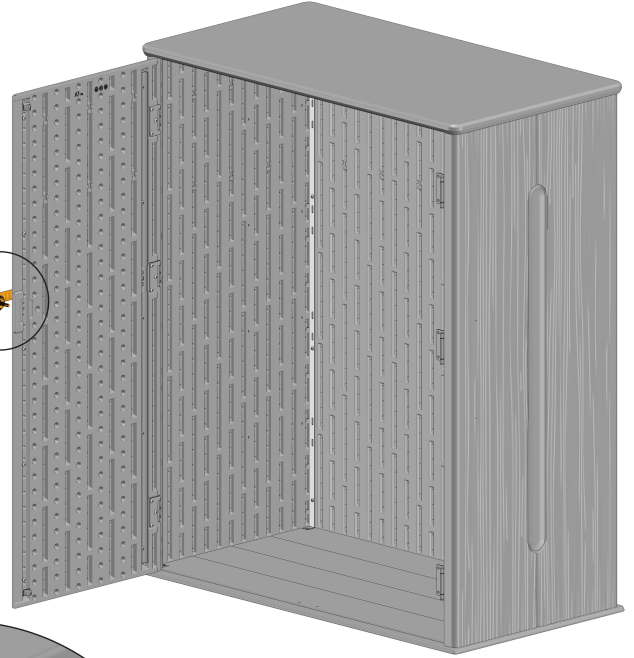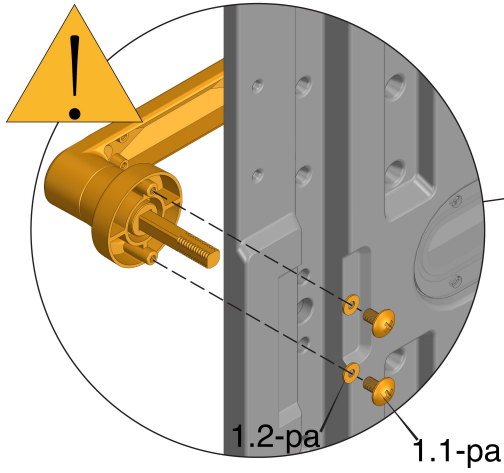




21

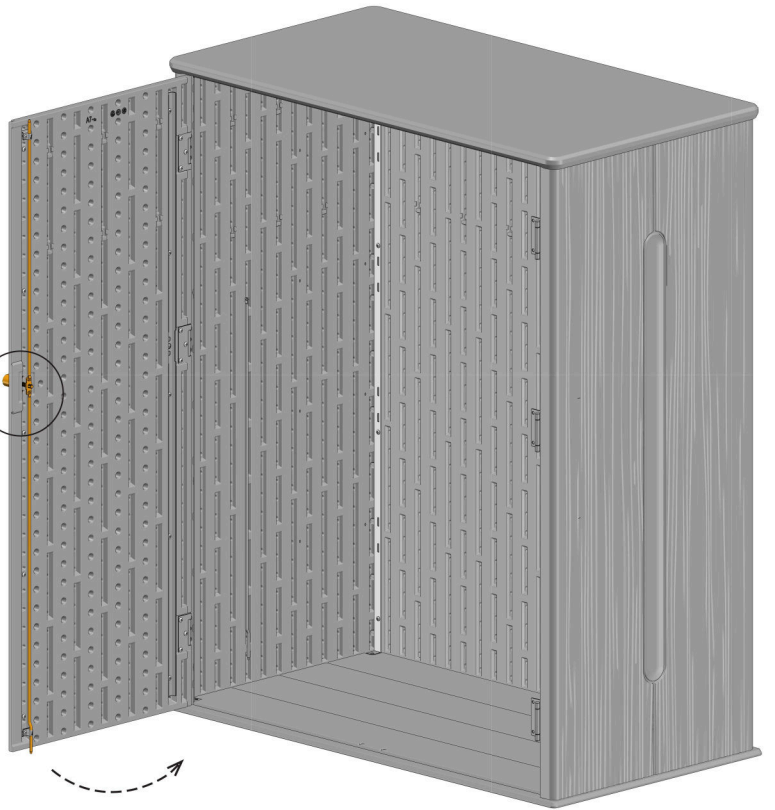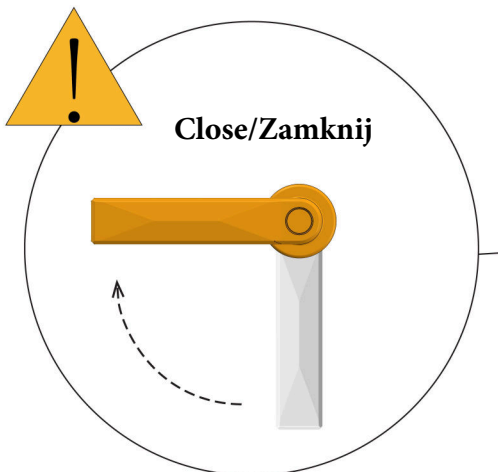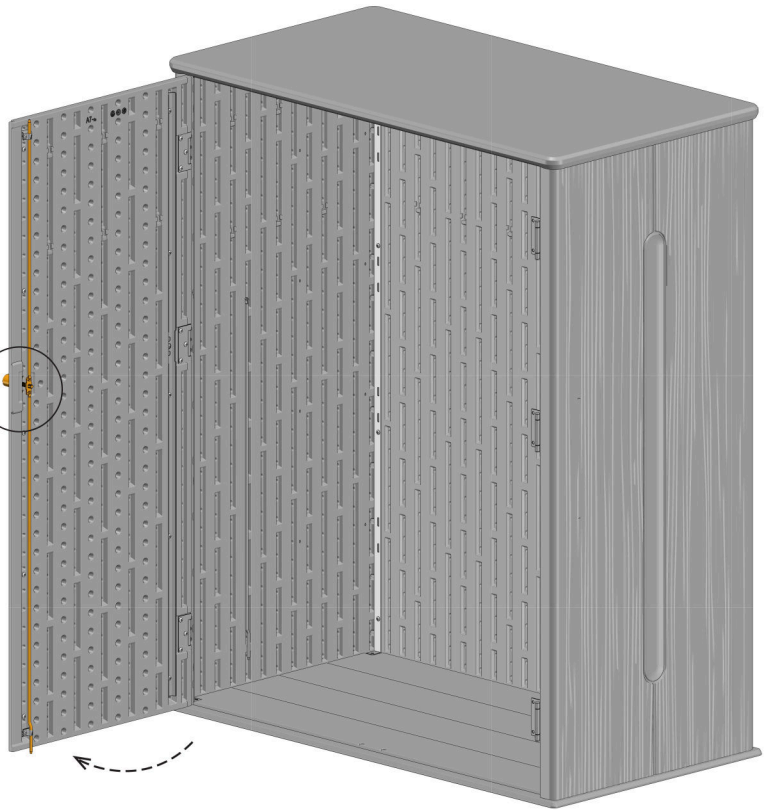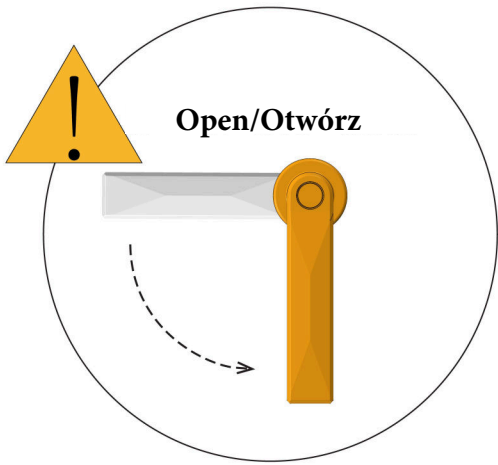

22




A32-ka x9

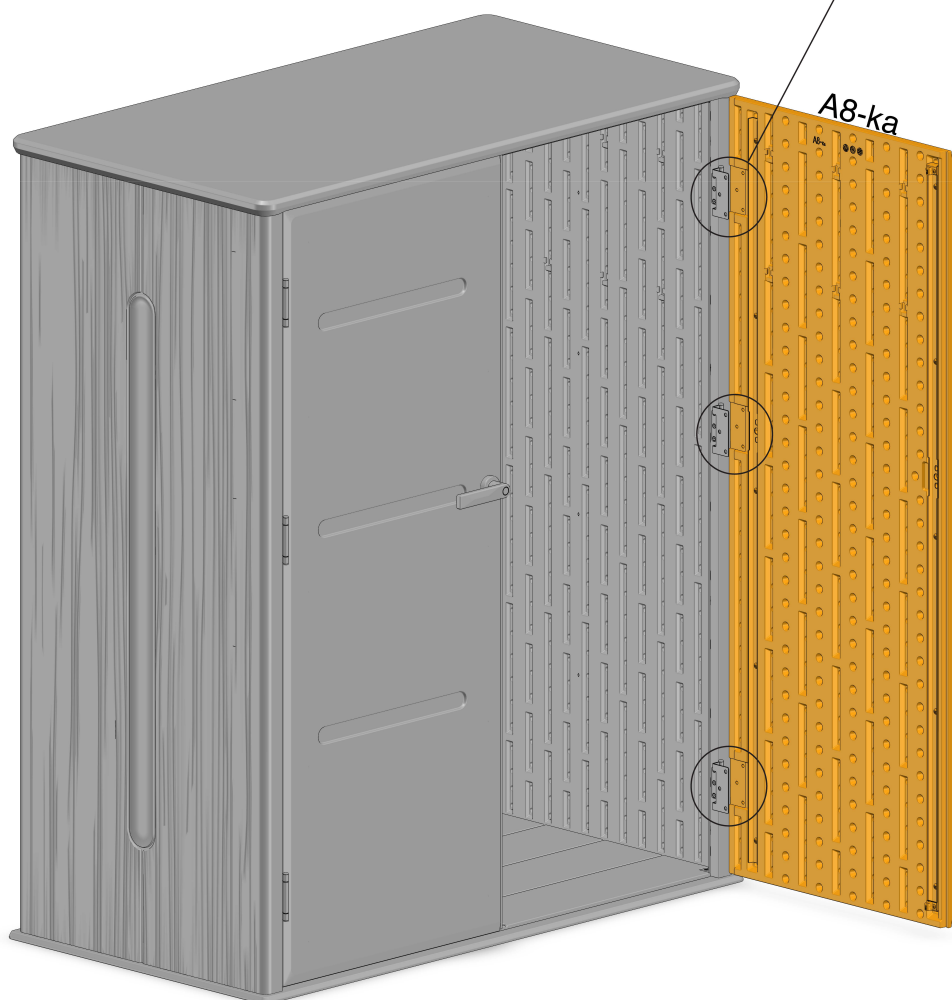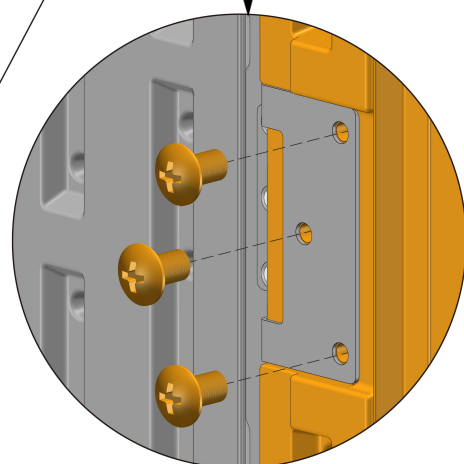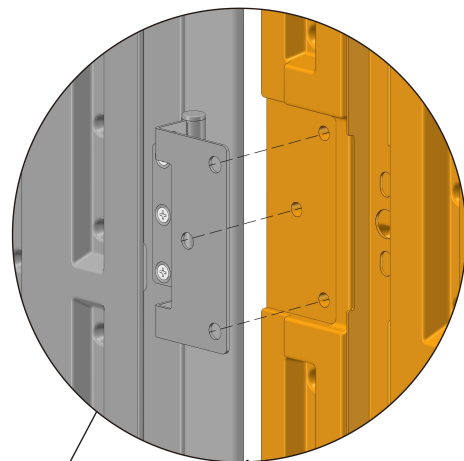

# 23




2-pa x1




1.1-pa x2



1.2-pa x2




1.3-pa x1









1.4-pa x1







1.5-pa x1

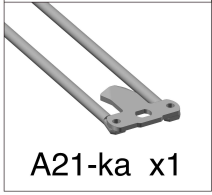

A21-ka x1

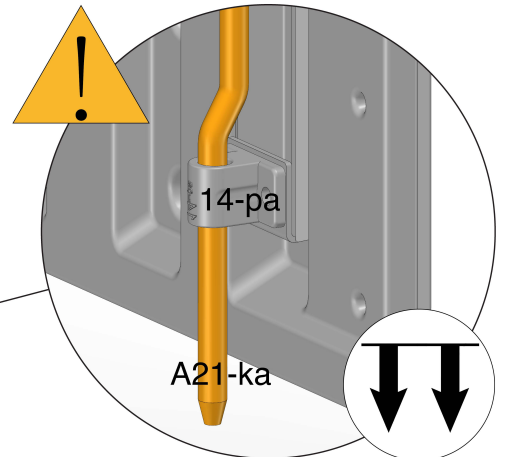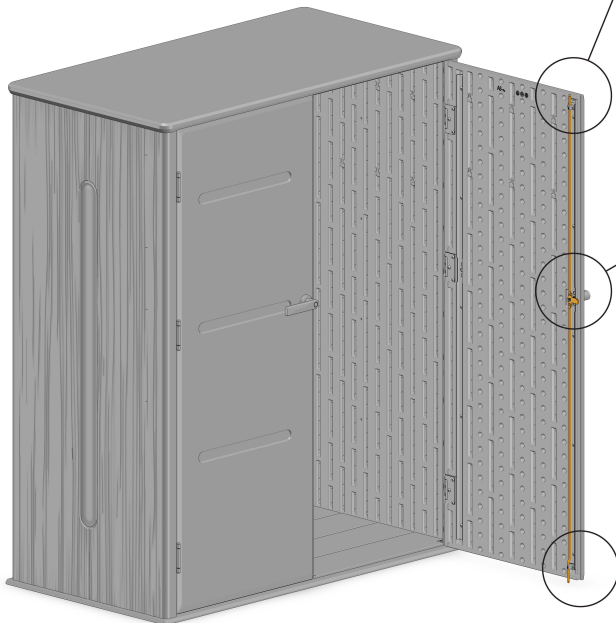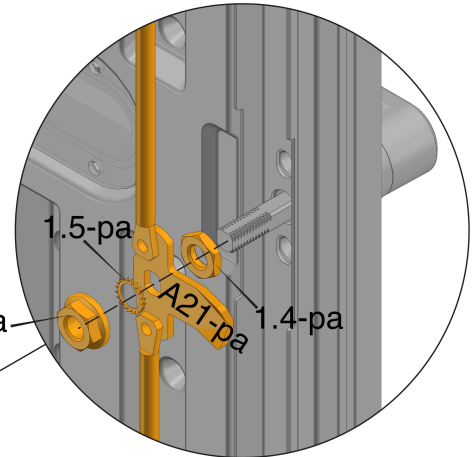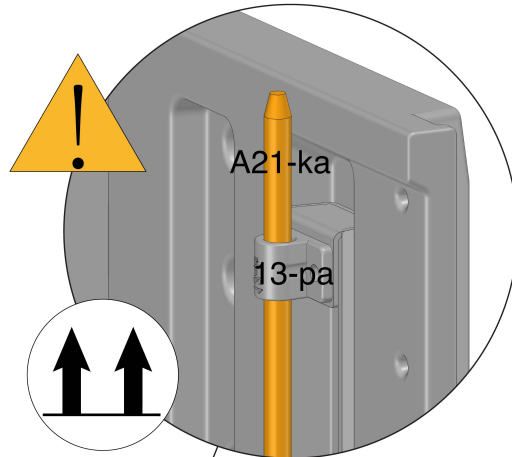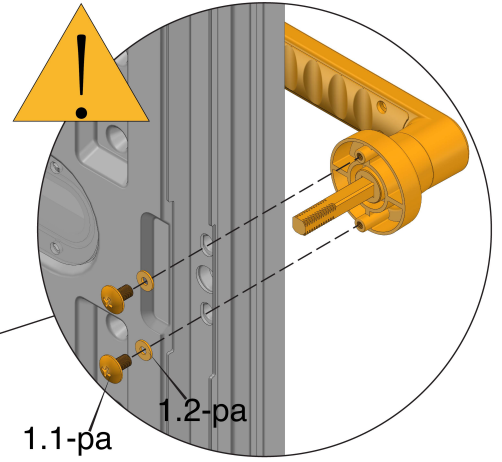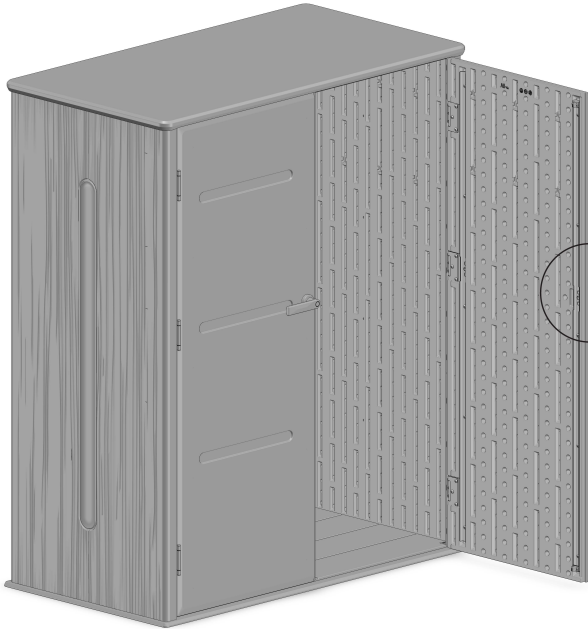




24

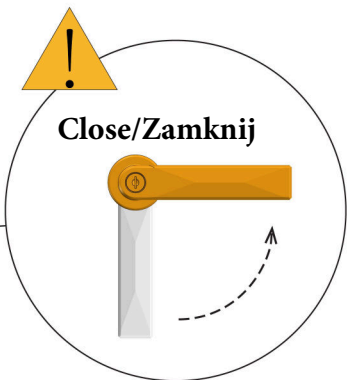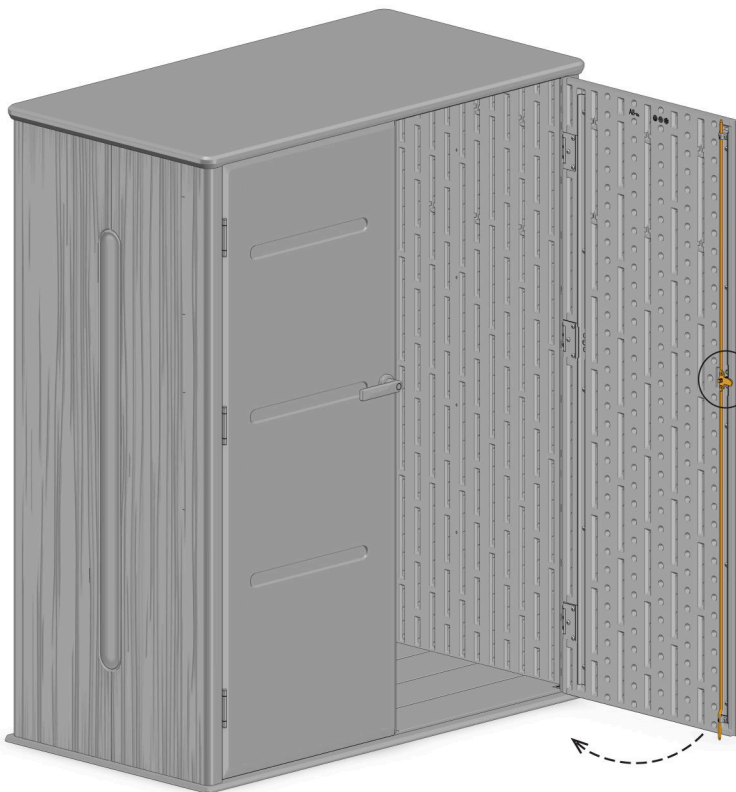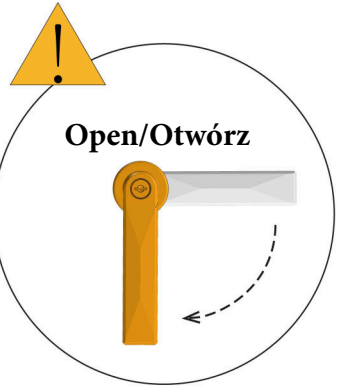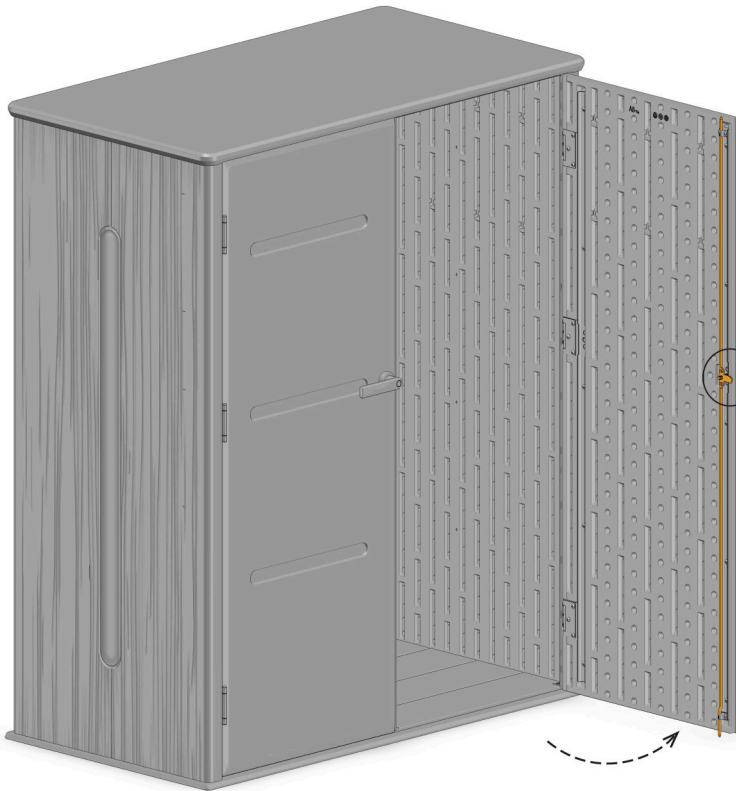

25



11-pa x3

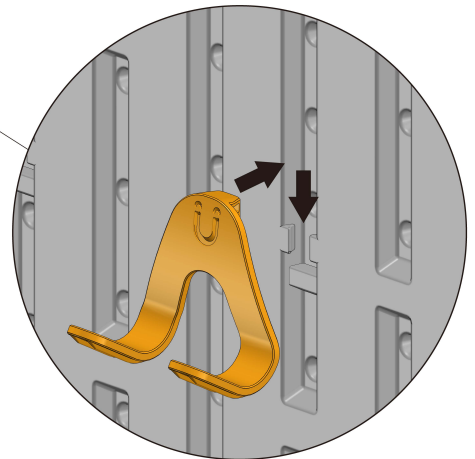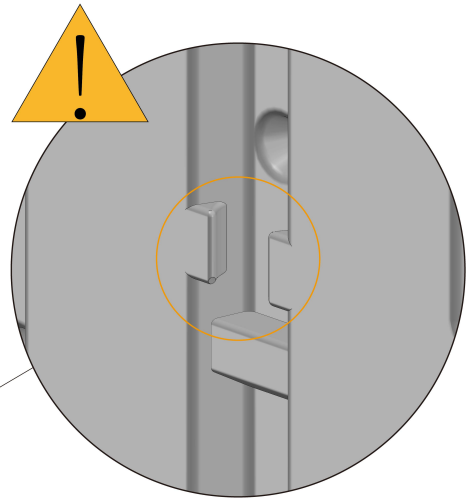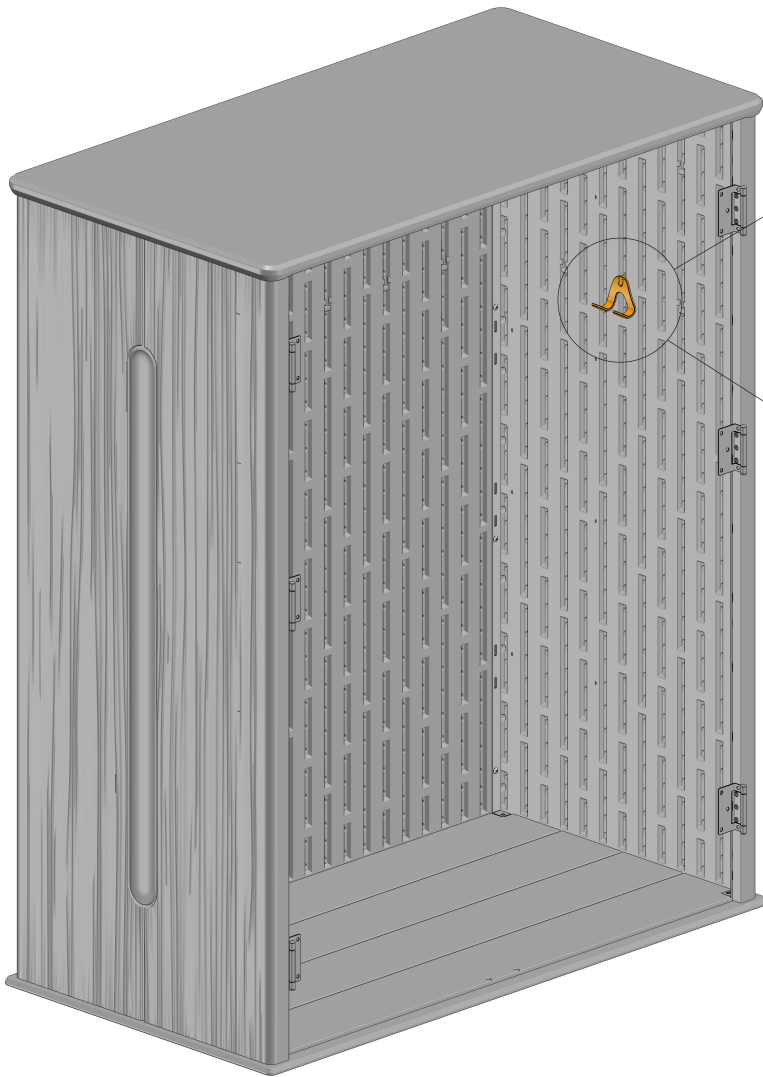


26





A38-ka x5


A38-ka

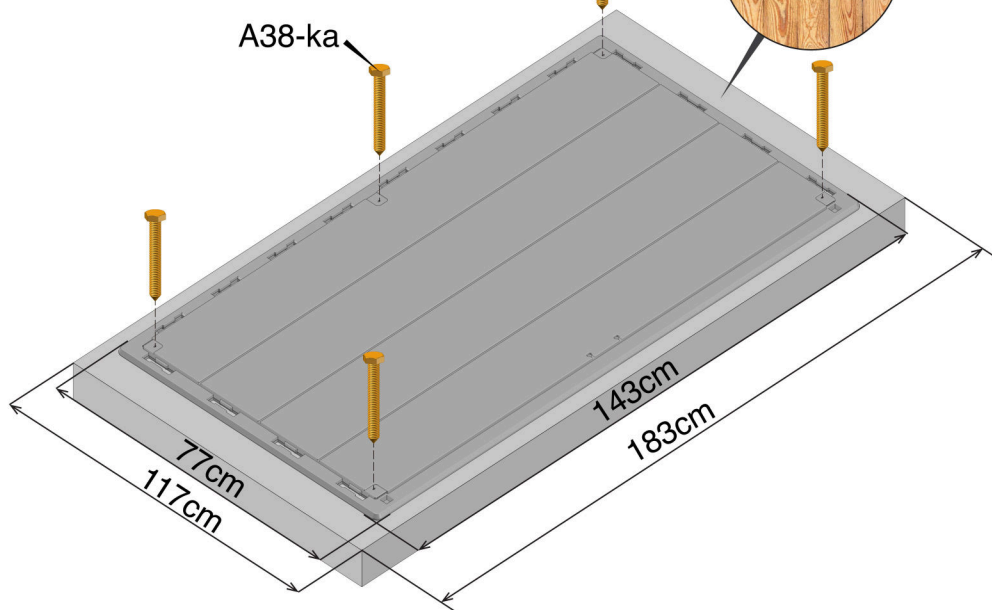

Montaż na drewnianej podstawie/  
Assembly to a wooden base

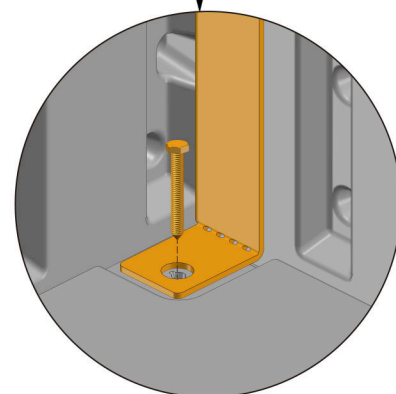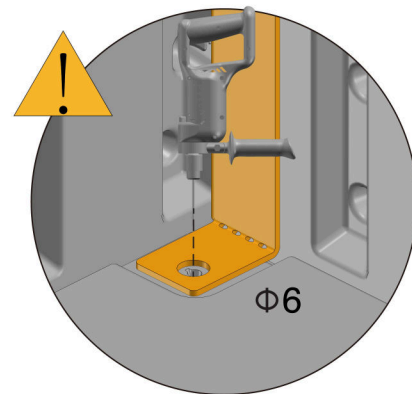

Montaż na betonowej podstawie/  
Assembly on a concrete base

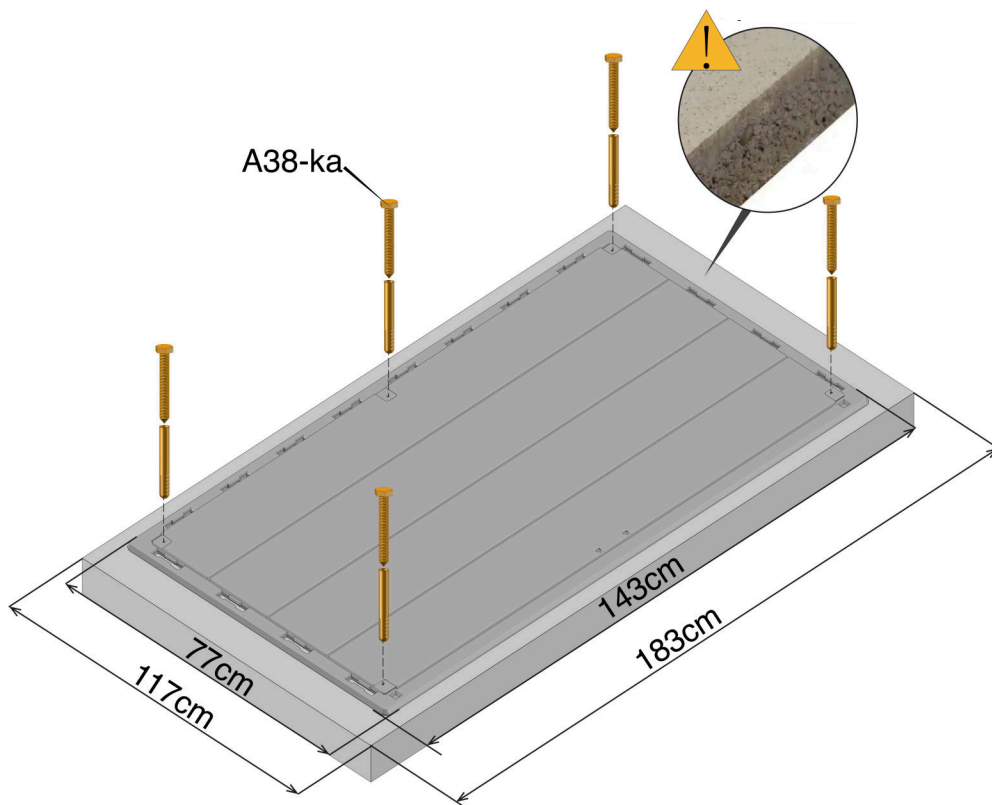

A38-ka

